



Safety Light Curtain Type 4

SF4D Series

# Instruction Manual



(MEMO)

Thank you very much for purchasing Panasonic Industry's Safety Light Curtain, **SF4D** series. Please read this Instruction Manual carefully and thoroughly for the correct and optimum use of this product.

Kindly keep this manual in a convenient place for quick reference.

This device is an optoelectronic safety sensor that protects persons from injury or accident which can be caused by dangerous parts of a machine.

This manual is for the following persons who have received appropriate training and have knowledge of optoelectronic safety sensor and safety.

- Those who are in charge of installation of this device.
- Those who incorporate this device into systems or design them.
- Those who install and/or connect this device
- Those who manage or perform operations at sites where this device is used.

#### Notes

- 1) No part of this description should be copied or reprinted in any form or by any means without prior permission in writing from the publisher.
- 2) The contents of this description are subject to change without notice for future improvement.
- 3) Every effort is made to produce this description. If you find any question, error, incorrect collating and/or missing page, please do not hesitate to contact our nearest local office to you: Panasonic Industry.
- 4) The original version of this description is written in Japanese and English.

# Contents

Chapter 1 Introduction .....	7
1-1 Safety Cautions (Always observe) .....	8
1-2 Applicable Standards / Regulations .....	11
1-3 Confirmation of Packed Objects .....	12
Chapter 2 Before Using The Device .....	13
2-1 Features .....	14
2-2 Parts of the Device .....	14
2-3 Protection Area .....	18
2-3-1 Sensing Area .....	18
2-3-2 Safety Distance .....	19
2-3-3 Effects of Reflective Surfaces .....	24
2-3-4 Preventing Mutual Interference .....	25
2-3-4-1 Interference Prevention Function .....	25
2-3-4-2 Series Connection .....	25
2-3-4-3 Parallel Connection (only line synchronization) .....	25
2-3-4-4 Preventing Mutual Interference by Device Placement .....	26
2-4 Mounting .....	28
2-4-1 Installing the Mounting Brackets .....	28
2-4-1-1 Using Beam Adjustment Mounting Bracket <b>MS-SFD-1</b> (Option) .....	29
2-4-1-2 Using Intermediate Supporting Bracket <b>MS-SFB-2</b> (Option) .....	31
2-4-1-3 Using No Dead-Space Beam Adjustment Mounting Bracket <b>MS-SFD-3-6</b> (Option) .....	33
2-4-1-4 Using <b>SF4B-G</b> Compatible Mounting Bracket <b>MS-SFD-4BG</b> (Option) .....	36
2-4-2 Installing the Bottom Cap Cables (Option) .....	38
2-4-3 Adding and Removing Sensors (Series Connection) .....	40
2-4-4 Mounting and Removing the Front Protective Cover .....	43
2-5 Wiring .....	45
2-5-1 Power Supply Unit .....	45
2-5-2 Input / Output Circuit Diagrams and Output Waveforms .....	46
2-5-3 Cable Wiring / Connections / Extension and Connector Pinouts .....	55
2-5-4 Basic Wiring .....	57
2-5-5 Wiring for Manual Reset (Interlock is Valid) (Example of Control Category 4 Wiring) .....	60
2-5-6 Wiring for Series Connection (Example of Control Category 4 Wiring) .....	62
2-5-7 Wiring Configuration for Valid External Device Monitor Function (Example of Control Category 4 Wiring) .....	64
2-5-8 Wiring Configuration for Valid Muting Function (Example of Control Category 4 Wiring) .....	66
2-5-9 Wiring for Function Changes Using Optional Communication Module <b>SF4D-TM1</b> (Example of Control Category 4 Wiring) .....	68
2-5-9-1 Wiring for Parallel Connection (Example of Control Category 4 Wiring) .....	68
2-5-9-2 Wiring for Mixed Series and Parallel Connection (Example of Control Category 4 Wiring) .....	72
2-6 Adjustment .....	76



2-6-1	Beam Adjustment	76
2-6-2	Operation Test	80
2-6-3	Indicator Operation	81
Chapter 3	Functions	99
3-1	Self-Diagnosis Function (Common for all cables)	100
3-2	Interlock Function (8-core cable, 12-core cable)	100
3-3	Lockout Release Function (Common for all cables)	102
3-4	Test Input Function (Common for all cables)	103
3-5	Auxiliary Output (Non-Safety Output) (8-core cable, 12-core cable)	104
3-6	External Device Monitor Function (8-core cable, 12-core cable)	105
3-7	Muting Function (12-core cable)	107
3-8	Override Function (12-core cable)	112
3-9	DIP Switch Settings	114
3-10	Application indicator function (12-core cable)	116
3-11	Functions That Can be Set Using the Optional Communication Module	
<b>SF4D-TM1</b>		119
3-11-1	Fixed Blanking Function	119
3-11-2	Floating Blanking Function	120
3-11-3	Interlock Function	121
3-11-4	External Device Monitor Function	121
3-11-5	Auxiliary Output	122
3-11-6	Application Indicator Function	123
3-11-7	Muting Function	124
3-11-8	Override Function	126
3-11-9	Protection Function	126
3-11-10	I/O Setting Function	126
Chapter 4	Maintenance	127
4-1	Daily Inspection	128
4-2	Periodic Inspection (Every Six Months)	129
4-3	Inspection after Maintenance	129
Chapter 5	Troubleshooting	131
5-1	Emitter Troubleshooting	132
5-2	Receiver Troubleshooting	135
Chapter 6	Specifications and Dimensions	141
6-1	Specifications	142
6-2	Options	148
6-3	Dimensions	154
6-3-1	Rear Mounting with <b>MS-SFD-1-5</b> and <b>MS-SFB-2</b>	154
6-3-2	Side Mounting with <b>MS-SFD-1-5</b> and <b>MS-SFB-2</b>	155
6-3-3	Rear Mounting with <b>MS-SFD-1-6</b> and <b>MS-SFB-2</b>	156
6-3-4	Side Mounting with <b>MS-SFD-1-6</b> and <b>MS-SFB-2</b>	157
6-3-5	Rear Mounting with <b>MS-SFD-1-8</b> and <b>MS-SFB-2</b>	158
6-3-6	Side Mounting with <b>MS-SFD-1-8</b> and <b>MS-SFB-2</b>	159
6-3-7	Mounting with <b>MS-SFD-3-6</b>	160
6-3-8	Rear Mounting with <b>MS-SFD-4BG</b> and <b>MS-SFB-2</b>	161
6-3-9	Side Mounting with <b>MS-SFD-4BG</b> and <b>MS-SFB-2</b>	162
6-3-10	Mounting Brackets	163

6-3-10-1	Beam Adjustment Mounting Bracket <b>MS-SFD-1-5</b> .....	163
6-3-10-2	Beam Adjustment Mounting Bracket <b>MS-SFD-1-6</b> .....	164
6-3-10-3	Beam Adjustment Mounting Bracket <b>MS-SFD-1-8</b> .....	165
6-3-10-4	Intermediate Support Bracket <b>MS-SFB-2</b> .....	166
6-3-10-5	No Dead-Space Beam Adjustment Mounting Bracket <b>MS-SFD-3-6</b> .....	167
6-3-10-6	<b>SF4B-G</b> Compatible Mounting Bracket <b>MS-SFD-4BG</b> ·	168
Chapter 7	Other Information.....	169
7-1	Glossary.....	170
7-2	CE Marking Declaration of Conformity.....	172
7-3	UKCA Marking Declaration of Conformity.....	173

# Chapter 1 Introduction

---

1-1 Safety Cautions .....	8
1-2 Applicable Standards / Regulations .....	11
1-3 Confirmation of Packed Objects .....	12



# Introduction

---

## 1-1 Safety Cautions Always observe

This section explains important rules that must be observed to prevent human injury and property damage.

- The hazards that may occur if the product is used incorrectly are described and classified by level of harm.

 <b>WARNING</b> Risk of death or serious injury.
 <b>CAUTION</b> Risk of minor injury or property damage.
<b>&lt;Reference&gt;</b> It gives useful information for better use of this device.

- Use this device as per its specifications. Do not modify this device since its functions and capabilities may not be maintained and it may malfunction.
- This device has been developed / produced for industrial use only.
- This device is suitable for indoor use only.
- Use of this device under the following conditions or environments is not presupposed. Please consult us if there is no other choice but to use this device in such an environment.
  - 1) Operating this device under conditions or environments not described in this manual.
  - 2) Using this device in the following fields: nuclear power control, railroad, aircraft, auto mobiles, combustion facilities, medical systems, aerospace development, etc.
- When this device is to be used for enforcing protection of a person from any danger occurring around an operating machine, the user should satisfy the regulations established by national or regional security committees (Occupational Safety and Health Administration: OSHA, the European Standardization Committee, etc.). Contact the relative organization(s) for details.
- In case of installing this device to a particular machine, follow the safety regulations in regard to appropriate usage, mounting (installation), operation and maintenance. The users including the installation operator are responsible for the introduction of this device.
- Note that this device may be damaged if it is subject to a strong shock (if it is dropped onto the floor, for example).
- Use this device by installing suitable protection equipment as a countermeasure for failure, damage, or malfunction of this device.
- Before using this device, check whether the device performs properly with the functions and capabilities as per the design specifications.
- In case of disposal, dispose this device as an industrial waste.
- Do not use this product with mobile equipment such as an automated guided vehicle (AGV).

 **WARNING****◆ Machine designer, installer, employer and operator**

- The machine designer, installer, employer and operator are solely responsible to ensure that all applicable legal requirements relating to the installation and the use in any application are satisfied and all instructions for installation and maintenance contained in the instruction manual are followed.
- Whether this device functions as intended to and systems including this device comply with safety regulations depends on the appropriateness of the application, installation, maintenance and operation. The machine designer, installer, employer and operator are solely responsible for these items.

**◆ Engineer**

- The engineer would be a person who is appropriately educated, has widespread knowledge and experience, and can solve various problems which may arise during work, such as a machine designer, installer or employer etc.

**◆ Operator**

- The operator should read this instruction manual thoroughly, understand its contents, and perform operations following the procedures described in this manual for the correct operation of this device.
- In case this device does not perform properly, the operator should report this to the person in charge and stop the machine operation immediately. The machine must not be operated until correct performance of this device has been confirmed.

**◆ Environment**

- Do not use a mobile phone or a radio phone near this device.
- If there exists a reflective surface in the place where this device is to be installed, make sure to install this device so that reflected light from the reflective surface does not enter into the receiver, or take countermeasures such as painting, masking, roughening, or changing the material of the reflective surface, etc. Failure to do so may cause the device not to detect, resulting in death or serious injury.
- Do not install this device in the following places:
  - 1) Areas exposed to intense interference (extraneous) light such as high-frequency fluorescent lamp (inverter type), rapid starter fluorescent lamp, stroboscopic lights or direct sunlight.
  - 2) Areas with high humidity where condensation is likely to occur
  - 3) Areas exposed to corrosive or explosive gases
  - 4) Areas exposed to vibration or shock of levels higher than that specified
  - 5) Areas exposed to contact with water
  - 6) Areas exposed to too much steam or dust

**◆ Installation**

- Always keep the correctly calculated safety distance between this device and the dangerous parts of the machine.
- Install extra protection structure around the machine so that the operator must pass through the sensing area of this device to reach the dangerous parts of the machine.
- Install this device such that some part of the operator's body always remains in the sensing area when operator is done with the dangerous parts of the machine.
- Do not install this device at a location where it can be affected by wall reflection.
- When installing multiple sets of this device, connect the sets and, if necessary, install some barriers such that mutual interference does not occur. For details, refer to "**2-3-4 Preventing Mutual Interference**".
- Do not use this device in a reflective configuration.
- The corresponding emitter and receiver must have the same serial No. and be correctly oriented.

### **WARNING**

#### ◆ **Machine in which this device is installed**

- When this device is used in “PSDI mode”, an appropriate control circuit must be configured between this device and the machine. For details, be sure to refer to the standards and regulations applicable in each region or country.
- In Japan, do not use this device as a safety device for press machine.
- Do not install this device with a machine whose operation cannot be stopped immediately in the middle of an operation cycle by an emergency stop equipment.
- This device starts the performance after 2 seconds from the power ON. Have the control system started to function with this timing.

#### ◆ **Wiring**

- Be sure to carry out the wiring in the power supply OFF condition.
- All electrical wiring should conform to the regional electrical regulations and laws. The wiring should be done by engineer(s) having the special electrical knowledge.
- Do not run the wires together with high-voltage lines or power lines or put them in the same raceway. This can cause malfunction due to induction.
- In case of extending the cable of the emitter or the receiver, each can be extended up to 70m by using the exclusive cable. Taking cable voltage drop into account, the cable length differs according to the source current / sink current of the control output (OSSD1 / 2). For details, refer to “**6-1 Specifications**”. Using a cable length outside the specifications may cause the device to malfunction, possibly resulting in death or serious injury.
- Do not apply stress such as excessive bending or pulling to a cable or the extracted part of a cable. In particular, when the temperature is low, cable materials harden, and when the temperature is high, the materials soften, and so take care that cables may break if they are subject to stress such as bending or pulling when the temperature is low or high.
- Do not control the device only at one control output (OSSD 1 / 2).
- In order that the output is not turned to ON due to earth fault of the control output (OSSD 1 / 2) wires, be sure to ground to 0V side (PNP output) / +V side (NPN output).
- When using this device in Korea with KCs-mark, be sure to ground to 0V side (PNP output).

#### ◆ **Maintenance**

- When replacement parts are required, always use only genuine supplied replacement parts. If substitute parts from another manufacturer are used, the device may not come to detect, result in death or serious injury.
- The periodical inspection of this device must be performed by an engineer having the special knowledge.
- After maintenance or adjustment, and before starting operation, test this device following the procedure specified in “**Chapter 4 Maintenance**”.
- Clean this device with a clean cloth. Do not use any volatile chemicals.

#### ◆ **Others**

- Never modify this device. Modification may cause the device not to detect objects, resulting in death or serious injury.
- Do not use this device to detect objects flying over the detection area.
- Do not use this device to detect transparent objects, translucent objects or objects smaller than the specified minimum object to be detected.

### 1-2 Applicable Standards / Regulations

This device complies with the following standards and regulations.

#### <EU Directives>

EU Machinery Directive 2006/42/EC  
EMC Directive 2014/30/EU

#### <British Legislation>

Machinery Regulations 2008/1597  
EMC Regulations 2016/1091

#### - Applicable Standards

EN ISO 13849-1: 2015(Category 4, PLe), EN 55011, EN 61000-6-2,  
IEC 61496-1/2(Type 4), IEC 61508-1 to 3 (SIL3)

#### <International Standards>

IEC 61496-1 (Type 4), IEC 61496-2 (Type 4),  
ISO 13849-1: 2015 (Category 4, PLe), IEC 61508-1 to 3 (SIL3)

#### <Japanese Industrial Standards (JIS)>

JIS B 9704-1/2 (Type 4), JIS B 9705-1 (Category 4), JIS C 0508-1 to 3 (SIL3)

#### <Standards in US / Canada>

ANSI/UL 61496-1/2 (Type 4)  
CAN/CSA C22.2 No.14, CAN/CSA E61496-1/2

#### <Regulations in US>

OSHA 1910.212, OSHA 1910.217 (C), ANSI B11.1 to B11.19, ANSI/RIA 15.06

For Machinery Directive, type certification a Notified Body TÜV SÜD has been acquired.  
For the standards in US / Canada, cTÜVus mark by a Notified Body TÜV SÜD has been acquired.

#### <Standards in China>

GB/T 4584

#### <Standards in Korea>

Performance Standard of Protective Devices for Industrial Robot

KCs Certified according to Korea Occupational Safety and Health Act

#### <Reference>

The conformance of this device to JIS, OSHA and ANSI is based on our self-evaluation.

#### **WARNING**

- Since this device has not received "Type Examination" in Article 44-2 of the Industrial Safety and Health Act, it cannot be used in Japan as the "Safety device for press machine and shearing machine" specified in Article 42 of the said law.
- Before using this device in a target region other than the above, be sure to confirm the standards / regulations applied in the relevant nation and region.

## Introduction

---

When using this device, configure a control system satisfying the following requirements to establish a system-wide safety.

### To use in Category 4 or 3

- **To prevent the loss of the safety function due to a single fault.**  
Be sure to use control output (OSSD 1 / 2) of two systems.
- **To prevent the loss of the safety function due to accumulation of faults.**  
Configure a control system that can monitor the control output (OSSD 1 / 2) and stop the device if discrepancy is detected.  
**<Example of inconsistency detection method>**  
(Example 1) Use of relay unit and controller for light curtain  
(Example 2) Monitoring of control outputs (OSSD 1 / 2) with the safety PLC.  
(Example 3) Monitoring of contact welding when safety relay is used

### To use in Category 2

When using the control output (OSSD) of only one system, connect auxiliary output to PLC, etc., to monitor the operation of this device. In this case, configure a control system that stops the device when discrepancy between control output (OSSD) and auxiliary output is detected. In place of the auxiliary output, control output (OSSD) of one more system is available.

## 1-3 Confirmation of Packed Objects

- Main body: emitter and receiver One for each
- Test Rod 1 piece
- **SF4D-F□: SF4B-TR14** (ø14 × 220mm), **SF4D-H□: SF4B-TR25** (ø25 × 220mm)
- Quick Instruction Manual (Japanese, English, Chinese, Korean) 1 pc. for each language
- General Information for Safety, Compliance, and Instructions 1 pc.



# Chapter 2 Before Using The Device

2-1	Features	14
2-2	Parts of the Device	14
2-3	Protection Area	18
2-3-1	Sensing Area	18
2-3-2	Safety Distance	19
2-3-3	Effects of Reflective Surfaces	24
2-3-4	Preventing Mutual Interference	25
2-3-4-1	Interference Prevention Function	25
2-3-4-2	Series Connection	25
2-3-4-3	Parallel Connection (only line synchronization)	25
2-3-4-4	Preventing Mutual Interference by Device Placement	26
2-4	Mounting	28
2-4-1	Installing the Mounting Brackets	28
2-4-1-1	Using Beam Adjustment Mounting Bracket <b>MS-SFD-1-□</b> (Option)	29
2-4-1-2	Using Intermediate Supporting Bracket <b>MS-SFB-2</b> (Option)	31
2-4-1-3	Using No Dead-Space Beam Adjustment Mounting Bracket <b>MS-SFD-3-6</b> (Option)	33
2-4-1-4	Using <b>SF4B-G</b> Compatible Mounting Bracket <b>MS-SFD-4BG</b> (Option)	36
2-4-2	Installing the Bottom Cap Cables (Option)	38
2-4-3	Adding and Removing Sensors (Series Connection)	40
2-4-4	Mounting and Removing the Front Protective Cover	43
2-5	Wiring	45
2-5-1	Power Supply Unit	45
2-5-2	Input / Output Circuit Diagrams and Output Waveforms	46
2-5-3	Cable Wiring / Connections / Extension and Connector Pinouts	55
2-5-4	Basic Wiring	57
2-5-5	Wiring for Manual Reset (Interlock is Valid)	60
2-5-6	Wiring for Series Connection	62
2-5-7	Wiring Configuration for Valid External Device Monitor Function	64
2-5-8	Wiring Configuration for Valid Muting Function	66
2-5-9	Wiring for Function Changes Using Optional Communication Module <b>SF4D-TM1</b>	68
2-5-9-1	Wiring for Parallel Connection	68
2-5-9-2	Wiring for Mixed Series and Parallel Connection	72
2-6	Adjustment	76
2-6-1	Beam Adjustment	76
2-6-2	Operation Test	80
2-6-3	Indicator Operation	81

## Before Using This Device


---

### 2-1 Features

This device is a light curtain with the following features:

- A special controller is not required.
- PNP or NPN can be selected for the control output (OSSD 1 / 2).
- Upper application indicator and lower application indicator make beam alignment easy.
- For details on options, refer to “6-2 Options”.

### 2-2 Parts of the Device

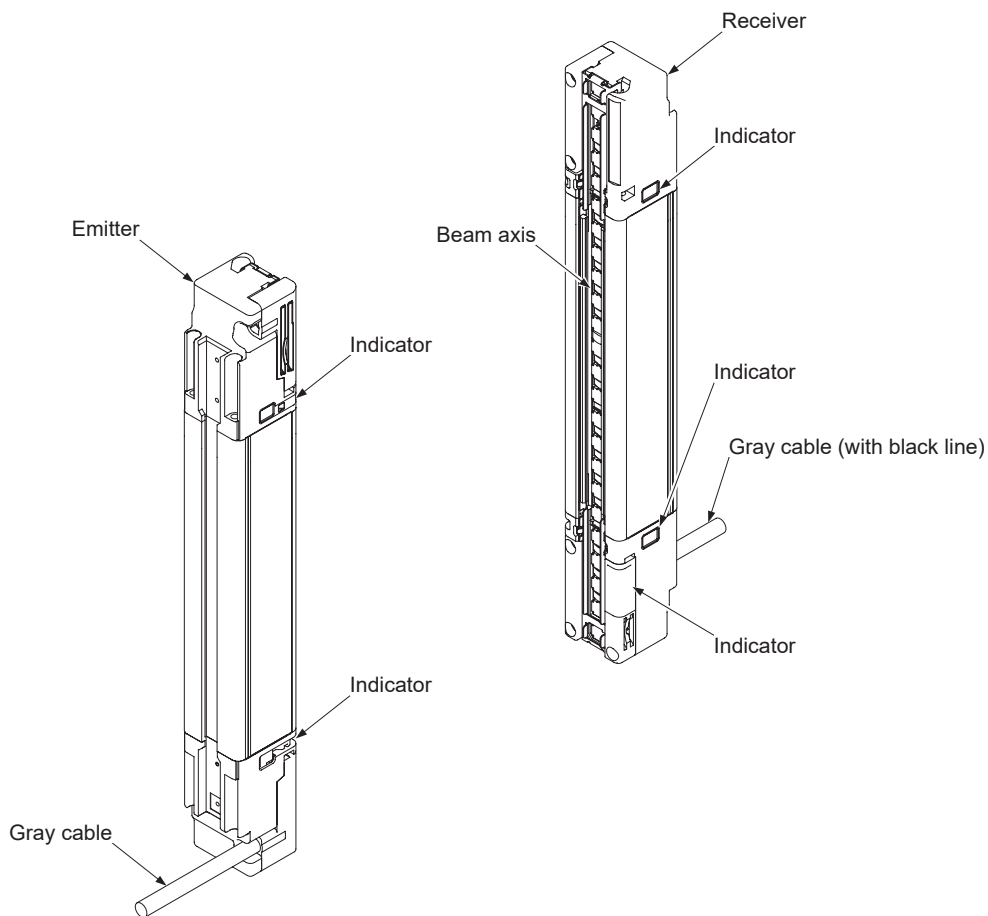

### <Emitter>

Emits light toward the facing receiver. The status of the emitter is indicated by the indicators.

### <Receiver>

Receives light from the facing emitter. The control output (OSSD 1 / 2) turns ON when light from the emitter is received on all beam channels, and turns OFF when light is blocked on one or more beam channels. [Except when the muting function or blanking function (Note) is used.] The status of the receiver is indicated by the indicators.


Note: Blanking function settings are configured using the communication module **SF4D-TM1** (option) and Configurator Light Curtain software.

Please purchase the **SF4D-TM1** communication module separately. The Configurator Light Curtain software can be downloaded free-of-charge from our website ([industry.panasonic.com/](http://industry.panasonic.com/)).

### <Beam channels>







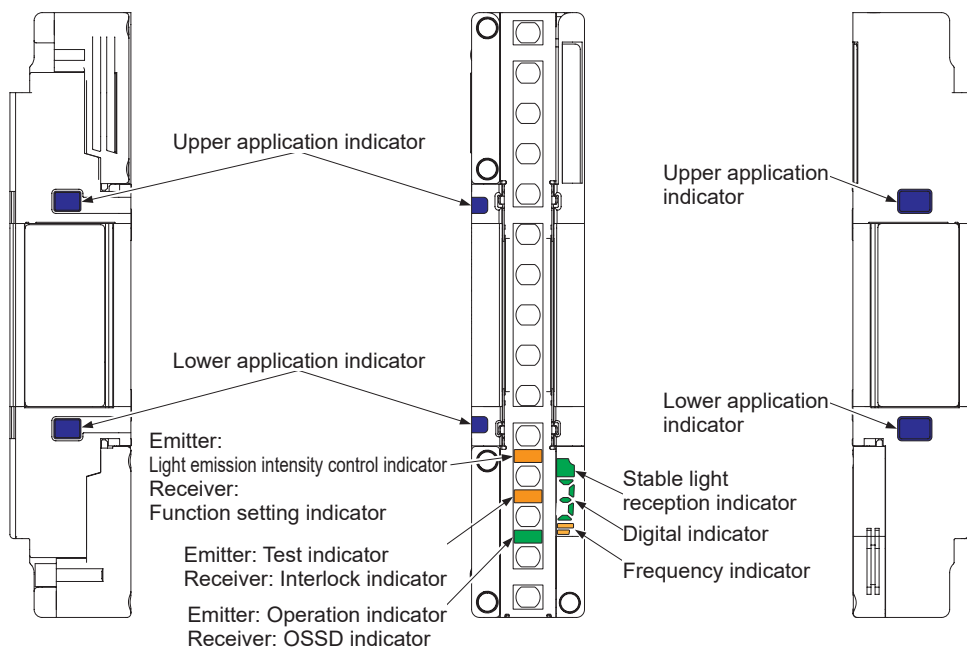













Light emitting elements are arranged in the emitter and light receiving elements are arranged in the receiver at intervals of 10mm (**SF4D-F□**), 20mm (**SF4D-H□**), or 40mm (**SF4D-A□**).

### <Indicators>









## Part Description






### ● Emitter/receiver common

Name		Function	
		Line synchronization	Optical synchronization
Upper application indicator (Blue / Red / Green / Orange) (Note 1)		<When beam axis alignment mode is set> Control output (OSSD 1 / 2) ON: Lights blue “  ” When top end beam channel receives light: Lights red “  ” When top end beam channel is blocked: Turns OFF <When application mode is set> When application indicator input 1 is ON: Lights green “  ” When application indicator input 2 is ON: Lights red “  ” When application indicator input 1 / 2 are ON: Lights orange “  ” When application indicator input 1 / 2 are OFF: Turns OFF	
Lower application indicator (Blue / Red / Green / Orange) (Note 1)		<When beam axis alignment mode is set> Control output (OSSD 1 / 2) ON: Lights blue “  ” When bottom end beam channel receives light: Lights red “  ” When bottom end beam channel is blocked: Turns OFF <When application mode is set> When application indicator input 1 is ON: Lights green “  ” When application indicator input 2 is ON: Lights red “  ” When application indicator input 1 / 2 are ON: Lights orange “  ” When application indicator input 1 / 2 are OFF: Turns OFF	
Stable light reception indicator (Green / Orange)		When light reception is stable: Lights green “  ” When light reception is unstable: Lights orange “  ” When light is blocked: Turns OFF	
Digital indicator (Green / Yellow)	Received light intensity (Green)	Light intensity / Level 3: Lights green “  ” Light intensity / Level 2: Lights green “  ” Light intensity / Level 1: Lights green “  ” When light is blocked: Turns OFF	
	Error (Yellow)	Normal operation: Turns OFF, Error: Yellow number blinks or lights “  ”	
	Polarity (Yellow)	When PNP output is set: Lights yellow “  ” (only during startup) When NPN output is set: Lights yellow “  ” (only during startup)	
Frequency indicator (Orange)		–	When frequency 1 is set: Lights orange “  ” When frequency 2 is set: Lights orange “  ”

### ● Emitter

Name		Function	
		Line synchronization	Optical synchronization
Light emission intensity control indicator (Orange) [CTRL]		Short mode: Turns OFF, Long mode: Lights orange “  ”	
Test indicator (Orange) [TEST]		During test: Lights orange “  ”, Normal operation: Turns OFF	
Operation indicator (Red / Green) [OP]		Control output (OSSD 1 / 2) OFF: Lights red “  ” Control output (OSSD 1 / 2) ON: Lights green “  ”	Normal operation: Lights green “  ” Error: Lights red “  ”

### ● Receiver

Name		Function	
		Line synchronization	Optical synchronization
Function setting indicator (Orange) [FUNC]		Communication module connected: Blinks orange “  ” Blanking function or parallel connection used: Lights orange “  ” (Note 2)	
Interlock indicator (Yellow) [LOCK]		Interlock activated: Lights yellow “  ”, All other times: Turns OFF	
OSSD indicator (Red / Green) [OSSD]		Control output (OSSD 1 / 2) OFF: Lights red “  ” Control output (OSSD 1 / 2) ON: Lights green “  ”	


Notes: 1) In the case of optical synchronization, the upper application indicator and lower application indicator on the emitter remain OFF.

2) For details on the blanking function and parallel connection, refer to “3-11 Functions That Can be Set Using the Optional Communication Module SF4D-TM1”.

3) Names in brackets [ ] are names that are indicated on the device.

### ● How to check product information

Product information is shown on the plate on the side of the product.

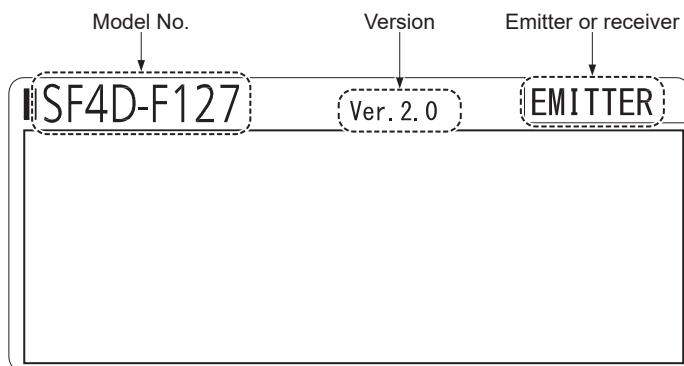

		Version		
		Ver. 1.11	Ver. 2.0	Ver. 3.0
Configurator Light Curtain software	Checking basic information	○	○	○
	Monitoring operations	○	○	○
+ Communication module <b>SF4D-TM1</b> (option)	Checking histories such as errors	-	○	○
	Collating settings	-	○	○
	Reading and writing settings	-	○	○
Communication module <b>SF4D-TM1</b> (option)	Copy function	-	○	○
	Saved data initialization function	-	○	○

○: Available, -: Unavailable

### ● About Product Version 3.0

If the Ver. 3.0 product is connected in series with the Ver. 2.0 product, all products will operate as Ver. 2.0 products.

If the communication module **SF4D-TM1** and the Configurator Light Curtain software are used together with this product, version restrictions of each product will apply. When using the Ver. 3.0 product, use the communication module **SF4D-TM1** Ver.2.0 or later and the Configurator Light Curtain software Ver. 1.4.0 or later.

Configuration software		Communication module		Light curtain <b>SF4D</b> (Product version)	
				Ver.2.0	Ver.3.0
Configurator Light Curtain	Ver.1.3.0	<b>SF4D-TM1</b>	Ver.1.0	○	-
	Ver.1.4.0 or later		Ver.2.0 or later	○	○

Note: You can download the Configurator Light Curtain software from our website (<https://industry.panasonic.com/>).

If the communication unit **SFD-WL3** is used with this product, version restrictions of each product will apply. When using the Ver. 3.0 product, use the communication unit **SFD-WL3** Ver.2.0 or later (F/W version).

IO-Link communication unit for the <b>SF4D</b> series		Light curtain <b>SF4D</b> (Product version)	
		Ver.2.0	Ver.3.0
<b>SFD-WL3</b> (optional)	Ver.1.0	○	-
	Ver.2.0 or later	○	○

# Protection Area

## 2-3 Protection Area

### 2-3-1 Sensing Area

#### ⚠ WARNING


- Be sure to install a protection structure around the machine so that the operator must pass through the sensing area of the device to reach dangerous parts of the machine. Ensure that part or all of the operator's body remains in the sensing area when the operator works with dangerous parts of the machine. Risk of death or serious injury if the operator's body is not detected.
- Do not use in a reflective type or recursive reflective type setup.
- Multiple receivers (emitters) cannot be connected for use with a single emitter (receiver).

The sensing area is the zone formed by the sensing height of the device and the sensing range between the emitter and the receiver.


The sensing height of the device is determined by the number of beam channels.

The sensing range of the SF4D-F□ is 0.2 to 7m (0.8 to 12m in long mode). The sensing range of the SF4D-H□ and SF4D-A□ is 0.2 to 9m (0.8 to 15m in long mode).



If used at less than 0.2m (less than 0.8m in long mode), optical system effects may cause malfunctioning.

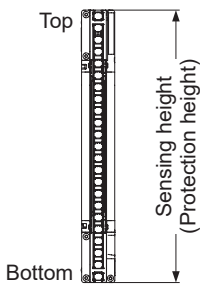



[ The sensing height (protection height) is the length from the top to the bottom of the device. ]

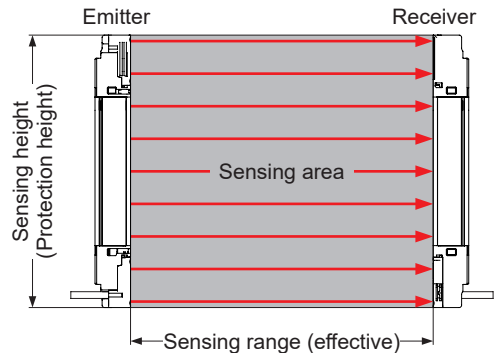

#### <Example of correct sensing area setup>

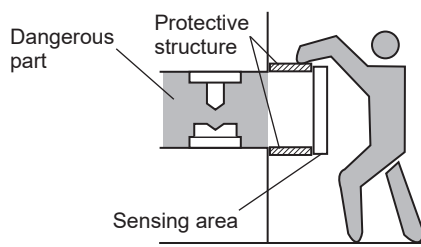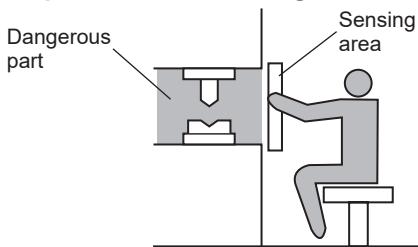

#### <Example of incorrect sensing area setup>

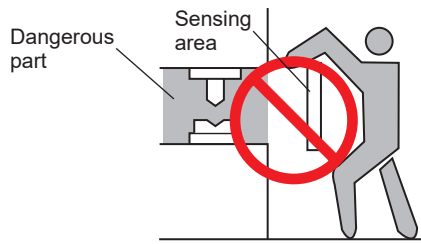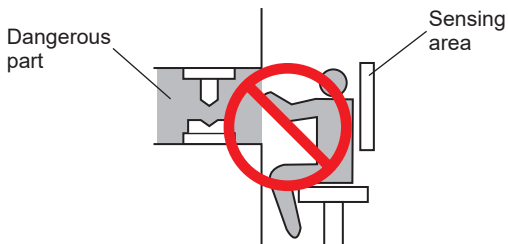

2-3-2 Safety Distance

**⚠ WARNING**

- Calculate the safety distance correctly, and install so that the distance between the sensing area of the device and dangerous parts of the machine is equal to or greater than the safety distance. If the safety distance is miscalculated or a sufficient distance is not established, the machine will not be able to stop before a human body or object arrives at a dangerous part, creating a risk of death or serious injury.
- Before designing and installing the system, refer to the applicable standards of the region where the device is to be used.  
The equations on the following pages are to be used only when the direction of intrusion is perpendicular to the sensing area. If the direction of intrusion is not perpendicular to the sensing area, be sure to check all applicable standards (regional standards, specifications of the machine, etc.) for calculation details.
- The maximum response time of the machine is from the point that the machine receives the halt signal from the device to the point that the dangerous parts of the machine stop. The maximum response time of the machine should be measured using the actual machine to be used.


**<Size of minimum sensing object when floating blanking function is used>**

	Floating blanking function					
	Not set	Setting (Note)				
		1 beam channel	2 beam channels	3 beam channels	4 beam channels	5 beam channels
<b>SF4D-F</b> □ (Beam pitch 10mm type)	ø14mm	ø24mm	ø34mm	ø44mm	ø54mm	ø64mm
<b>SF4D-H</b> □ (Beam pitch 20mm type)	ø25mm	ø45mm	ø65mm	ø85mm	ø105mm	ø125mm
<b>SF4D-A</b> □ (Beam pitch 40mm type)	ø45mm	ø85mm	ø125mm	ø165mm	ø205mm	ø245mm

Note: For details on the floating blanking function, refer to “3-11 Functions That Can be Set Using the Optional Communication Module SF4D-TM1”.

The safety distance is the minimum distance that must be maintained between the device and the dangerous parts of the machine so that the machine can be stopped before a human body or object reaches a dangerous part.

The safety distance is calculated using the equations given on the following pages when a person moves perpendicularly (normal intrusion) into the sensing area of the device.

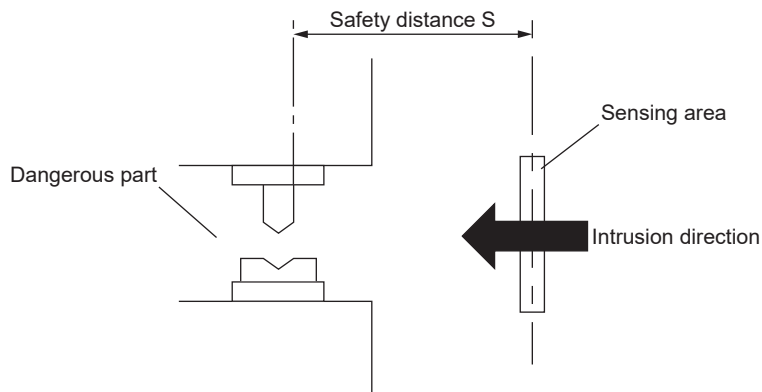

## Protection Area

---

[For use in Europe (EU) (based on EN ISO 13855)] (Also applies to JIS B 9715)  
(For intrusion perpendicular to the sensing area)

<When the minimum sensing object is  $\varnothing 40\text{mm}$  or less>

• Equation 1       $S = K \times T + C$

- S: Safety distance (mm)  
Minimum required distance between the sensing area plane and the dangerous part of the machine
- K: Intrusion speed of person or object (mm/sec.)  
Normally 2,000 (mm/sec.) is used.
- T: Response time of overall system  
 $T = T_m + T_{SF4D}$   
 $T_m$ : Maximum response time of machine (sec.)  
 $T_{SF4D}$ : Response time of device (sec.)
- C: Additional distance calculated from the minimum sensing object of the device (mm)  
The value of C cannot be less than 0.  
 $C = 8 \times (d - 14)$   
d: Diameter of minimum sensing object (mm)

<Reference>

- When calculating the safety distance S, the following five cases must be considered.  
First calculate using  $K = 2,000$  (mm/sec.) in the above equation. Consider these three cases for the result: 1)  $S < 100$ , 2)  $100 \leq S \leq 500$ , and 3)  $S > 500$ . If the result of the calculation is 3)  $S > 500$ , calculate again using  $K = 1,600$  (mm/sec.). Consider these two cases for the result: 4)  $S \leq 500$  and 5)  $S > 500$ .  
For details, refer to “**Calculation example 1: For use in Europe**”.
- When the device is used in “PSDI Mode”, an appropriate safety distance S must be calculated.  
For details, refer to the standards and regulations that apply in your region or country.

<When the minimum sensing object is greater than  $\varnothing 40\text{mm}$ >

• Equation 1       $S = K \times T + C$

- S: Safety distance (mm)  
Minimum required distance between the sensing area plane and the nearest dangerous part of the machine
- K: Intrusion speed of person or object (mm/sec.)  
Normally 1,600 (mm/sec.) is used.
- T: Overall response time of system  
 $T = T_m + T_{SF4D}$   
 $T_m$ : Maximum response time of machine (sec.)  
 $T_{SF4D}$ : Response time of device (sec.)
- C: Additional distance calculated from the minimum sensing object of the device (mm)  
 $C = 850$  (mm)



### <Calculation examples>

#### ● Calculation example 1: For use in Europe

(OFF response time: 6ms or less, diameter of minimum sensing object: 25mm)

First, calculate with  $K = 2,000$ .

$$\begin{aligned} S &= K \times T + C \\ &= K \times (T_m + T_{SF4D}) + 8 \times (d - 14) \\ &= 2,000 \times (T_m + 0.006) + 8 \times (25 - 14) \\ &= 2,000 \times T_m + 2,000 \times 0.006 + 8 \times 11 \\ &= 2,000 \times T_m + 12 + 88 \\ &= 2,000 \times T_m + 100 \end{aligned}$$

If the result is:

- 1)  $S < 100$  (mm)  
Take 100 (mm) as the safety distance  $S$ .
- 2)  $100 \leq S \leq 500$ (mm)  
Take  $2,000 \times T_m + 116$  (mm) as the safety distance  $S$ .
- 3)  $S > 500$ (mm)  
$$\begin{aligned} S &= K' \times (T_m + T_{SF4D}) + 8 \times (d - 14) \\ &= 1,600 \times (T_m + 0.006) + 8 \times (25 - 14) \\ &= 1,600 \times T_m + 1,600 \times 0.006 + 8 \times 11 \\ &= 1,600 \times T_m + 9.6 + 88 \\ &= 1,600 \times T_m + 97.6 \end{aligned}$$

Calculate again using the above.

If the result is:

- 4)  $S \leq 500$  (mm)  
Use 500 (mm) as the safety distance  $S$ .
- 5)  $S > 500$ (mm)  
Use  $1,600 \times T_m + 97.6$  (mm) as the safety distance  $S$ .

If the device is installed in a system with a maximum machine halting time of 0.1 (sec.)

$$\begin{aligned} S &= 2,000 \times T_m + 100 \\ &= 2,000 \times 0.1 + 100 \\ &= 300 \end{aligned}$$

This meets condition 2) above, and thus the safety distance is 300 (mm).

If the device is installed in a system with a maximum machine halting time of 0.4 (sec.)

$$\begin{aligned} S &= 2,000 \times T_m + 100 \\ &= 2,000 \times 0.4 + 100 \\ &= 900 \end{aligned}$$

This meets condition 3) above, and thus

$$\begin{aligned} S &= 1,600 \times T_m + 97.6 \\ &= 1,600 \times 0.4 + 97.6 \\ &= 737.6 \end{aligned}$$

This meets condition 5) above, and thus the safety distance is 737.6 (mm).

## Protection Area

---

[For use in the USA (per ANSI/RIA 15.06)]

• **Equation 2**       $D_s = K \times T + D_{pf}$

$D_s$ : Safety distance (mm)

Minimum required distance between the sensing area plane and the nearest dangerous part of the machine

$K$ : Intrusion speed {OSHA-recommended value is 63 (inch/sec.) [ $\approx$  1,600 (mm/sec.)]}

When determining  $K$ , consider all possible factors including the physical ability of operators.

$T$ : Maximum response time (sec.) for dangerous operation of the machine to halt or for dangerous operation in a machine cycle to be completed.

When determining  $T$ , consider all possible factors.

For details, refer to "ANSI B11.19".

$D_{pf}$ : Additional distance calculated from the minimum sensing object of the device (mm)

**SF4D-F** :  $D_{pf} = 23.8\text{mm}$

**SF4D-H** :  $D_{pf} = 61.2\text{mm}$

**SF4D-A** :  $D_{pf} = 129.2\text{mm}$

$D_{pf} = 3.4 \times (d - 0.275)$  (inches)

$\approx 3.4 \times (d - 7)$  (mm)

$d$ : Diameter of minimum sensing object 0.552 (inches)  $\approx$  14 (mm) **SF4D-F**

Diameter of minimum sensing object 0.985 (inches)  $\approx$  25 (mm) **SF4D-H**

Diameter of minimum sensing object 1.772 (inches)  $\approx$  45 (mm) **SF4D-A**

**<Reference>**

- When the floating blanking function is used, the minimum sensing object becomes larger. According to ANSI B11.19,  $D_{pf} = 900\text{mm}$  (3ft) when  $d > 63.5\text{mm}$  (2.5 inches).
- Calculated using 1 (inch) = 25.4 (mm).

**[For use in China (GB/T 4584)]**

**For a press machine with a slide that can be stopped at any position, calculate the safety distance S using Equation 1.**

• **Equation example 1       $S = K \times T + C$**

- S: Safety distance (mm)  
Minimum required distance between the sensing area plane and the nearest dangerous part of the machine
- K: Intrusion speed of person or object (mm/sec.)  
For intrusion horizontal to the sensing area, calculate using 1,600mm/sec.  
For intrusion vertical to the sensing area, if the safety distance is  $S \leq 500\text{mm}$ , calculate using 2,000mm/sec. If the safety distance is  $S > 500\text{mm}$ , calculate using 1,600mm/sec.
- T: Overall response time of system (sec.)  
 $T = T_m + T_{SF4D}$   
T<sub>m</sub>: Maximum response time of machine (sec.)  
T<sub>SF4D</sub>: Response time of device (sec.)
- C: Distance from intrusion of hand into sensing area until detection by this product (mm).  
On a press machine, if the interlock (start-restart interlock) function of the device or a safety controller is not used, calculate using the table below.

Minimum sensing object	Additional distance C	Stroke start by the device or a safety controller
≤ 14mm	0mm	Possible
> 14 to 20mm	80mm	
> 20 to 30mm	130mm	
> 30 to 40mm	240mm	Not possible
> 40mm	850mm	

On a press machine, if the interlock (start-restart interlock) function of the device or a safety controller is used, calculate with  $C = 0$ .

**For a press machine with a slide that cannot be stopped at any position, calculate the safety distance S using Equation 2.**

• **Equation example 2       $S = K \times T_s + C$**

- S: Safety distance (mm)  
Minimum required distance between the sensing area plane and the nearest dangerous part of the machine
- K: Intrusion speed of person or object (mm/sec.)  
For intrusion horizontal to the sensing area, calculate using 1,600mm/sec.  
For intrusion vertical to the sensing area, if the safety distance is  $S \leq 500\text{mm}$ , calculate using 2,000mm/sec. If the safety distance is  $S > 500\text{mm}$ , calculate using 1,600mm/sec.
- T<sub>s</sub>: Time from insertion of hand into this product until the slide reaches the low dead point (sec)  
 $T_s = [(1 / 2) + (1 / N)] \times T_n$   
N: Number of clutch grooves  
T<sub>n</sub>: Time required for one revolution of crankshaft (sec.)
- C: Distance from intrusion of hand into sensing area until detection by this product (mm).  
On a press machine, if the interlock (start-restart interlock) function of the device or a safety controller is not used, calculate using the table below.

Minimum sensing object	Additional distance C	Stroke start by the device or a safety controller
≤ 14mm	0mm	Possible
> 14 to 20mm	80mm	
> 20 to 30mm	130mm	
> 30 to 40mm	240mm	Not possible
> 40mm	850mm	

On a press machine, if the interlock (start-restart interlock) function of the device or a safety controller is used, calculate with  $C = 0$ .


## Protection Area

### 2-3-3 Effects of Reflective Surfaces

#### ⚠ WARNING


If there are reflective surfaces where the device is to be installed, install so that light reflected from the reflective surfaces does not enter the receiver. Or prevent reflection from the surface by coating or masking the surface, roughening the surface, changing materials, or otherwise. Risk of death or serious injury if the device becomes incapable of detection because measures are not taken to prevent reflection.

Install the device at a distance greater than or equal to the distance A (m) indicated below from a metal wall, floor, ceiling, or sensing object, or a cover, panel, or glass with a reflective surface (surface with high reflectivity).

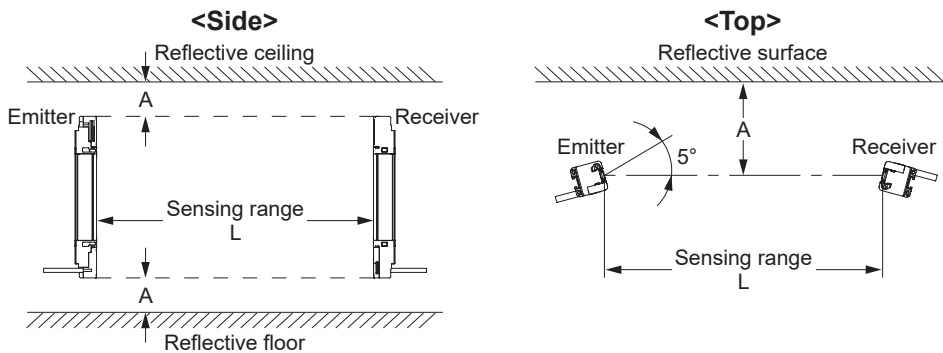

Distance (sensing range L) between emitter and receiver	Permissible installation distance A
When 0.2 to 3m	0.131m
When 3 to 15m	$L / 2 \times \tan 5 \approx L \times 0.0437$ (m)

Permissible device installation distance from reflective surface

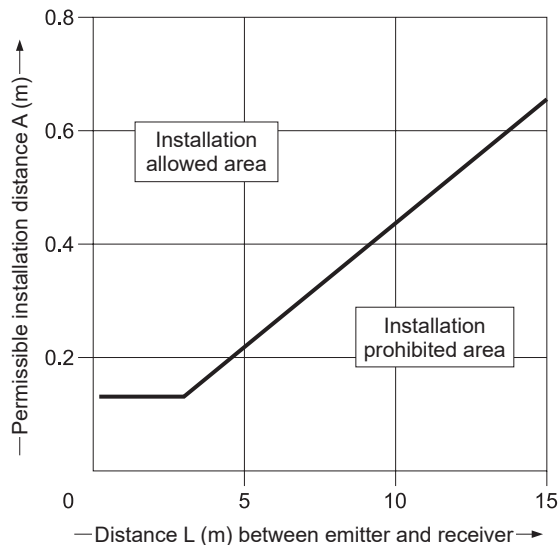

## 2-3-4 Preventing Mutual Interference

When multiple sets of the device are used, mutual interference may occur and cause malfunctioning. Use the most suitable means to prevent mutual interference.

### **WARNING**

When using multiple sets of the device, install so as to avoid mutual interference.  
Risk of death or serious injury if mutual interference occurs.

### 2-3-4-1 Interference Prevention Function

#### <Line synchronization>

Automatically reduces interference for up to two sets of the device.

#### <Optical synchronization>

Reduces interference for up to two sets of the device by frequency switching. by frequency switching. To change frequencies, refer to “3-9 DIP Switch Settings”.

### 2-3-4-2 Series Connection

When the devices are connected in series, mutual interference does not occur.

A maximum of 5 sets can be connected in series (maximum total of 256 beam channels)]

When the devices are connected in series, the control outputs (OSSD1 / 2) can be aggregated into one set. The control output (OSSD 1 / 2) turns OFF when light is blocked, regardless of which set is in the light blocked state.

#### <Reference>

- To change the synchronization method of devices connected in series, set all DIP switches 1 / 2 to the same state. If DIP switches 1 / 2 are not set to the same state on devices connected in series, the device will change to the lockout state.
- When connecting devices in series, connect emitters to emitters and receivers to receivers. If an emitter is connected to a receiver, the device will change to the lockout state.

### 2-3-4-3 Parallel Connection (only line synchronization)

When the synchronization method is line synchronization, 12-core cable and the communication module **SF4D-TM1** (option) can be used to connect up to three devices in parallel without mutual interference.

The control output (OSSD 1 / 2) turns OFF only on sets in the light-blocked state.

For the wiring method, refer to “2-5-9 Wiring for Function Changes Using Optional Communication Module SF4D-TM1 (Example of Control Category 4 Wiring)”.

For the setting method, refer to the “SF4D-TM1 User's Manual”.

## Protection Area


### 2-3-4-4 Preventing Mutual Interference by Device Placement

This section describes methods for placing 2 or more sets of emitters and receivers facing each other, rather than in a series or parallel connection. Consider these when there is a wiring problem or you need to test the system in conjunction with adding new equipment or otherwise. Use a test rod to perform an operation test as explained in “2-6-2 Operation Test”.

#### **WARNING**

Refer to and understand the examples of device placement given below before installing the devices. Risk of death or serious injury if the devices are not placed correctly.


#### <Examples of device placement>

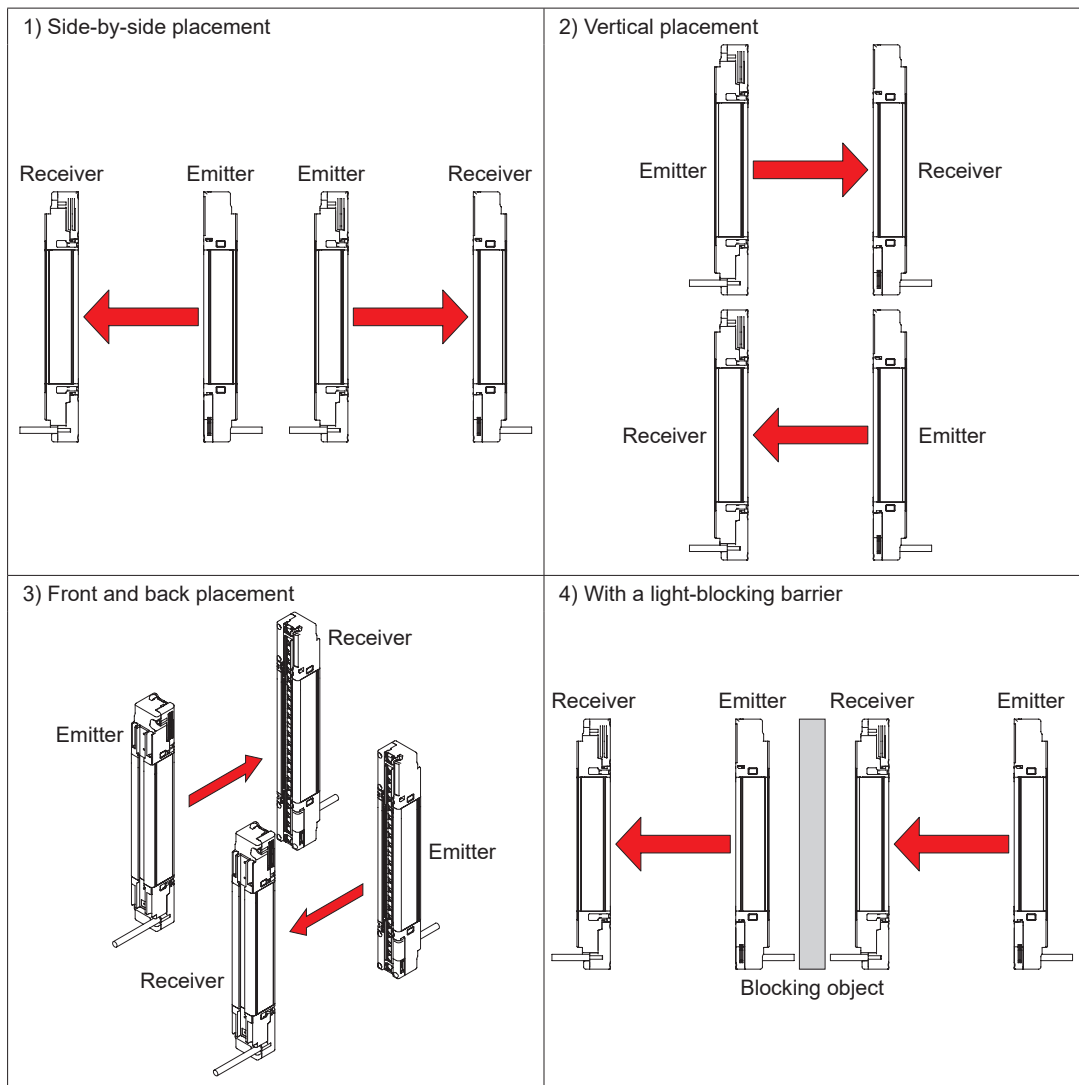

**<Reference>**  
The above placement methods are examples. If you have questions or problems, please contact our office.

**WARNING**

The emitter and receiver cables must be oriented in the same direction. Risk of malfunctioning if the cables are not in the same oriented in the same direction.

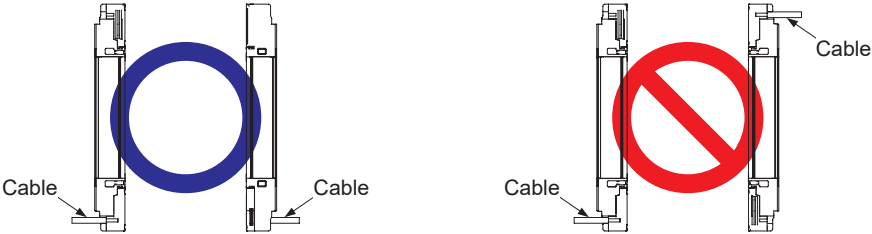

## Mounting

---

### 2-4 Mounting

#### 2-4-1 Installing the Mounting Brackets

##### CAUTION

- To allow selection of mounting brackets that are appropriate for the installation environment, mounting brackets are not provided with the device. Please purchase the separately available mounting brackets that match your environment.
- Do not forcibly bend or otherwise apply a load to the cables of the device. Risk of wire breakage.
- The minimum bending radius of the cables is R6mm. Keep the minimum bending radius of the cables in mind during installation.
- Make sure that stress by forcible bend or pulling is not applied to the sensor cable joint.
- If you install mounting brackets after connecting the bottom-cap cable and series connection cable to the device, move the cables to the other side of the mounting socket when tightening the hex head cap bolt to prevent tangling of the cables.




##### <Reference>

- Mount the emitter and the receiver at the same level and parallel to each other. The effective aperture angle of the device is  $\pm 2.5^\circ$  or less for a sensing range of 3m.
- Unless otherwise indicated, the mounting procedures that follow are for both the emitter and receiver. Prior to mounting, prepare mounting holes in the mounting surface as described in “**6-3 Dimensions**”.




## 2-4-1-1 Using Beam Adjustment Mounting Bracket MS-SFD-1-□ (Option)

Step 1 Insert the mounting plate of the base bracket into the base bracket mounting rail on the back of the device.

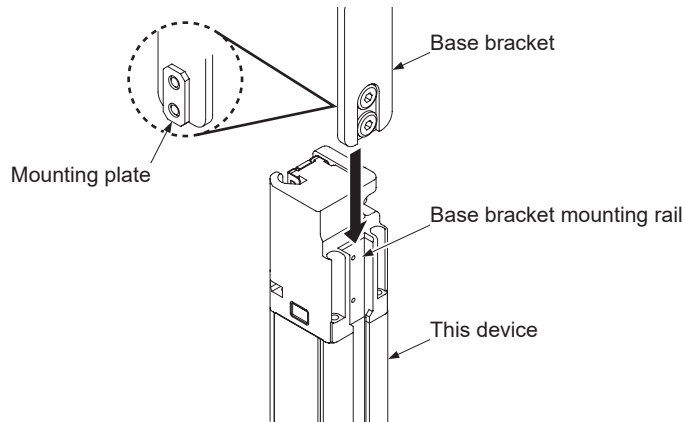


Step 2 With the base bracket in firm contact with the device, tighten the two ultra low-head hex socket bolts [M5 (length 5mm), opposing faces 3mm] that fasten the base bracket. Tighten to a torque of 3N·m or less.

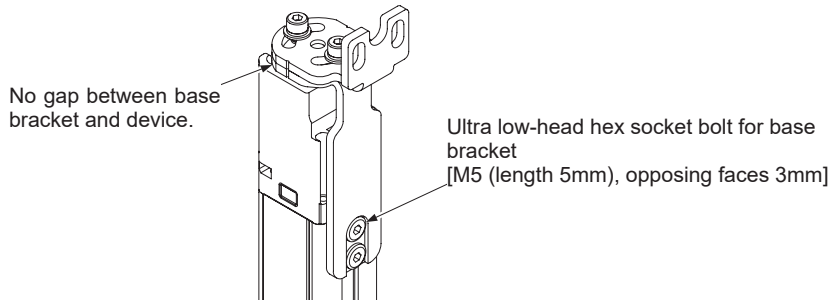

### <Side mounting>

Loosen the two hexagon-socket head bolts with washers [M4 (length 8mm), opposing faces 3mm] and remove the bracket.

Change the orientation of the mounting bracket, and tighten the two hexagon-socket head bolts with washers [M4 (length 8mm), opposing faces 3mm]. Tighten to a torque of 1.5N·m or less.

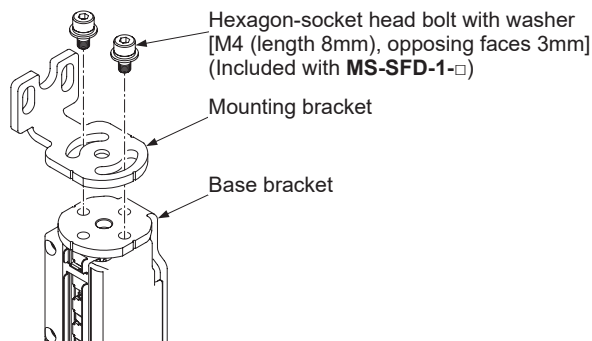


## Mounting

---

Step 3 Install the beam adjustment mounting bracket on the mounting surface with a hexagon-socket head bolt (purchase separately).


<MS-SFD-1-5>

Hexagon-socket head bolt  
[M5 (purchase separately)]

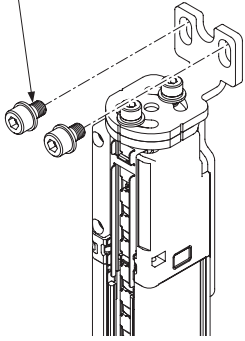


<MS-SFD-1-6>

Hexagon-socket head bolt  
[M6 (purchase separately)]

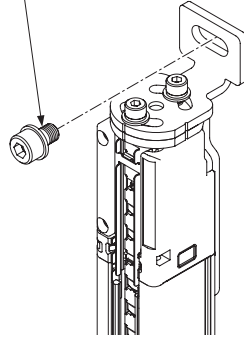


<MS-SFD-1-8>

Hexagon-socket head bolt  
[M8 (purchase separately)]

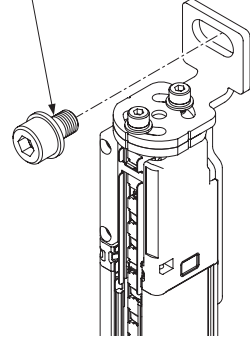


Hexagon-socket head bolt  
[M8 (purchase separately)]

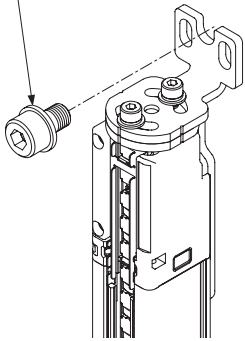


## 2-4-1-2 Using Intermediate Supporting Bracket MS-SFB-2 (Option)

Step 1 Loosen the hexagon-socket head bolt [M4 (length 12mm), opposing faces 3mm] on the intermediate supporting bracket.

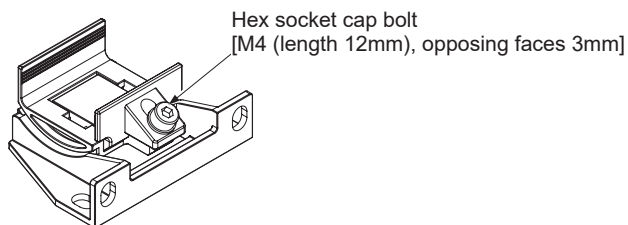


Step 2 Fit the intermediate supporting bracket onto the side of the device, and fasten with the hexagon-socket head bolt [M4 (length 12mm), opposing faces 3mm]. Tighten to a torque of 1.2N·m or less. For the mounting position of the intermediate supporting bracket, refer to “6-3 Dimensions”.

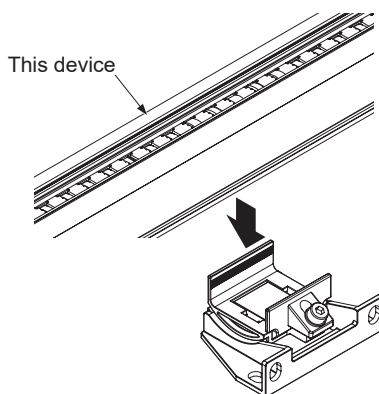

### <Side mounting>

Slide and remove the fixing fitting of the intermediate supporting bracket from the base bracket. Change the direction of the fixing fitting, and engage the notches on the fixing fitting with the rails on the base bracket.

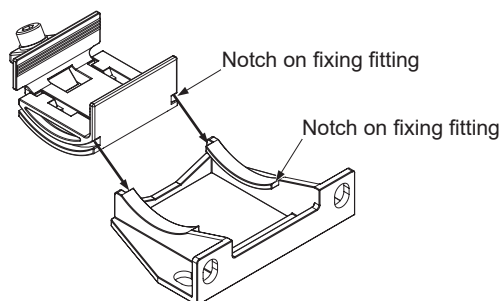


## Mounting

---

Step 3 Install the intermediate supporting bracket on the mounting surface with two hexagon-socket head bolts [M5 (purchase separately)].


### <Rear mounting>

Hexagon-socket head bolt  
[M5 (purchase separately)]

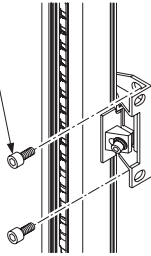

### <Side mounting>

Hexagon-socket head bolt  
[M5 (purchase separately)]

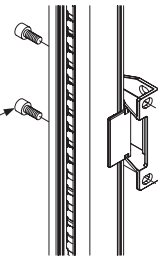

Note: When the number of beam axes is **SF4D-F**: 111 or more beam axes, **SF4D-H**: 56 or more beam axes, **SF4D-A**: 28 or more beam axes, one set is required.

## CAUTION



The intermediate supporting bracket **MS-SFB-2** is not intended to secure the device.

## 2-4-1-3 Using No Dead-Space Beam Adjustment Mounting Bracket MS-SFD-3-6 (Option)

Step 1 Mount on the mounting surface with two hexagon-socket head bolt [M5 (purchase separately)] or two hex bolts [M6 (purchase separately)]. Tighten sufficiently to prevent the product from falling (do not overtighten). Tighten sufficiently to prevent the product from falling (do not overtighten).

### <Rear mounting>



Hexagon-socket head bolt  
[M5 (purchase separately)]

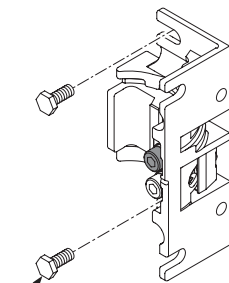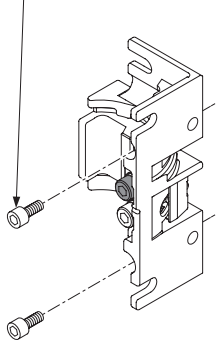

Hex bolt  
[M6 (purchase separately)]

### <Side mounting>

Hexagon-socket head bolt  
[M5 (purchase separately)]

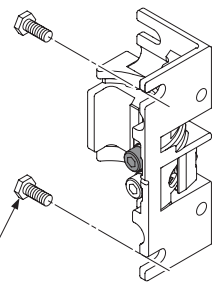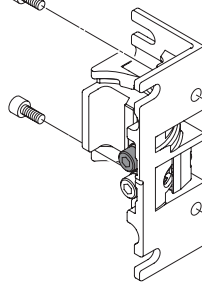


Hex bolt  
[M6 (purchase separately)]

### <Reference>

- Open mounting holes in the no dead-space beam adjustment mounting bracket in a straight line as indicated in “6-3-7 Mounting with MS-SFD-3-6”.
- If mounting the no dead-space beam adjustment mounting bracket on a commercially available aluminum frame, using non-slip nuts (purchase separately) will facilitate mounting.

Step 2 Partially loosen the hexagon-socket head bolt (M5, black) for light curtain fastening.

Hexagon-socket head bolt  
for light curtain fastening  
(M5, black)

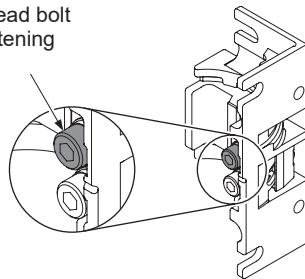


## CAUTION

Do not remove the hexagon-socket head bolt (M5, black) that fastens the light curtain from this product.

## Mounting


Step 3 While pushing the product against the hexagon-socket head bolt side, mount the no dead-space beam adjustment mounting bracket. Make sure the slot in the product is locked onto the tab on the no dead-space beam adjustment mounting bracket.

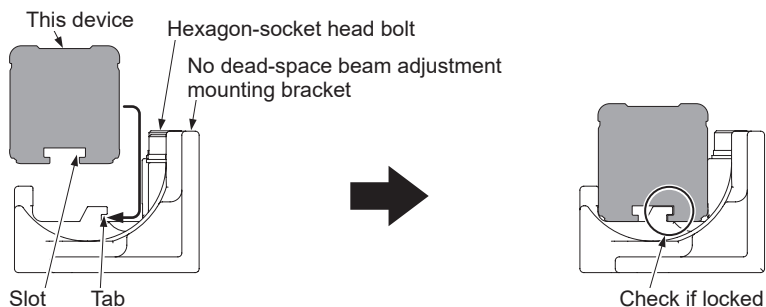

### CAUTION

- Do not mount the no dead-space beam adjustment mounting bracket on the cap (black part) of the product.
- In step 3, the product is not yet fastened. If you do not maintain a firm grip on the product, it may fall and cause injury or product damage.


Step 4 Fasten with the hexagon-socket head bolt (M5, black) for light curtain fastening. Tighten to a torque of 2N·m or less.

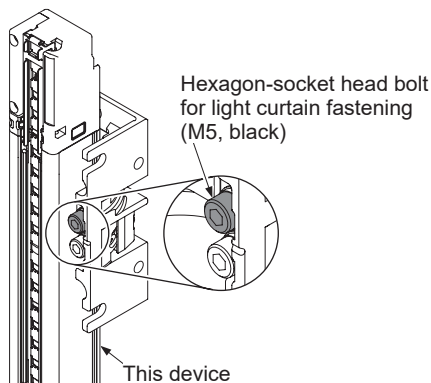

### CAUTION

Firmly fasten the product to the no dead-space beam adjustment mounting bracket. Risk of product falling and causing injury or product damage.


Step 5 Tighten the hexagon-socket head bolt (M5, silver) for beam adjustment.  
Tighten to a torque of 2N·m or less.

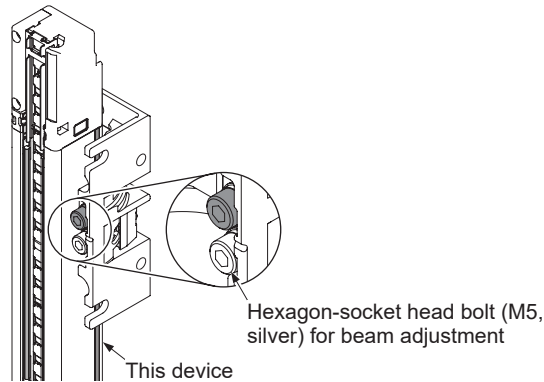

Step 6 Fully tighten the two hexagon-socket head bolts [M5] or the two hex bolts [M6] you partially tightened in step 1.

### <Removing the product>


Step 1 While holding the product, partially loosen the hex-socket head bolt (M5, black) for light curtain fastening.

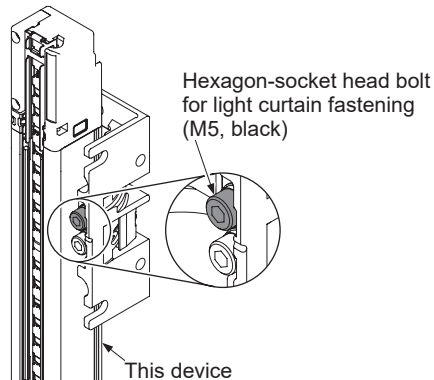

### **⚠ CAUTION**

If you loosen the hex-socket head bolt (M5, black) for light curtain fastening without holding the product, there is a risk that the product will fall and cause injury or product damage.


Step 2 While pushing the product against the hexagon-socket head bolt side, remove the no dead-space beam adjustment mounting bracket.

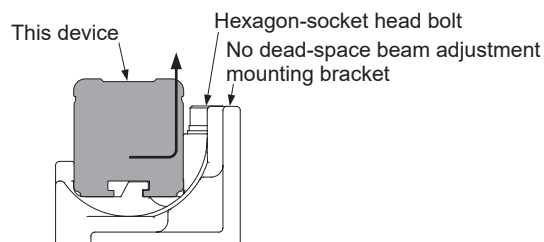


# Mounting

## 2-4-1-4 Using SF4B-G Compatible Mounting Bracket MS-SFD-4BG (Option)

Step 1 Insert the mounting plate of the base bracket into the base bracket mounting rail of the back of the device.

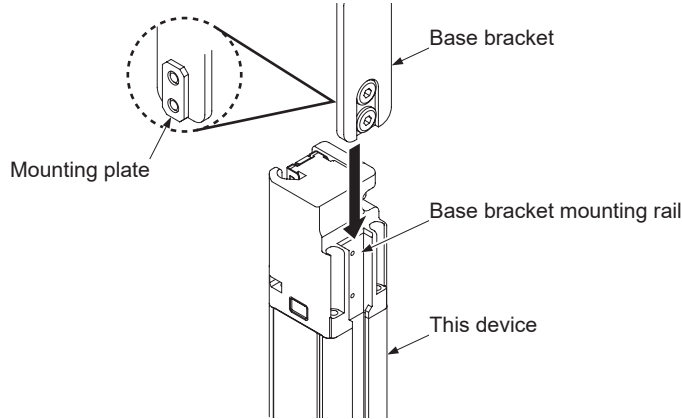


Step 2 With the base bracket in firm contact with the device, tighten the two ultra low-head hex socket bolts [M5 (length 5mm), opposing faces 3mm] that fasten the base bracket. Tighten to a torque of 3N·m or less.

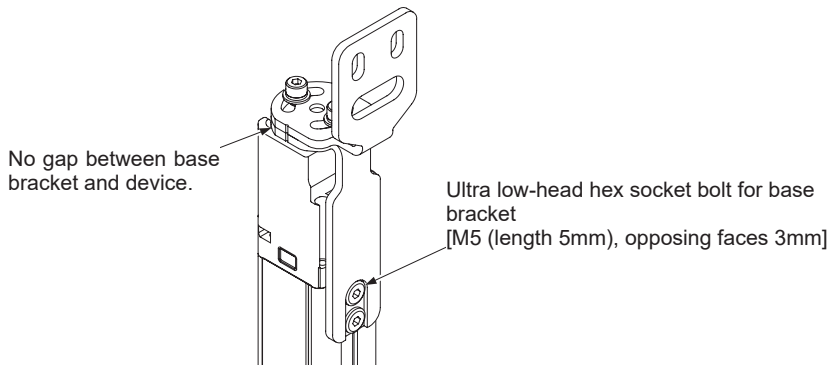

### <Side mounting>

Loosen the two hexagon-socket head bolts with washers [M4 (length 8mm), opposing faces 3mm] and remove the bracket.


Change the orientation of the mounting bracket, and tighten the two hexagon-socket head bolts with washers [M4 (length 8mm), opposing faces 3mm]. Tighten to a torque of 1.5N·m or less.

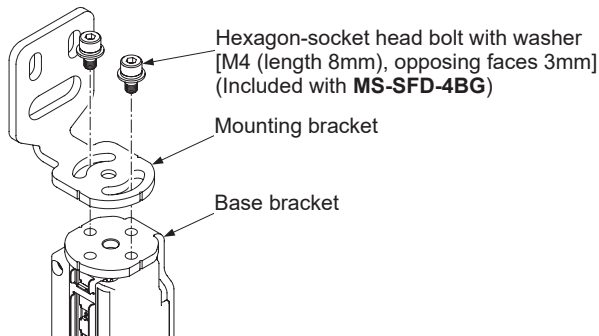




Step 3 Install the beam adjustment mounting bracket on the mounting surface with a hexagon-socket head bolts (purchase separately).

Hexagon-socket head bolt  
[M5 (purchase separately)]

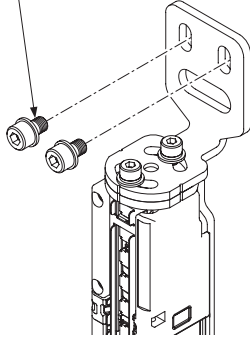

Hexagon-socket head bolt  
[M8 (purchase separately)]

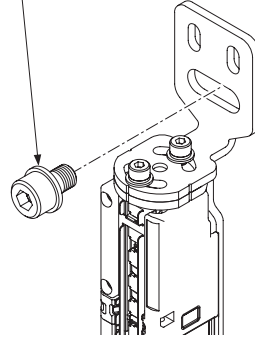

# Mounting


## 2-4-2 Installing the Bottom Cap Cables (Option)

Cables are not provided with the device.

To install the bottom cap cables (option), follow the steps below.

### CAUTION

- Take care not to misplace any screws while you are working.
- The bottom cap cables are distinguished by round connector color. Gray is for the emitter, and black is for the receiver. Make sure that the correct cable is connected to the emitter and to the receiver.
- There is packing on the connector of the bottom cap cable. If the packing is not fitted on the connector properly, fit as shown below before connecting to the device.

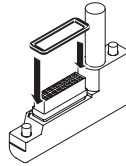

### <Reference>


Bottom cap cables are available in three types: 5-core, 8-core, and 12-core. Discrete wire and connector types are also available. Select the appropriate type for the application.

The length of the bottom cap cable varies by model No.


Type		Model No.	Length
5-core	Discrete wire type	SFD-CCB5-S	5m
		SFD-CCB10-S	10m
	Connector type	SFD-CB05-S	0.5m
8-core	Discrete wire type	SFD-CCB3	3m
		SFD-CCB7	7m
		SFD-CCB10	10m
		SFD-CCB15	15m
	Connector type	SFD-CB05	0.5m
		SFD-CB5	5m
	SFD-CB10	10m	
12-core	Discrete wire type	SFD-CCB3-MU	3m
		SFD-CCB7-MU	7m
		SFD-CCB10-MU	10m
	Connector type	SFD-CB05-MU	0.5m

### <Connection method>

Step 1 Insert the connector of the bottom cap cable (option) into the connector on the device.  
When inserting the connector, fit the cable into the groove on the device.

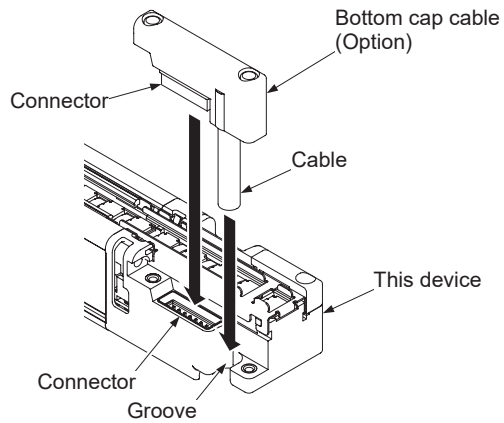

Step 2 Tighten the two M2.6 screws. Tighten to a torque of 0.3N·m or less.

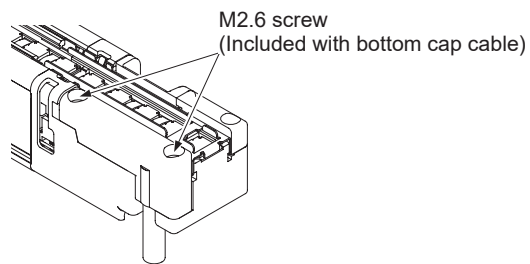


# Mounting

## 2-4-3 Adding and Removing Sensors (Series Connection)

This section explains how to create a series connection using options. To create a series connection, the following tasks must be performed.

### CAUTION

- Take care not to misplace any screws while you are working.
- Keep the removed end cap in a safe place.
- Do not mix emitters and receiver in the series connection.
- There is packing on the connector of the bottom cap cable. If the packing is not fitted on the connector properly, fit as shown below before connecting to the device.

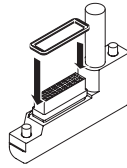


- The shape of the connector on the **SFD-CSL** series connection cable (option) is different from the bottom connector and end cap connector. Take care not to mix up the cables when installing.
- The series connection cable cannot be extended.
- When inserting the series connection cable into the main sensor, pay attention to the following points. Risk of bending of connector pins if inserted carelessly.

1. Do not run the cable before you have fastened the connector with the M2.6 screws.



2. Make sure the connector is completely inserted before fastening with the M2.6 screws.

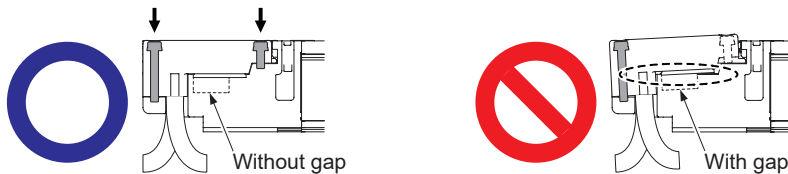

## <Reference>

The series connection cable is used in common for both the emitter and receiver.


The length of the series connection cable varies by model No.

If this device is to be installed in an L-shaped layout configuration, we recommend that an at least 0.1m long series connection cable be used.


Model No.	Length	Model No.	Length
<b>SFD-CSL005</b>	0.05m	<b>SFD-CSL1</b>	1m
<b>SFD-CSL01</b>	0.1m	<b>SFD-CSL5</b>	5m
<b>SFD-CSL05</b>	0.5m	<b>SFD-CSL10</b>	10m

## <Connecting the series connection cable>


Step 1 Loosen the two M2.6 screws on the end cap of the main sensor (emitter / receiver connected by synchronization wire), and remove the end cap.

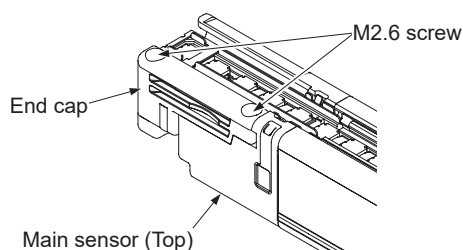

Step 2 Insert the connector of the series connection cable (option) into the connector on the device. When inserting the connector, fit the cable into the groove on the device.

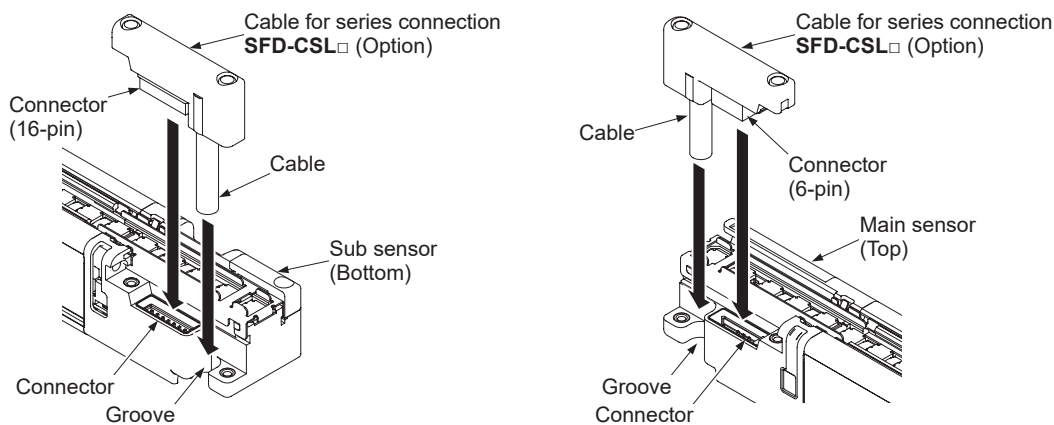

Step 3 Tighten the two M2.6 screws. Tighten to a torque of 0.3N·m or less.

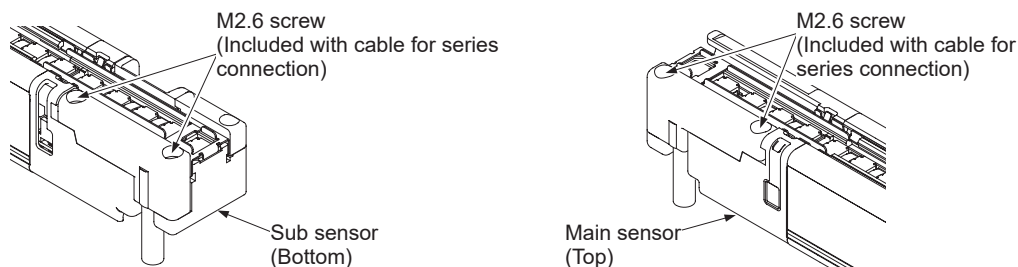

## Mounting

---

### **<Removing the series connection cable>**

Step 1 To disconnect the series connection cable, reverse the procedure for **<Connecting the series connection cable>**.

## 2-4-4 Mounting and Removing the Front Protective Cover


Use the following method when mounting a front protective cover (option) on the device.

### CAUTION

Take care not to apply excessive force to the front protective cover, as it may break.

#### <Mounting wide type FC-SFDH-□>

Press the front protective cover from the front side of the device and hook the nails on the cover into the grooves on the side of the device.

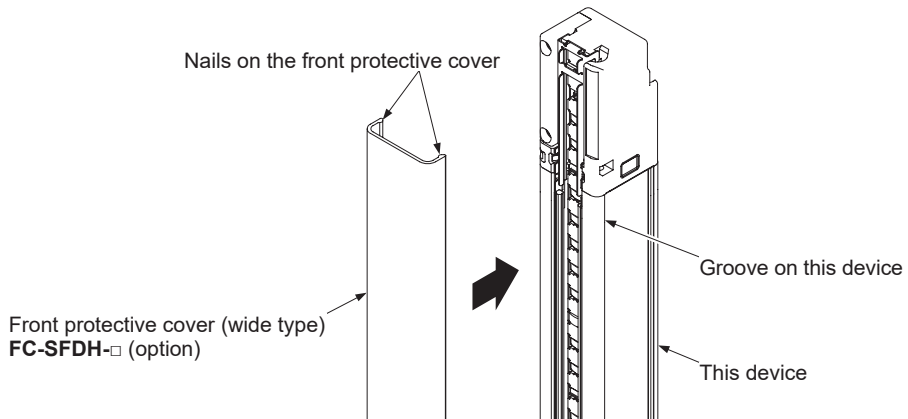

#### <Removing wide type FC-SFDH-□>

Expand both sides of the front protective cover to the right and left and then remove the cover from the device.

## Mounting


---

### <Mounting slim type FC-SFDH-□-S>

Step 1 Press the front protective cover into the groove on the cap (black part) on the device.

Step 2 Press the front protective cover into all the grooves on the device.

Step 3 Use a soft cloth to gently wipe off any dirt (such as fingerprints) that adheres to the front protective cover.

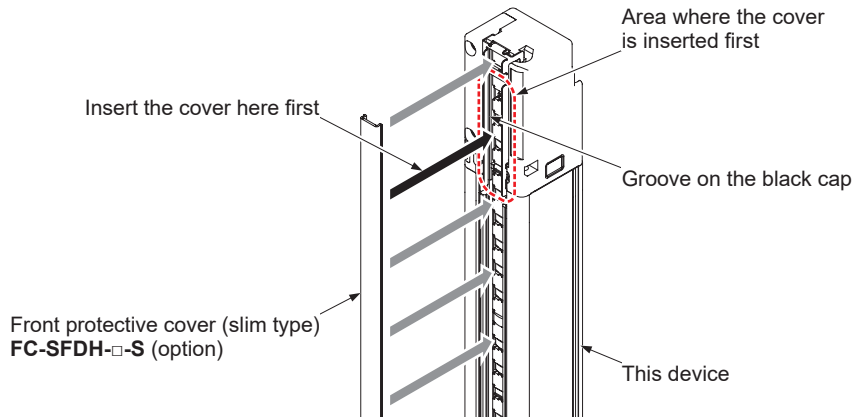

### <Removing slim type FC-SFDH-□-S>

Insert your fingers into the gaps on the top and bottom of the front protective cover and slowly remove the cover from the device.

## CAUTION

Do not apply excessive force when removing the front protective cover from the device. Doing so may break the cover.



## 2-5 Wiring

### WARNING

- Ground the machine or support on which the device is installed to frame ground (F.G.). If not grounded properly, there is a risk of death or serious injury from malfunctioning caused by noise. Enclose the wiring in a metal wiring box connected to frame ground (F.G.).
- Design the system that uses the device so that dangerous operation will not be caused by a grounding failure. Risk of death or serious injury if the system cannot be stopped.
- To prevent the output from turning ON if the control output (OSSD 1 / 2) wire shorts to ground (ground fault), always ground to 0V for PNP output, or +V for NPN output.
- When used as Korean KCs-mark compliant equipment, always ground to 0V (PNP output).

### CAUTION

Always insulate the ends of lead wires that are not used.

### 2-5-1 Power Supply Unit

### CAUTION

Use a power supply unit that conforms to the laws and regulations (code) of the region where the device is to be used, and connect correctly.  
Risk of device damage and malfunctioning if a non-compliant unit is used or the wiring is incorrect.

#### <Reference>

Wiring work must only be done by a qualified electrician or technician.

The power supply unit must satisfy the following requirements:

- 1) The power unit must be certified for use in your region.
- 2) The power supply unit must be a SELV (safety extra low voltage) / PELV (protected extra low voltage) unit that conforms to the EMC Directive and Low-voltage Directive. (When CE marking is required.)
- 3) The power supply unit must be a SELV (safety extra low voltage) / PELV (protected extra low voltage) unit that conforms to the EMC Regulations and Electrical Equipment (Safety) Regulations. (When UKCA marking is required.)
- 4) When using a commercial switching regulator, the frame ground (F.G.) terminal must be connected to ground.
- 5) The power supply unit must have an output holding time of 20ms or more.
- 6) If surges occur, take countermeasures such as connecting a surge absorber to the source of the surges.
- 7) The power unit must be a CLASS 2 compliant unit. (When cTÜVus mark compliance is required.)

# Wiring


## 2-5-2 Input / Output Circuit Diagrams and Output Waveforms

- Using optical synchronization setting and 5-core cable

### CAUTION

When using the 5-core cable, set the synchronization method to optical synchronization.  
For the setting of optical synchronization, refer to “3-9 DIP Switch Settings”

#### <Using PNP output>

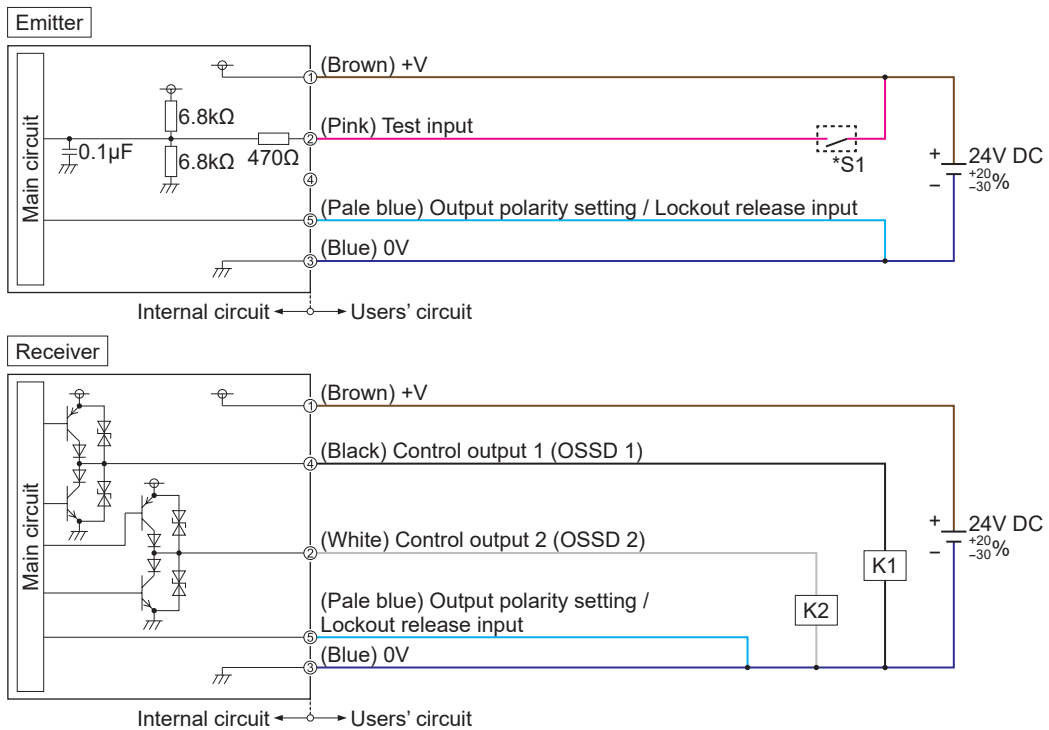

#### \*S1



- Switch S1
- Test input
- $V_s$  to  $V_s - 2.5V$  (sink current 5mA or less): Emission halt, Open: Emission (Note)

Note:  $V_s$  is the supply voltage.

#### <Reference>

K1, K2: Safety relay unit, etc.

<Using NPN output>

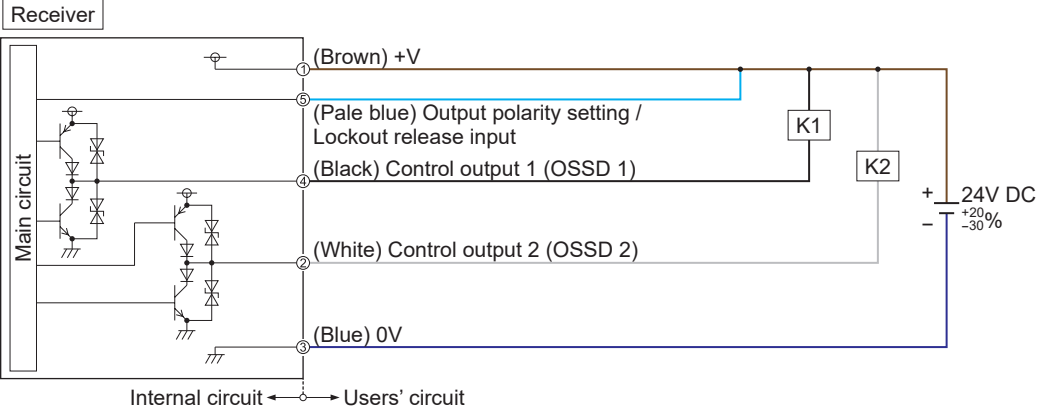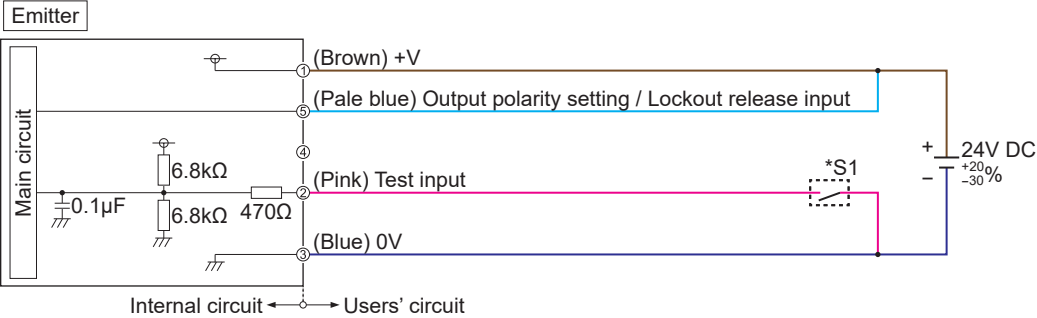

\*S1

Switch S1

- Test input
- 0 to +2.5V (source current 5mA or less): Emission halt, Open: Emission


<Reference>

K1, K2: Safety relay unit, etc.

# Wiring

## • Using line synchronization setting and 8-core cable

### <Using PNP output>

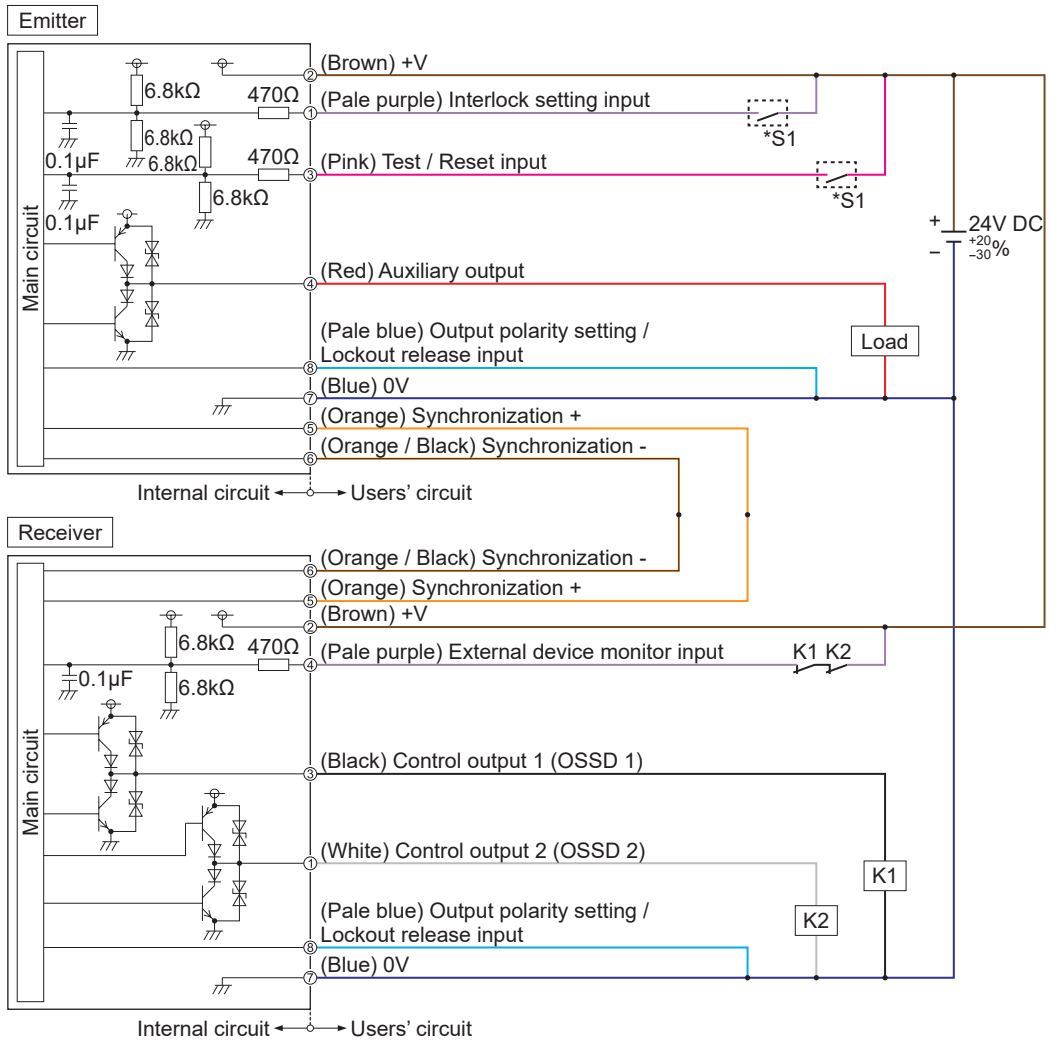

#### \*S1

##### Switch S1


- Test / Reset input  
Manual reset ...Vs to Vs - 2.5V (sink current 5mA or less): Emission halt (Note), Open: Emission  
Auto reset ...Vs to Vs - 2.5V (sink current 5mA or less): Emission (Note), Open: Emission halt
- Interlock setting input, External device monitor input  
Vs to Vs - 2.5V (sink current 5mA or less): Valid (Note), Open: Invalid

Note: Vs is the supply voltage.

#### <Reference>

K1, K2: External device (forcible guide relay or magnetic contactor)

## <Using NPN output>

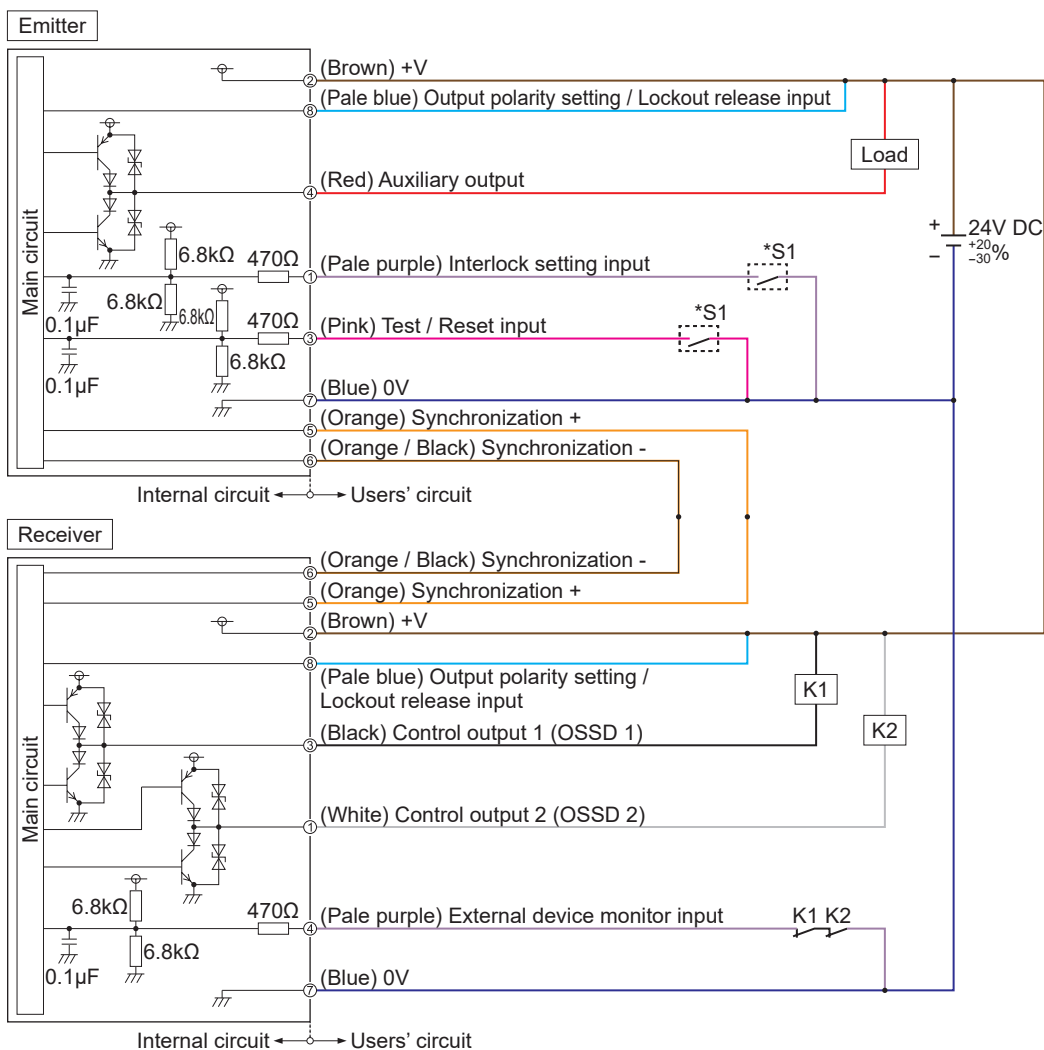


### <Reference>

- K1, K2: External device (forcible guide relay or magnetic contactor)

# Wiring

- Using line synchronization setting and 12-core cable

<Using PNP output>

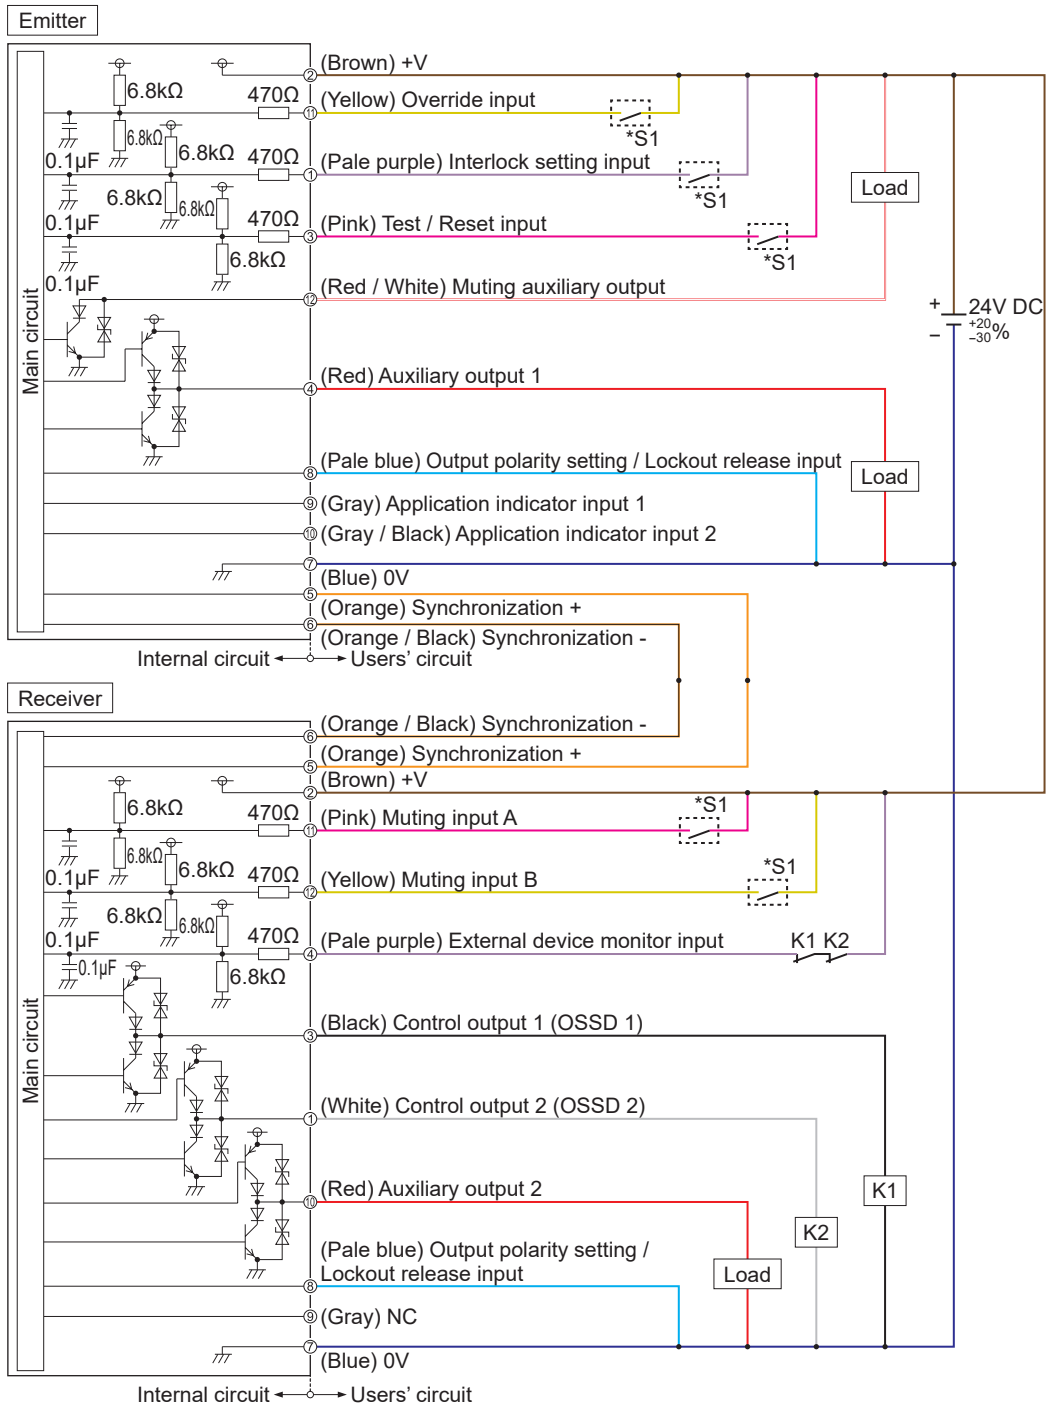

### \*S1

#### Switch S1

- Test / Reset input

Manual reset ...Vs to Vs - 2.5V (sink current 5mA or less): Emission halt (Note), Open: Emission

Auto reset ...Vs to Vs - 2.5V (sink current 5mA or less): Emission (Note), Open: Emission halt

- Interlock setting input, Override input, Muting input A / B, External device monitor input

Vs to Vs - 2.5V (sink current 5mA or less): Valid (Note), Open: Invalid


Note: Vs is the supply voltage.

#### <Reference>

K1, K2: External device (forcible guide relay or magnetic contactor)

# Wiring

## <Using NPN output>

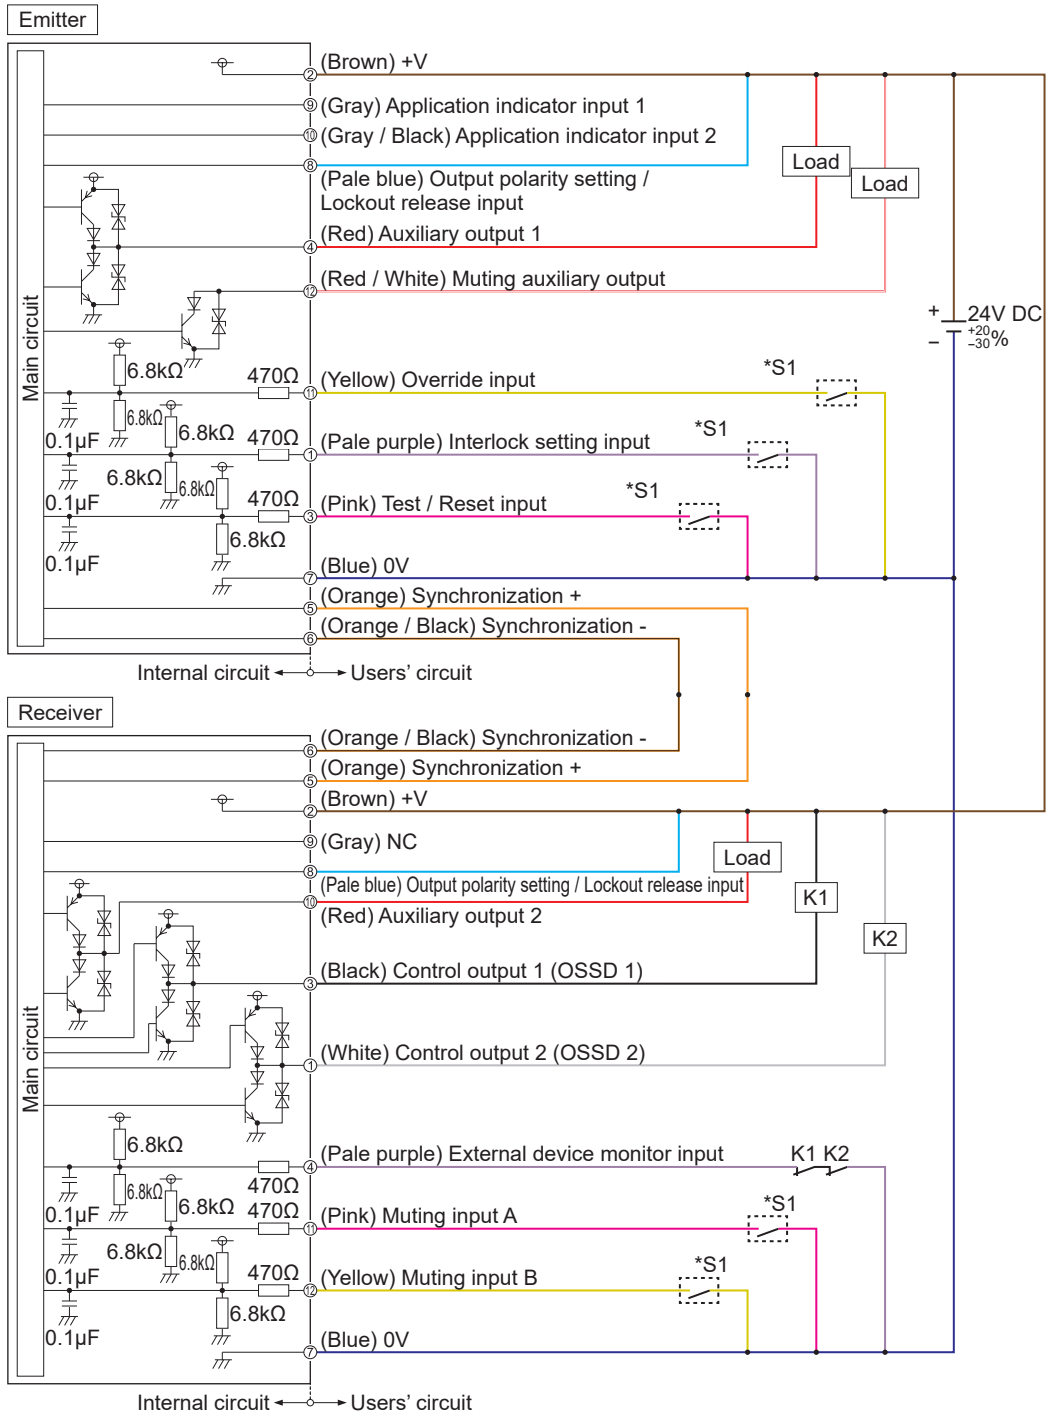



### \*S1

#### Switch S1

- Test / Reset input
  - Manual reset ...0 to 2.5V (source current 5mA or less): Emission halt, Open: Emission
  - Auto reset ...0 to 2.5V (source current 5mA or less): Emission, Open: Emission halt
- Interlock setting input, Override input, Muting input A / B, External device monitor input
  - 0 to +2.5V (source current 5mA or less): Valid, Open: Invalid

#### <Reference>

- K1, K2: External device (forcible guide relay or magnetic contactor)
- For wiring, refer to 2-5-4 and following sections.

## Wiring

### <Output waveform [control output (OSSD 1 / 2) ON]>


The receiver executes self-diagnosis of the output circuit when the device is in the light receiving state (ON state), and thus the output transistor turns OFF periodically. (Refer to the chart below.)

When an OFF signal is fed back, the receiver determines that the output circuit is normal. If an OFF signal is not fed back, the receiver determines that there is an output circuit or wiring error, and the control output (OSSD 1 / 2) holds the OFF state.

### CAUTION

Because the OFF signal of the device may cause the machine to malfunction, pay attention to the input response time of the machine when connecting the machine to the device.

### <Timing chart>

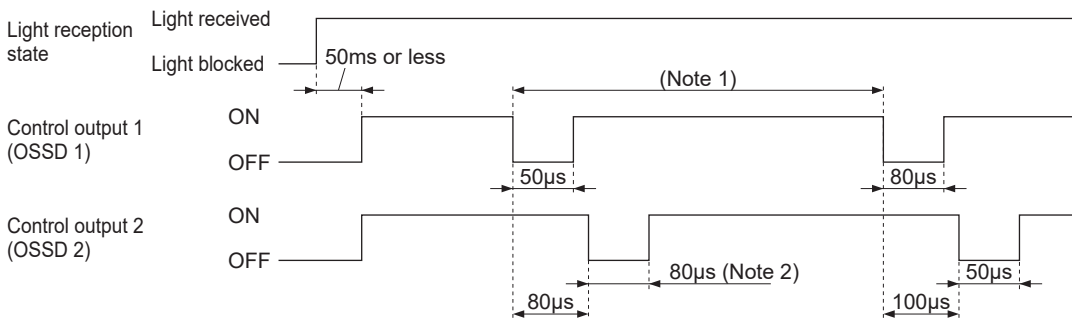

Notes: 1) Depends on main cycle: 2.6 to 8.9ms

2) Extended up to a maximum of 300µs when the load is a capacitance load.

## 2-5-3 Cable Wiring / Connections / Extension and Connector Pinouts


Connect the connector of the connection cable (connector on one end, connector on both ends) to the connector of the bottom cap cable connected to the device (emitter, receiver).

Connect the wires on the other end of the connection cable as required for the application, referring to the connector pinouts below.


### ! WARNING

- If you need to extend the cable, use the special-use cable. Extension is possible to a maximum total length of 70m each for the emitter and the receiver. If the total length is greater than 70m, the device may malfunction, creating a risk of death or serious injury.
- When connecting in a series connection, do not exceed a total length of 70m each for the emitter and the receiver, including the cable for series connection. If the total length is greater than the specification, the device may malfunction, creating a risk of death or serious injury.
- If you are extending the synchronization + wire (orange) and synchronization - wire (orange / black) using a cable other than the special-use cable, use 0.2mm<sup>2</sup> or more twisted-pair cable, and extend 0V as well. For other than synchronization + wire (orange) and synchronization - wire (orange / black), use 0.3mm<sup>2</sup> or more cable.
- In the case of line synchronization, emitter and receiver 0V should be common.


#### Bottom cap cable - discrete wire




#### Bottom cap cable - connector



#### Cable with connector on one end




#### Cable with connector on both ends




#### Side A connector (emitter/receiver common)


<5-core>



<8-core>




<12-core>



#### Side B connector (emitter/receiver common)


<5-core>



<8-core>



<12-core>



#### <5-core cable (SFD-CCB□-S, SFD-CB□-S, SFD-CC□-S, SFD-CCJ□-S)>

	Cable color / Connector color	Pin No.	Lead wire color	Name
Emitter	Gray / Gray	1	Brown	24V DC
		2	Pink	Test input
		3	Blue	0V
		4	-	-
		5	Pale blue	Output polarity setting / Lockout release input
Receiver	Gray (with Black line) / Black	1	Brown	24V DC
		2	White	Control output 2 (OSSD 2)
		3	Blue	0V
		4	Black	Control output 1 (OSSD 1)
		5	Pale blue	Output polarity setting / Lockout release input

## Wiring

### <8-core cable (SFD-CCB□, SFD-CB□, SFD-CC□, SFB-CCJ□)>

	Cable color / Connector color	Pin No.	Lead wire color	Name
Emitter	Gray / Gray	1	Pale purple	Interlock setting input
		2	Brown	24V DC
		3	Pink	Test / Reset input
		4	Red	Auxiliary output
		5	Orange	Synchronization +
		6	Orange / Black	Synchronization -
		7	Blue	0V
		8	Pale blue	Output polarity setting / Lockout release input
Receiver	Gray (with black line) / Black	1	White	Control output 2 (OSSD 2)
		2	Brown	24V DC
		3	Black	Control output 1 (OSSD 1)
		4	Pale purple	External device monitor input
		5	Orange	Synchronization +
		6	Orange / Black	Synchronization -
		7	Blue	0V
		8	Pale blue	Output polarity setting / Lockout release input

### <12-core cable (SFD-CCB□-MU, SFD-CB□-MU, SFD-CC□-MU)>

	Cable color / Connector color	Pin No.	Lead wire color	Name
Emitter	Gray / Gray	1	Pale purple	Interlock setting input
		2	Brown	24V DC
		3	Pink	Test / Reset input
		4	Red	Auxiliary output 1
		5	Orange	Synchronization +
		6	Orange / Black	Synchronization -
		7	Blue	0V
		8	Pale blue	Output polarity setting / Lockout release input
		9	Gray	Application indicator input 1
		10	Gray / Black	Application indicator input 2
		11	Yellow	Override input
		12	Red / White	Muting auxiliary output
Receiver	Gray (with black line) / Black	1	White	Control output 2 (OSSD 2)
		2	Brown	24V DC
		3	Black	Control output 1 (OSSD 1)
		4	Pale purple	External device monitor input
		5	Orange	Synchronization +
		6	Orange / Black	Synchronization -
		7	Blue	0V
		8	Pale blue	Output polarity setting / Lockout release input
		9	Gray	NC
		10	Red	Auxiliary output 2
		11	Pink	Muting input A
		12	Yellow	Muting input B

#### <Reference>

- Connectors for the emitter are gray, and connectors for the receiver are black.
- For details on cables with a connector on one end and cables with a connector on both ends, refer to “6-2 Options”.

## 2-5-4 Basic Wiring

This is a common connection method whereby one emitter and one receiver face each other. The control output (OSSD 1 / 2) turns OFF when light is blocked, and automatically turns ON when light is received.


The output setting of the device is set by the connection of the output polarity setting / lockout release input wire (pale blue).  
If the wiring is not correct, the lockout state will activate.

- Using optical synchronization setting and 5-core cable

### CAUTION

When using the 5-core cable, set the synchronization method to optical synchronization.  
For the setting of optical synchronization, refer to “3-9 DIP Switch Settings”


#### <Using PNP output>

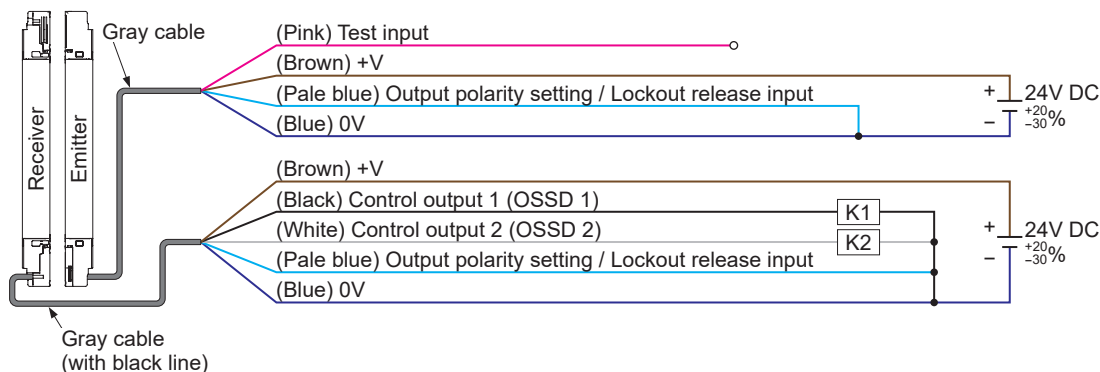

#### \*Symbols

K1, K2: Safety relay unit, etc.

#### <Using NPN output>

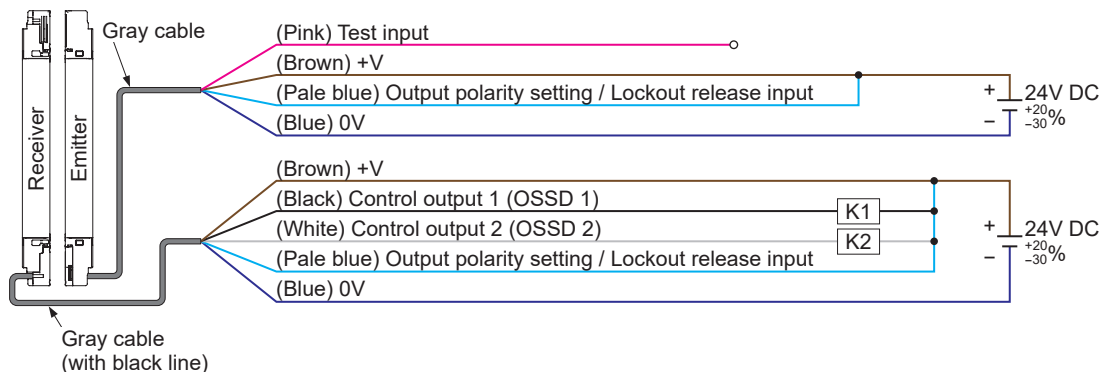

#### \*Symbols


K1, K2: Safety relay unit, etc.

## Wiring

The auxiliary output is used to invalidate the external device monitor function. The auxiliary output should be set to "control output negative logic" (factory setting). External devices cannot be connected to the auxiliary output.

- Using line synchronization setting and 8-core cable

<Using PNP output>

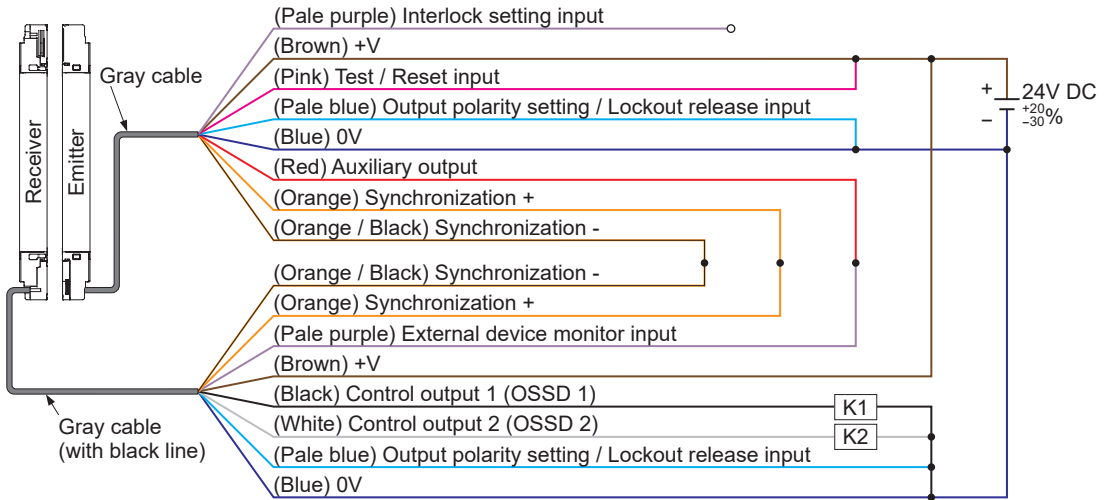


Interlock function	Invalid (auto reset)
External device monitor function	Invalid
Auxiliary output	Cannot be used

**\*Symbols**

K1, K2: Safety relay unit, etc.

## <Using NPN output>

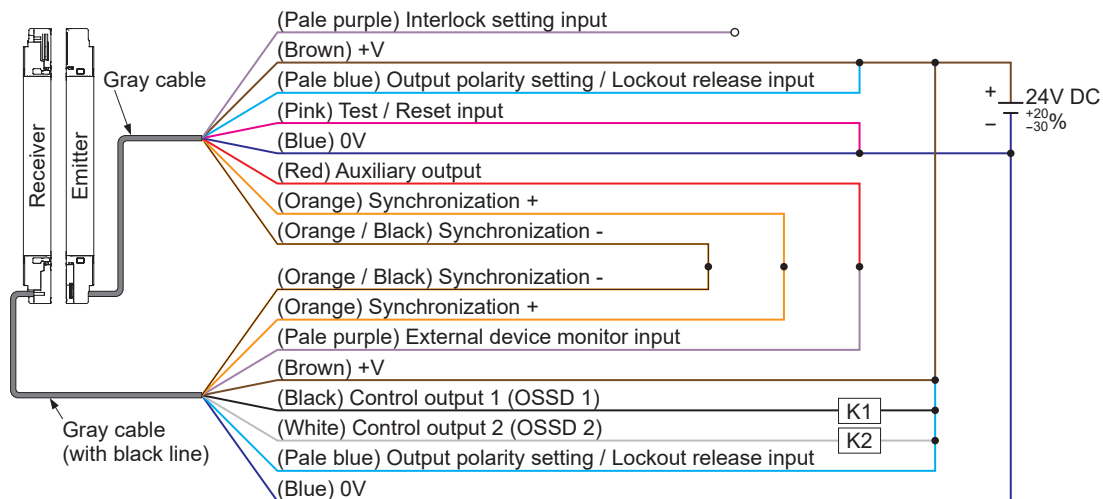

Interlock function	Invalid (auto reset)
External device monitor function	Invalid
Auxiliary output	Cannot be used

### \*Symbols

K1, K2: Safety relay unit, etc.


# Wiring

## 2-5-5 Wiring for Manual Reset (Interlock is Valid) (Example of Control Category 4 Wiring)

This is a common connection method whereby one emitter and one receiver face each other. The control output (OSSD 1 / 2) turns OFF when light is blocked.

- Using line synchronization setting and 8-core cable

<Using PNP output>

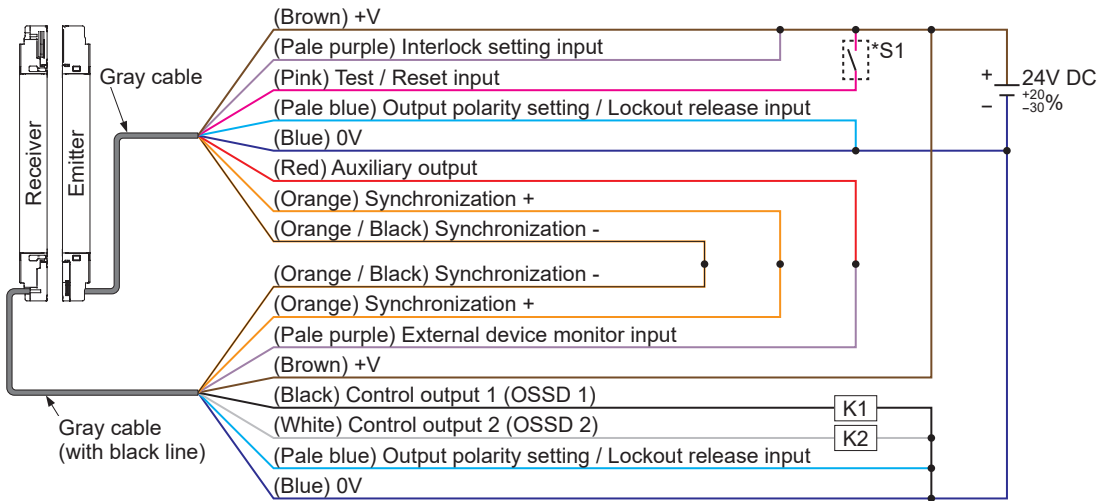

Interlock function	Valid (manual reset)
External device monitor function	Invalid
Auxiliary output	Not possible

### \*Symbols


Switch S1
Vs to Vs - 2.5V (sink current 5mA or less): Emission halt (Note 1), Open: Emission
K1, K2: Safety relay unit, etc.

Notes: 1) Vs is the supply voltage.

2) For information on reset, refer to “3-2 Interlock Function (8-core cable, 12-core cable)”.



## <Using NPN output>

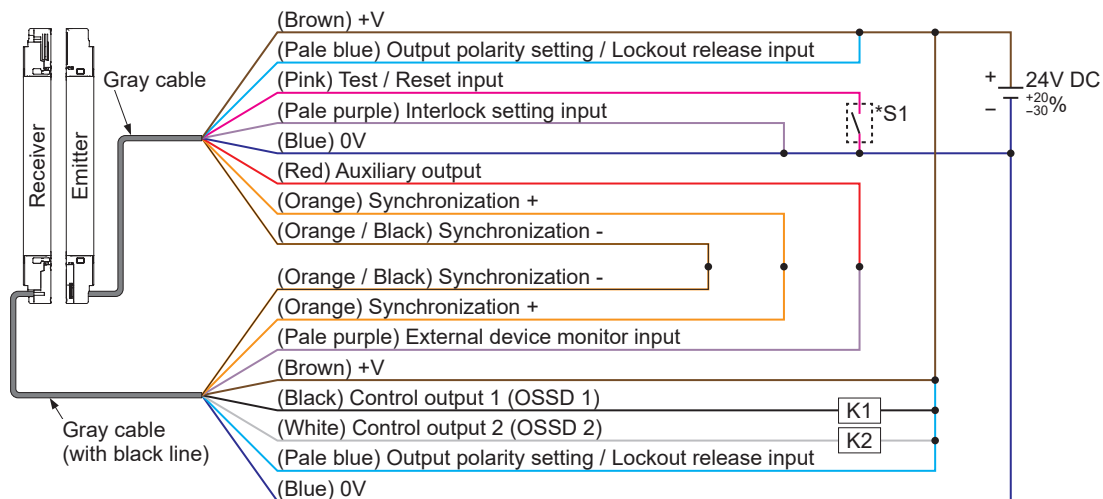

Interlock function	Valid (manual reset)
External device monitor function	Invalid
Auxiliary output	Not possible

### \*Symbols

Switch S1  
 0 to +2.5V (source current 5mA or less): Emission halt, Open: Emission  
 K1, K2: Safety relay unit, etc.

Note: For information on reset, refer to “3-2 Interlock Function (8-core cable, 12-core cable)”.

# Wiring

## 2-5-6 Wiring for Series Connection (Example of Control Category 4 Wiring)

[Maximum of 5 sets can be connected (maximum total of 256 beam channels)]


This method is used to connect multiple emitters and receivers facing each other in series. This connection method is used when there are two or more paths to the dangerous part of the machine. The control output (OSSD 1 / 2) turns OFF when light is blocked, regardless of which set is in the light blocked state.

**⚠ WARNING**

To use a series connection, you must use the special-use **SFD-CSL** series connection cables to connect emitters to emitters and receivers to receivers. Risk of death or serious injury if a non-sensing area is created due incorrect connection.

- Using line synchronization setting and 8-core cable

<Using PNP output>

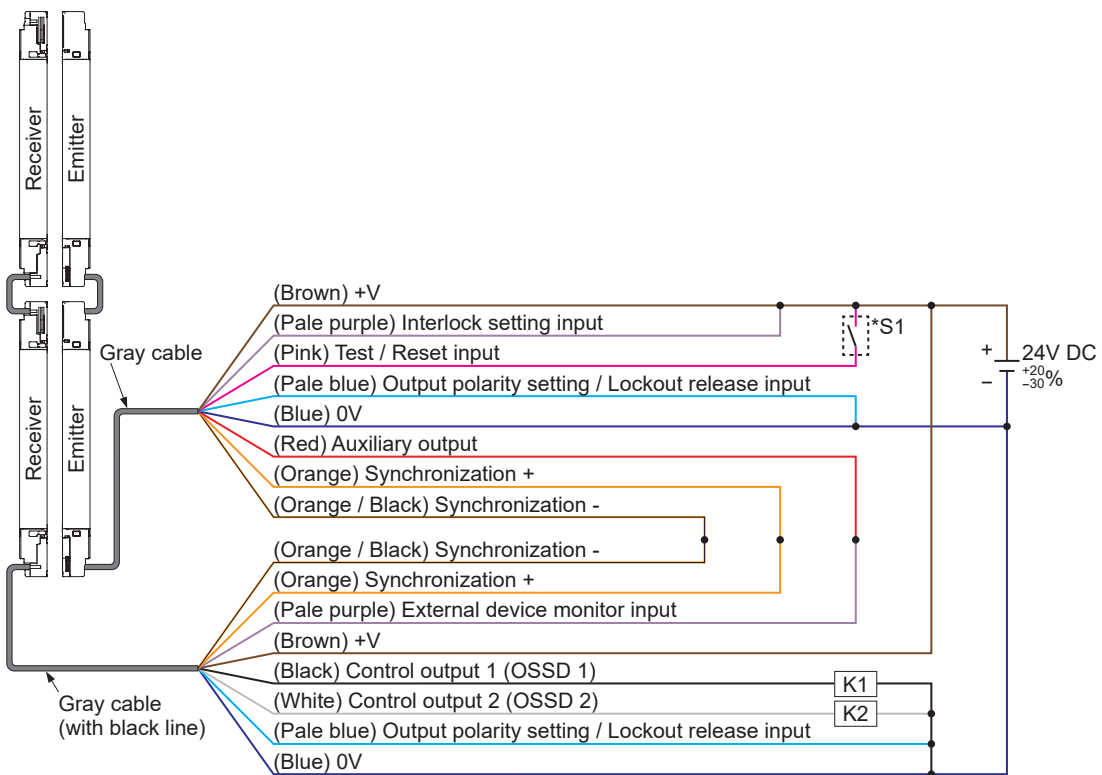

Interlock function	Valid (manual reset)
External device monitor function	Invalid
Auxiliary output	Not possible


**\*Symbols**

Switch S1  
 Vs to Vs – 2.5V (sink current 5mA or less): Emission halt (Note 1), Open: Emission  
 K1, K2: Safety relay unit, etc.

Notes: 1) Vs is the supply voltage.

2) For information on reset, refer to “3-2 Interlock Function (8-core cable, 12-core cable)”.

## <Using NPN output>

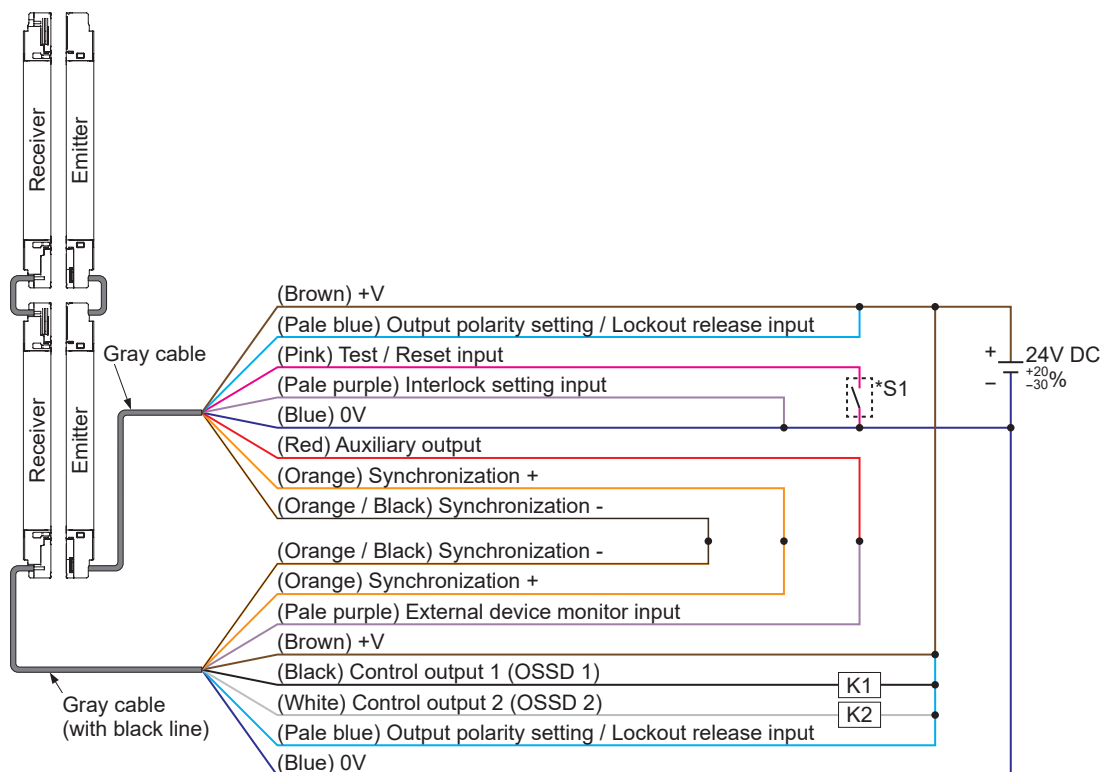

Interlock function	Valid (manual reset)
External device monitor function	Invalid
Auxiliary output	Not possible

### \*Symbols

Switch S1  
 0 to +2.5V (source current 5mA or less): Emission halt, Open: Emission  
 K1, K2: Safety relay unit, etc.


Note: For information on reset, refer to "3-2 Interlock Function (8-core cable, 12-core cable)".

## Wiring

### 2-5-7 Wiring Configuration for Valid External Device Monitor Function (Example of Control Category 4 Wiring)

Connect contact b of K1 and K2 to the external device monitor inputs as shown.

- Using line synchronization setting and 8-core cable  
<Using PNP output>

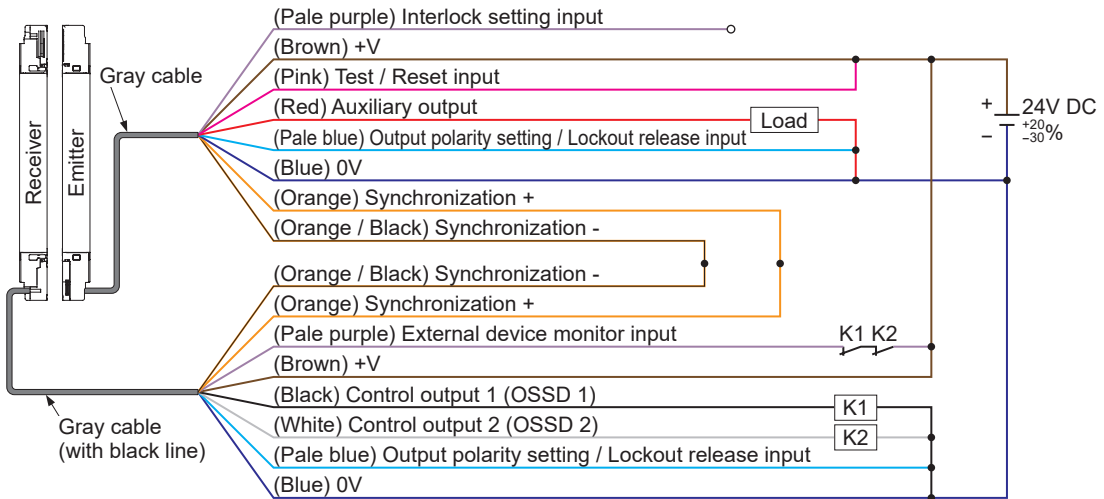


Interlock function	Invalid (auto reset)
External device monitor function	Valid
Auxiliary output	Can be used

#### \*Symbols

K1, K2: External device (forcible guide relay or magnetic contactor)

<Using NPN output>

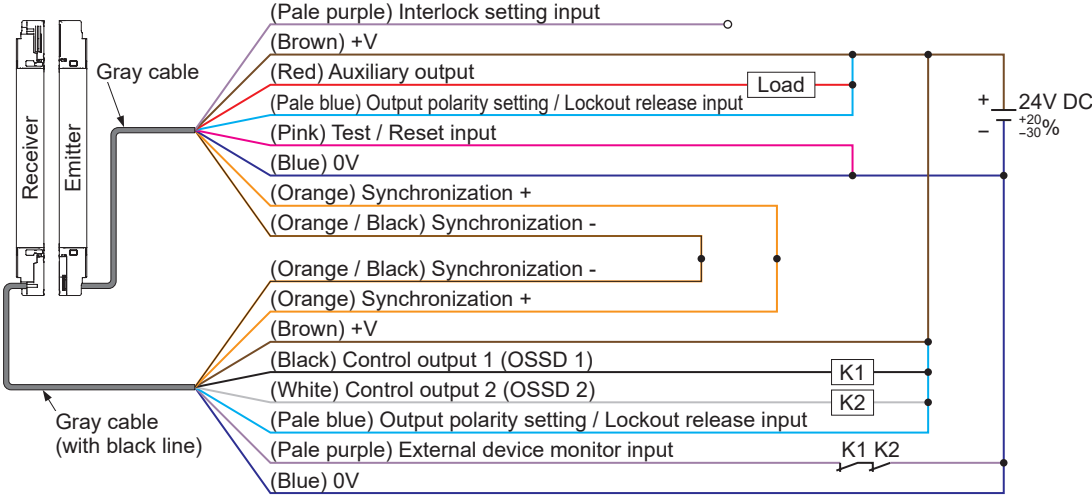

Interlock function	Invalid (auto reset)
External device monitor function	Valid
Auxiliary output	Can be used


\*Symbols

K1, K2: External device (forcible guide relay or magnetic contactor)

# Wiring

## 2-5-8 Wiring Configuration for Valid Muting Function (Example of Control Category 4 Wiring)

- Using line synchronization setting and 12-core cable  
<Using PNP output>

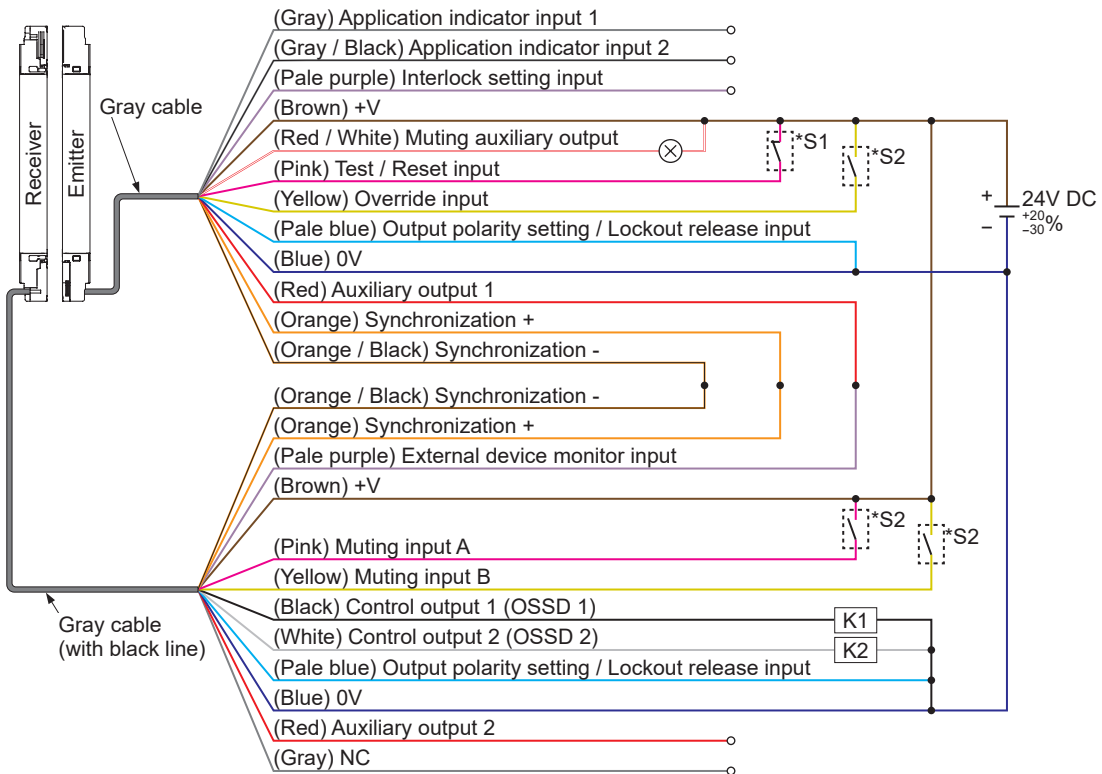


Interlock function	Invalid (auto reset)
External device monitor function	Invalid
Auxiliary output 1	Not possible

### \*Symbols

- Switch S1
- Test / Reset input  
Vs to Vs - 2.5V (sink current 5mA or less): Emission (Note), Open: Emission halt
- Switch S2
- Muting input A / B, Override input  
Vs to Vs - 2.5V (sink current 5mA or less): Valid (Note), Open: Invalid
- K1, K2: Safety relay unit, etc.

Note: Vs is the supply voltage.

## <Using NPN output>

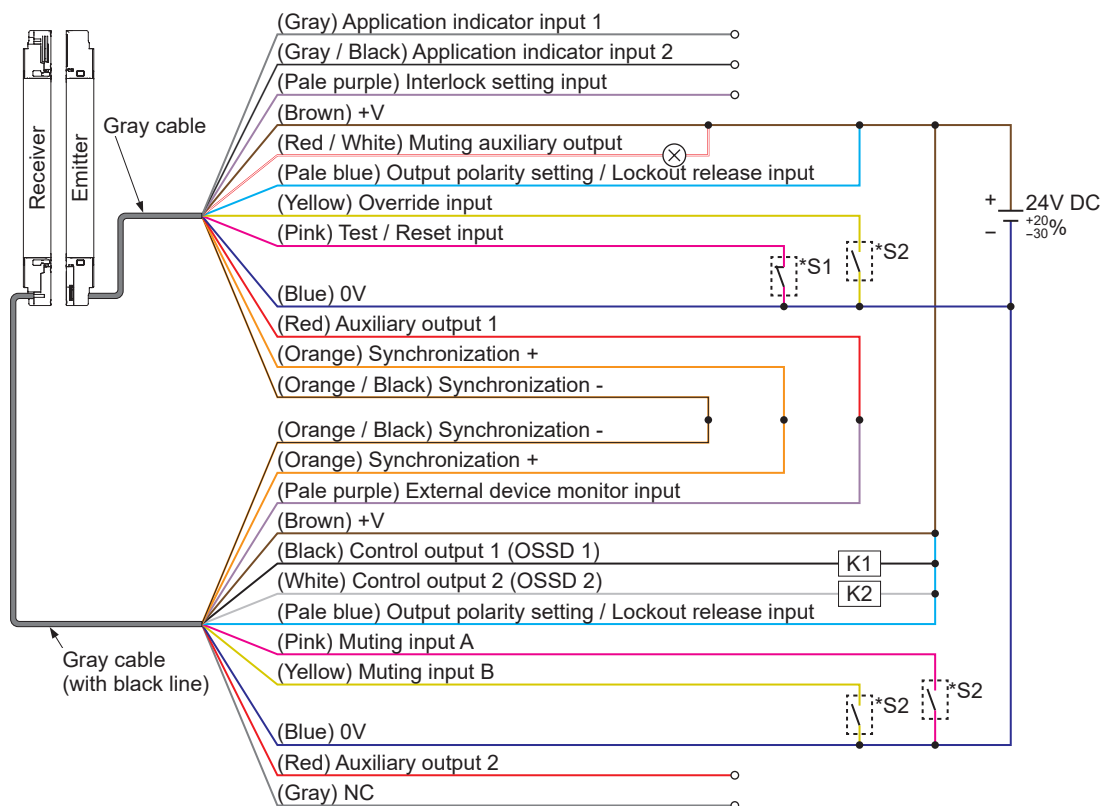

Interlock function	Invalid (auto reset)
External device monitor function	Invalid
Auxiliary output 1	Not possible

### \*Symbols

Switch S1

- Test / Reset input

0 to +2.5V (source current 5mA or less): Emission, Open: Emission halt

Switch S2

- Muting input A / B, Override input

0 to +2.5V (source current 5mA or less): Valid, Open: Invalid

K1, K2: Safety relay unit, etc.

## Wiring

### 2-5-9 Wiring for Function Changes Using Optional Communication Module SF4D-TM1 (Example of Control Category 4 Wiring)

#### <Reference>

For function change methods, refer to “3-11-10 I/O Setting Function”.

#### 2-5-9-1 Wiring for Parallel Connection (Example of Control Category 4 Wiring)

This method is used to connect multiple emitters and receivers facing each other in parallel. By connecting the device's interference prevention wires, up to 3 sets can be connected in parallel. Maximum total of 192 beam channels. The control output (OSSD 1 / 2) turns OFF only on sets in the light-blocked state.

#### **WARNING**

When connecting in parallel, connect the interference prevention wire of each receiver and its paired emitter as shown on the following page. Risk of death or serious injury if a non-sensing area is created due to incorrect connection.

#### ● Using line synchronization setting and 12-core cable

##### <Using PNP output>

Interlock function	Valid (manual reset)
External device monitor function	Valid
Auxiliary output 1	Can be used

#### \*Symbols

Switch S1



Vs to Vs – 2.5V (sink current 5mA or less): Emission halt (Note 1), Open: Emission

K1, K2: External device (forcible guide relay or magnetic contactor)

Notes: 1) Vs is the supply voltage.

2) For information on reset, refer to “3-2 Interlock Function (8-core cable, 12-core cable)”.



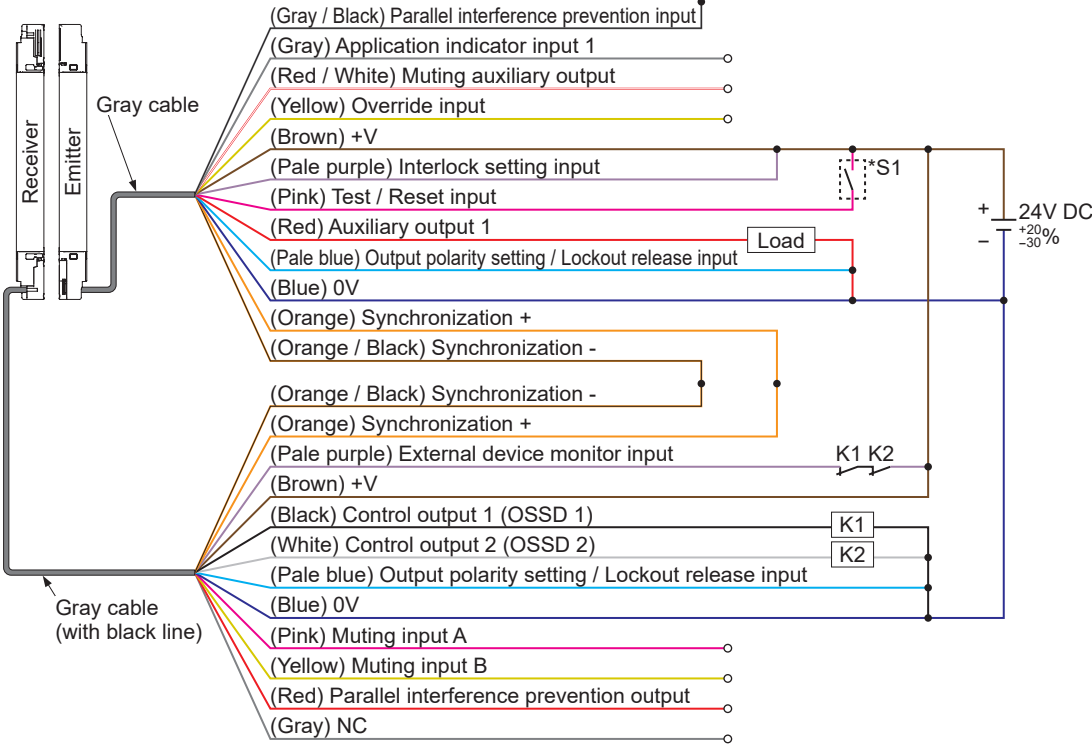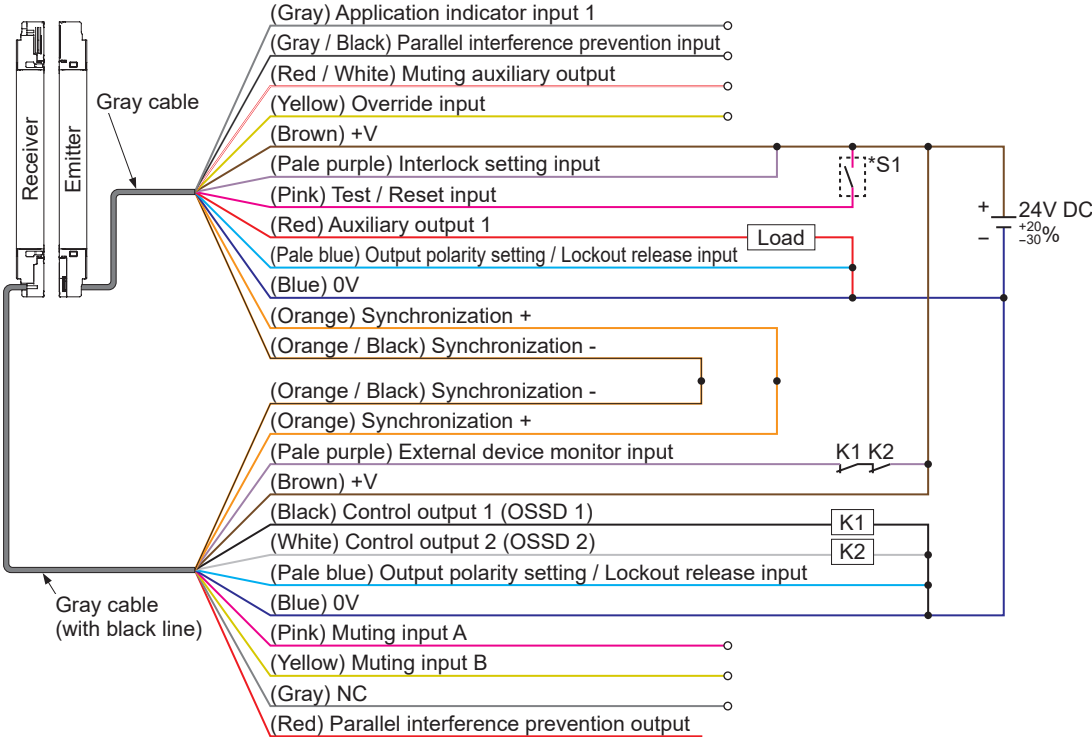

## Wiring

---



### <Using NPN output>

Interlock function	Valid (manual reset)
External device monitor function	Valid
Auxiliary output 1	Can be used

### \*Symbols

Switch S1 0 to +2.5V (source current 5mA or less): Emission halt, Open: Emission K1, K2: External device (forcible guide relay or magnetic contactor)
---

Note: For information on reset, refer to “**3-2 Interlock Function (8-core cable, 12-core cable)**”.

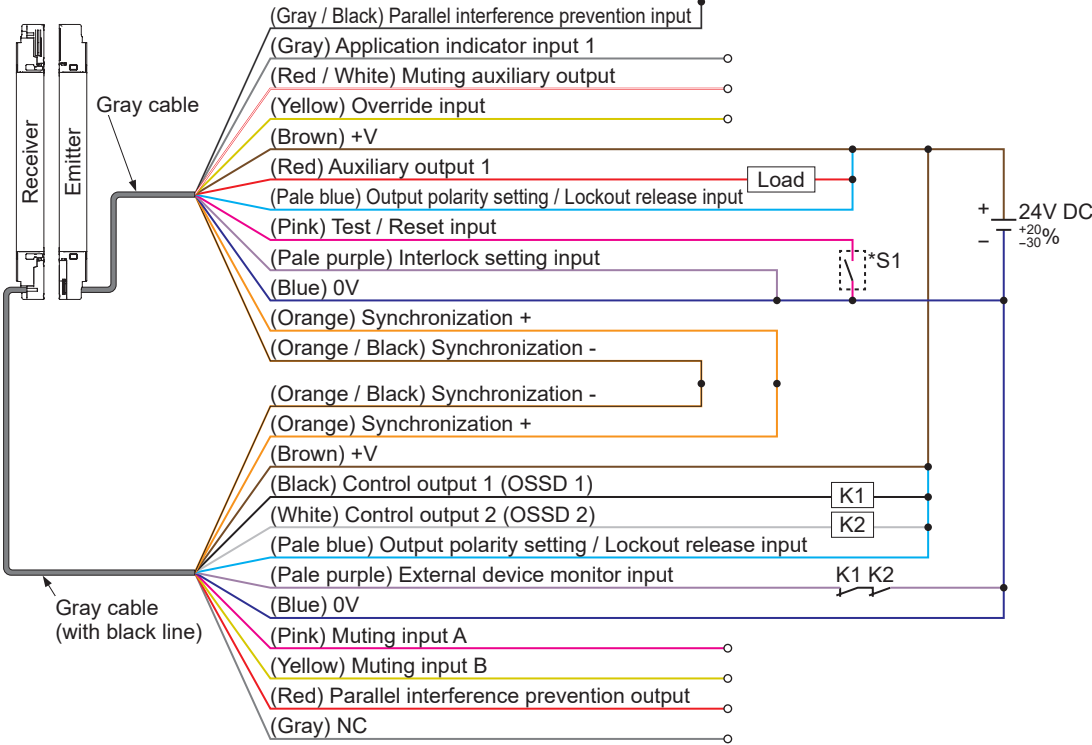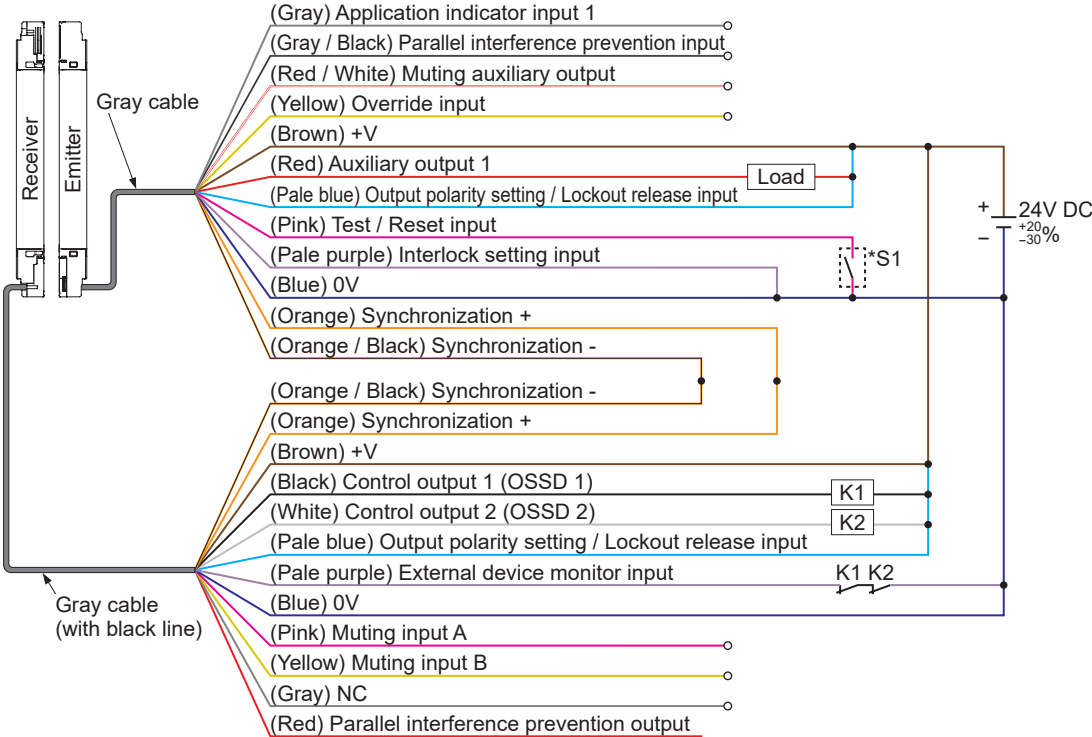

## Wiring

### 2-5-9-2 Wiring for Mixed Series and Parallel Connection (Example of Control Category 4 Wiring)

This method is used to connect multiple emitters and receivers facing each other in a combination of parallel and series connections. This connection method is used when there are two or more dangerous parts of the machine and two or more paths of approach. A total of up to 5 sets can be connected in a combination of series and parallel connections, with a maximum of 5 sets connected in series, or a maximum of 3 sets connected in parallel. Maximum total of 144 beam channels. In a series connection, the control output (OSSD 1 / 2) turns OFF regardless of which set is in the light-blocked state. In a parallel connection, the control output (OSSD 1 / 2) turns OFF only on sets in the light-blocked state.

#### **WARNING**

- To use a series connection, you must use the special-use **SFD-CSL** series connection cables to connect emitters to emitters and receivers to receivers as shown on the following page. Risk of death or serious injury if a non-sensing area is created due incorrect connection.
- When connecting in parallel, connect the interference prevention wire of each receiver and its paired emitter as shown on the following page. Risk of death or serious injury if a non-sensing area is created due to incorrect connection.

- **Using line synchronization setting and 12-core cable**  
<Using PNP output>


Interlock function	Valid (manual reset)
External device monitor function	Valid
Auxiliary output 1	Can be used

#### \*Symbols

Switch S1  
Vs to Vs – 2.5V (sink current 5mA or less): Emission halt (Note 1), Open: Emission  
K1, K2: External device (forcible guide relay or magnetic contactor)

Notes: 1) Vs is the supply voltage.

2) For information on reset, refer to “3-2 Interlock Function (8-core cable, 12-core cable)”.

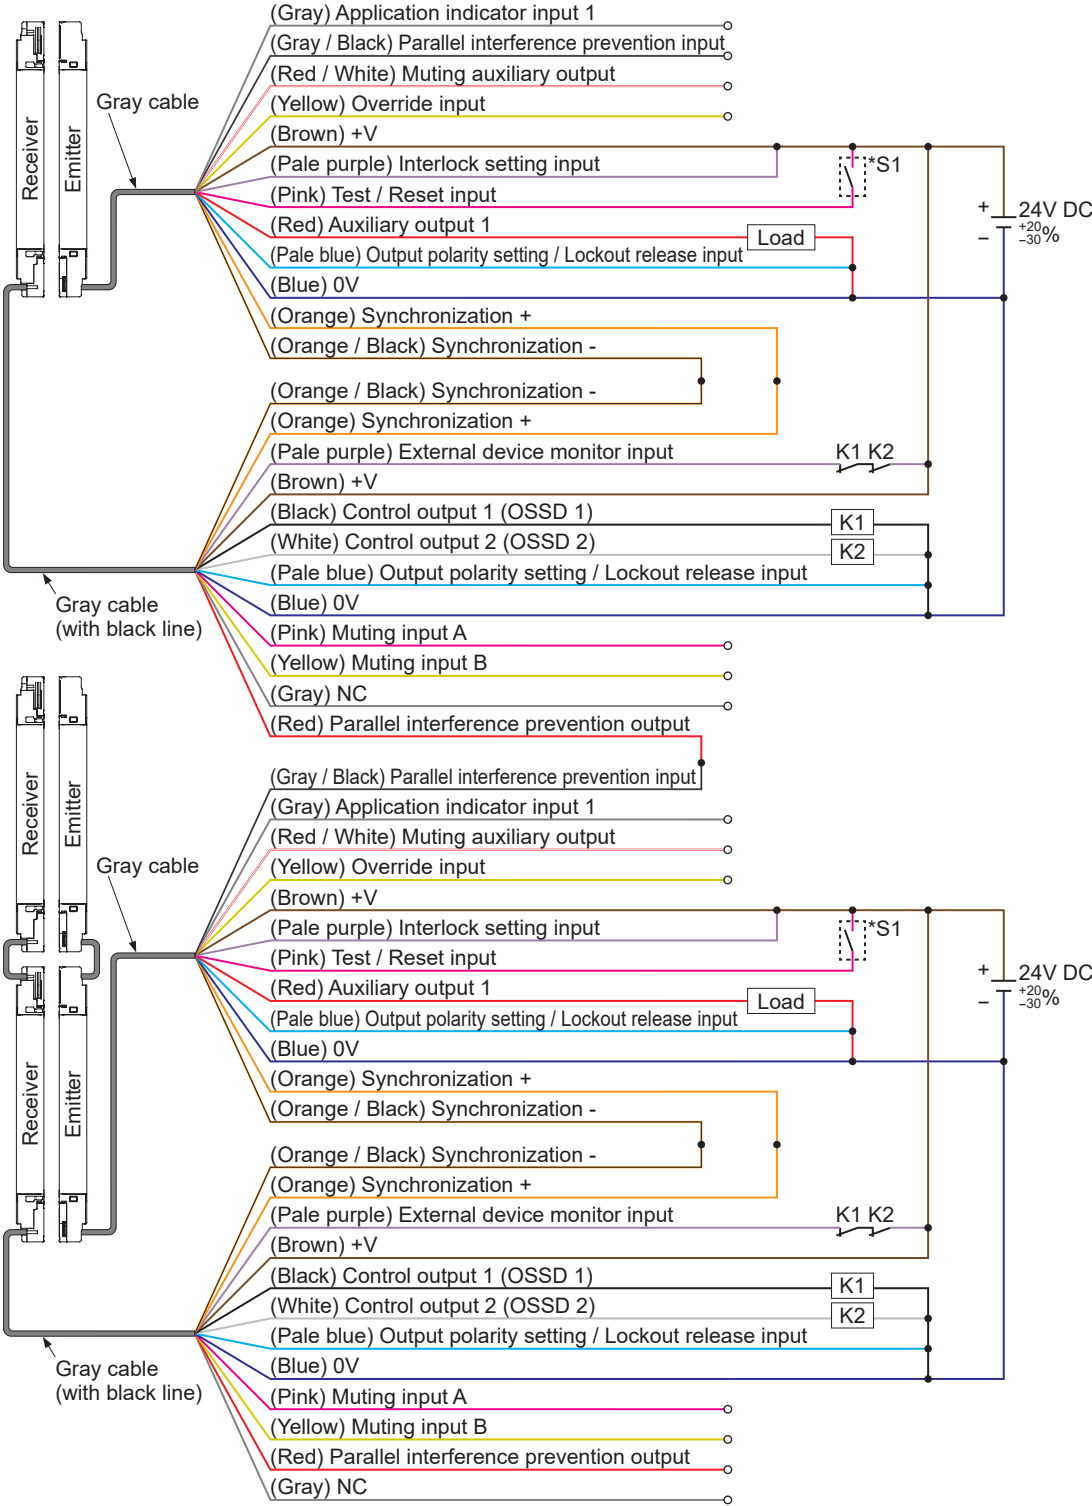

## Wiring

---


### <Using NPN output>

Interlock function	Valid (manual reset)
External device monitor function	Valid
Auxiliary output 1	Can be used

### \*Symbols

Switch S1 0 to +2.5V (source current 5mA or less): Emission halt, Open: Emission K1, K2: External device (forcible guide relay or magnetic contactor)
---

Note: For information on reset, refer to “**3-2 Interlock Function (8-core cable, 12-core cable)**”.

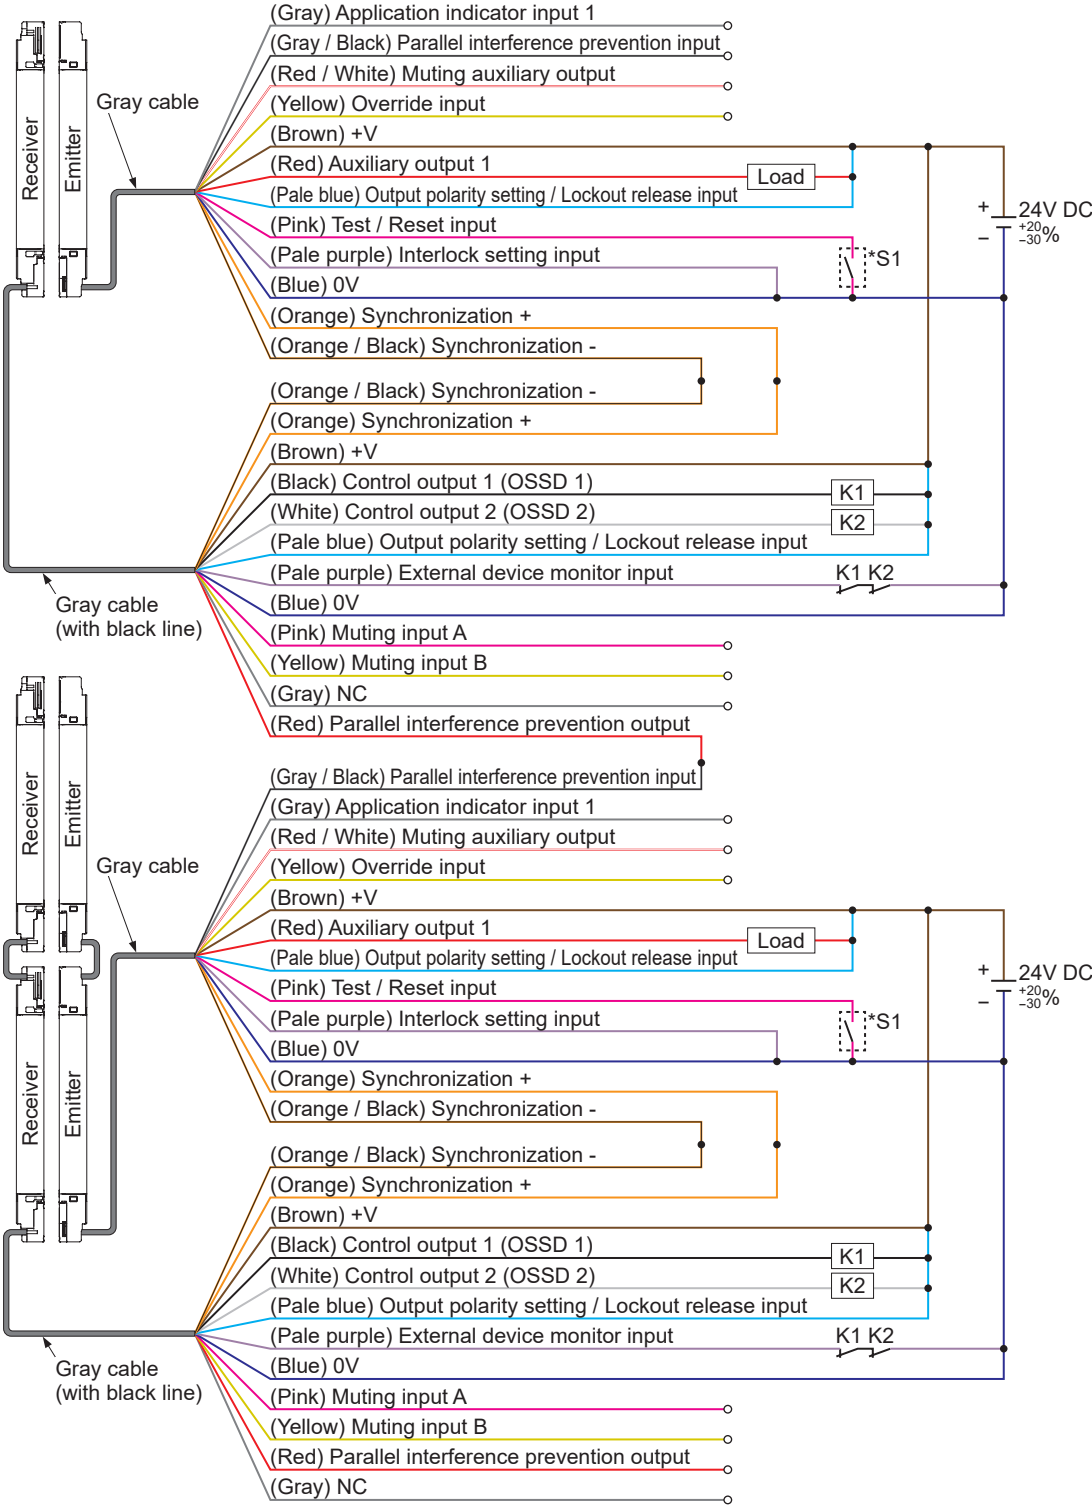

# Adjustment


## 2-6 Adjustment

### 2-6-1 Beam Adjustment

Step 1 Supply power to the device.


Step 2 When the device starts, “P” (when PNP output is set) or “N” (when NPN output is set) lights yellow on the digital indicator.

Step 3 Make sure that the digital indicators on the emitter and receiver are OFF.  
If a yellow number blinks or lights in the digital indicator, refer to “Chapter 5 Troubleshooting” and inform your technician.

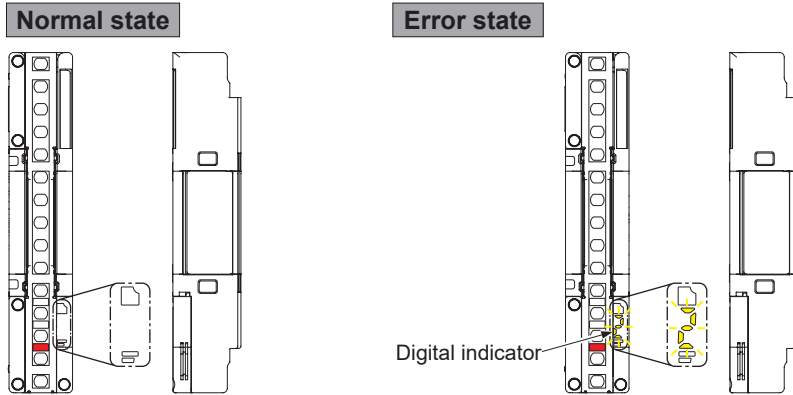


Step 4 Check the upper application indicator and lower application indicator on the emitter, the operation indicator, the upper application indicator and lower application indicator on the receiver, and the OSSD indicator.



If the upper application indicator and lower application indicator light red or are OFF, or the operation indicator and OSSD indicator light red, the beam axes are out of alignment.

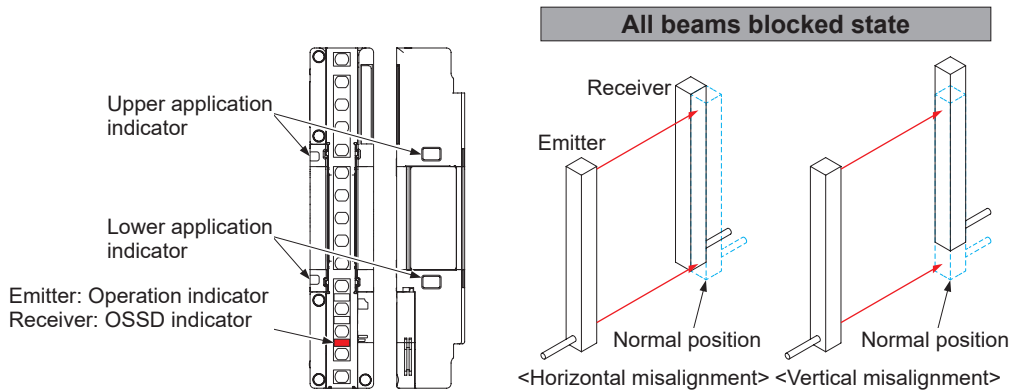




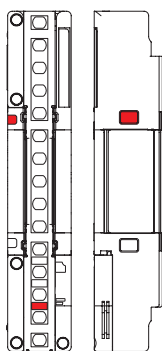

### Light only received at top end

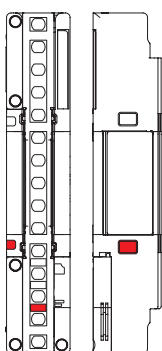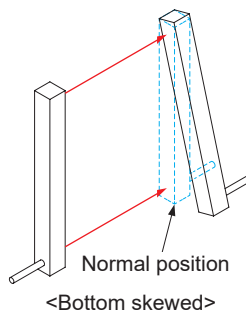


### Light only received at bottom end

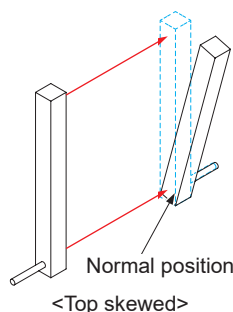


Note: When optical synchronization is selected, the operation indicator of the emitter lights green, and the upper application indicator and lower application indicator are turns OFF.

Step 5 Adjust the emitter or receiver (horizontally / vertically, angle) so that the upper application indicator and lower application indicator light blue, operation indicator and OSSD indicator light green.

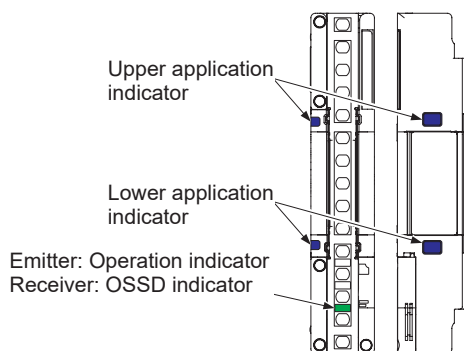

### Angle adjustment

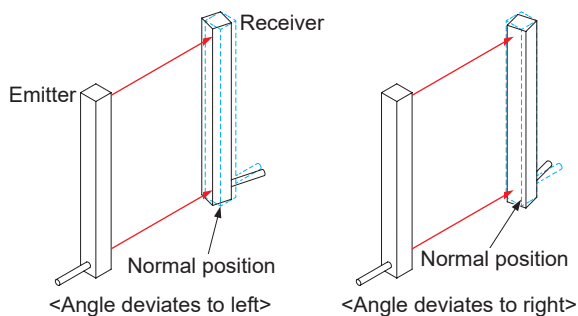

#### <Reference>

For series connection, when all the devices connected in series receive light, the upper and lower application indicators light blue and the operation indicator and OSSD indicator light green.


# Adjustment

## <When mounting bracket is installed>

### ● Beam adjustment mounting bracket, Compatible bracket

Loosen the four hexagon socket head bolts with washers [M4 (length: 8mm), width across flats: 3mm] that hold the mounting bracket in place, and rotate the emitter and receiver to adjust the angle.



The angle of the emitter and receiver can be finely adjusted within the range of  $\pm 45^\circ$ .

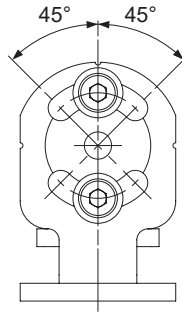

### ● No dead-space beam adjustment mounting bracket

Loosen the hexagon-socket head bolt (M5, silver) for beam adjustment on the mounting bracket, and rotate the emitter and receiver to adjust the angle.

The angle of the emitter and receiver can be finely adjusted within the range of  $\pm 7.5^\circ$ .

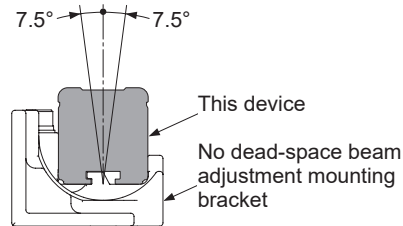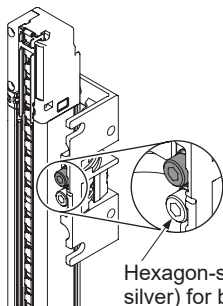


## CAUTION

- Do not remove the hexagon-socket head bolt (M5, silver) for beam adjustment from this product.
- If it is still difficult to rotate the emitter or receiver even after the hexagon-socket head bolt (M5, silver) for beam adjustment is loosened, loosen the hexagon-socket head bolt [M5] or hex bolt [M6] securing the no dead-space beam adjustment mounting bracket on the mounting surface.


Step 6 Check the stable light reception indicator and digital indicator on the emitter and receiver. If the stable light reception indicator lights orange the device is in the unstable light reception state.

### Unstable light reception: Light intensity / Level 1

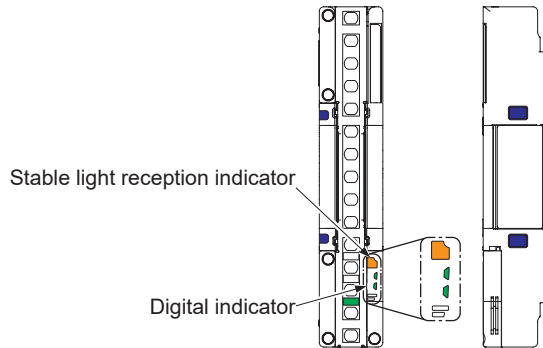


Step 7 If the stable light reception indicator lights green the device is in the stable light reception state.


### Stable light reception state: Light intensity / Level 1

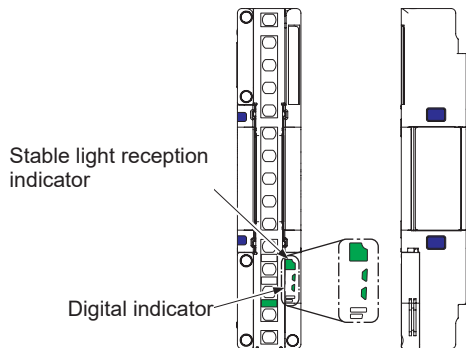

### Stable light reception state: Light intensity / Level 2

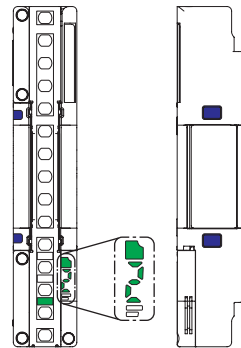

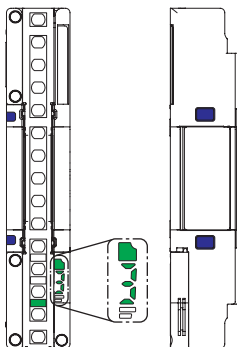

### Stable light reception state: Light intensity / Level 3



## Adjustment


### 2-6-2 Operation Test

Step 1 Supply power to the device.

Step 2 When the device starts, “” (when PNP output is set) or “” (when NPN output is set) lights up in yellow on the digital indicator.

Step 3 Make sure that the digital indicators on the emitter and receiver are OFF.  
If a yellow number blinks or lights in the digital indicator, refer to “**Chapter 5 Troubleshooting**” and inform your technician.

Step 4 Move the test rod ( $\varnothing 14\text{mm}$  for **SF4D-F**,  $\varnothing 25\text{mm}$  for **SF4D-H**,  $\varnothing 45\text{mm}$  for **SF4D-A**) up and down directly in front of the emitter (A), midway between the emitter and the receiver (B), and directly in front of the receiver (C) (3 positions) at a speed of 1,600mm/sec. or less.

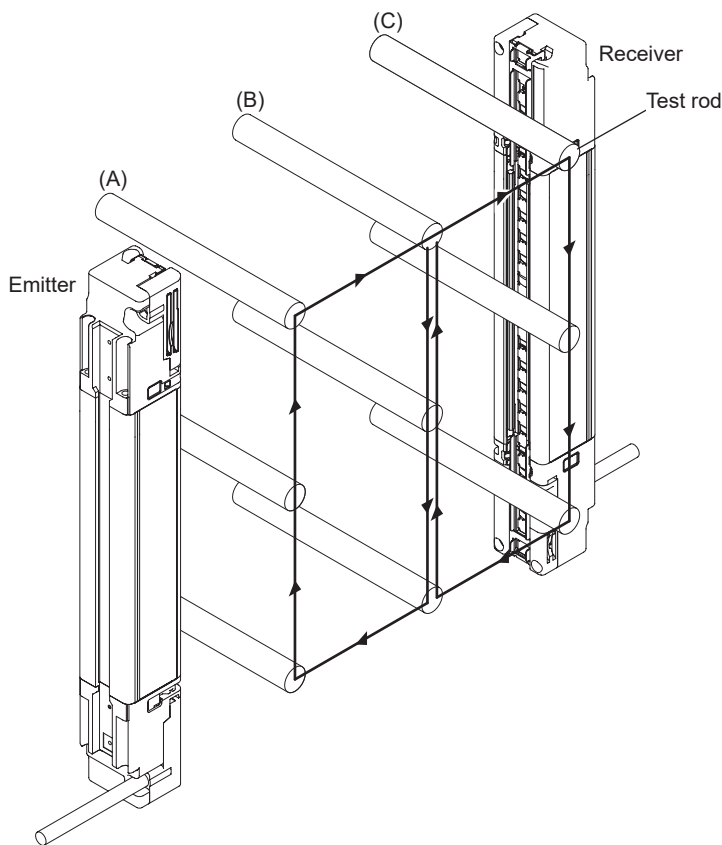

Step 5 While moving the test rod in Step 4, verify that the control output (OSSD 1 / 2) is OFF while the test rod is in the sensing area. In addition, verify that the OSSD indicator of the receiver and the operation indicator of the emitter both light red.

If the operation of the control output (OSSD 1 / 2) and the indicators of the emitter and receiver do not match the movement of the test rod, refer to “**Chapter 5 Troubleshooting**” and inform your technician.

#### <Reference>

If an indicator indicates the light-received state when the test rod blocks light, make sure there are no reflective objects or scattered light in the vicinity.

## 2-6-3 Indicator Operation

- Emitter indicator operation 1

<Conditions: Line synchronization, Test input function invalid, Interlock function invalid>

Emitter	Light blocked state				Light received state (all beam channels)			
	Top end beam channel				Unstable light reception state	Stable light reception state		
	Light blocked	Light received	Light blocked	Light received				
	Bottom end beam				Received light intensity			
	Light blocked	Light blocked	Light received	Light received				
Other beam channels				Level 1	Level 1	Level 2	Level 3	
Light received / Light blocked	Light received / Light blocked	Light received / Light blocked	Light blocked	Level 1	Level 1	Level 2	Level 3	
Control output (OSSD 1 / 2)	OFF	OFF	OFF	OFF	ON	ON	ON	ON
Upper application indicator (Note 1)	Turns OFF	Lights red	Turns OFF	Lights red	Lights blue	Lights blue	Lights blue	Lights blue
Lower application indicator (Note 1)	Turns OFF	Turns OFF	Lights red	Lights red	Lights blue	Lights blue	Lights blue	Lights blue
Stable light reception indicator	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Lights orange	Lights green	Lights green	Lights green
Digital indicator	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Green 1 lights	Green 1 lights	Green 2 lights	Green 3 lights
Frequency indicator	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Light emission intensity control indicator (Note 2)	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Test indicator	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Operation indicator	Lights red	Lights red	Lights red	Lights red	Lights green	Lights green	Lights green	Lights green

Notes: 1) The states of the upper application indicator and lower application indicator can also be checked from the side of the device.

2) The light emission intensity control indicator (orange) lights orange when long mode is selected with the DIP switches.

# Adjustment

## ● Receiver indicator operation 1

<Conditions: Line synchronization, Test input function invalid, Interlock function invalid>

Receiver	Light blocked state				Light received state (all beam channels)			
	Top end beam channel				Unstable light reception state	Stable light reception state		
	Light blocked	Light received	Light blocked	Light received				
	Bottom end beam				Received light intensity			
	Light blocked	Light blocked	Light received	Light received				
Other beam channels				Level 1	Level 1	Level 2	Level 3	
Light received / Light blocked	Light received / Light blocked	Light received / Light blocked	Light blocked	Level 1	Level 1	Level 2	Level 3	
Control output (OSSD 1 / 2)	OFF	OFF	OFF	OFF	ON	ON	ON	ON
Upper application indicator (Note 1)	Turns OFF	Lights red	Turns OFF	Lights red	Lights blue	Lights blue	Lights blue	Lights blue
Lower application indicator (Note 1)	Turns OFF	Turns OFF	Lights red	Lights red	Lights blue	Lights blue	Lights blue	Lights blue
Stable light reception indicator	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Lights orange	Lights green	Lights green	Lights green
Digital indicator	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Green 1 lights	Green 1 lights	Green 2 lights	Green 3 lights
Frequency indicator	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Function setting indicator (Note 2)	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Interlock indicator	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
OSSD indicator	Lights red	Lights red	Lights red	Lights red	Lights green	Lights green	Lights green	Lights green

Notes: 1) The states of the upper application indicator and lower application indicator can also be checked from the side of the device.

2) The function setting indicator (yellow / orange) lights yellow when the blanking function or parallel connection is used, and blinks orange when the communication module **SF4D-TM1** (option) is connected.

## • Emitter indicator operation 2

<Conditions: Line synchronization, Test input function valid, Interlock function invalid>

Emitter	Light blocked state				Light received state (all beam channels)			
	Top end beam channel				Unstable light reception state	Stable light reception state		
	Light blocked	Light received	Light blocked	Light received				
	Bottom end beam				Received light intensity			
	Light blocked	Light blocked	Light received	Light received				
Other beam channels				Level 1	Level 1	Level 2	Level 3	
Light received / Light blocked	Light received / Light blocked	Light received / Light blocked	Light blocked					
Control output (OSSD 1 / 2)	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
Upper application indicator (Note 1)	Turns OFF	Lights red	Turns OFF	Lights red	Lights red	Lights red	Lights red	Lights red
Lower application indicator (Note 1)	Turns OFF	Turns OFF	Lights red	Lights red	Lights red	Lights red	Lights red	Lights red
Stable light reception indicator	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Digital indicator	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Frequency indicator	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Light emission intensity control indicator (Note 2)	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Test indicator	Lights orange	Lights orange	Lights orange	Lights orange	Lights orange	Lights orange	Lights orange	Lights orange
Operation indicator	Lights red	Lights red	Lights red	Lights red	Lights red	Lights red	Lights red	Lights red

Notes: 1) The states of the upper application indicator and lower application indicator can also be checked from the side of the device.

2) The light emission intensity control indicator (orange) lights orange when long mode is selected with the DIP switches.

# Adjustment

## • Receiver indicator operation 2

<Conditions: Line synchronization, Test input function valid, Interlock function invalid>

Receiver	Light blocked state				Light received state (all beam channels)			
	Top end beam channel				Unstable light reception state	Stable light reception state		
	Light blocked	Light received	Light blocked	Light received				
	Bottom end beam				Received light intensity			
	Light blocked	Light blocked	Light received	Light received				
Other beam channels				Level 1	Level 1	Level 2	Level 3	
Light received / Light blocked	Light received / Light blocked	Light received / Light blocked	Light blocked					
Control output (OSSD 1 / 2)	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
Upper application indicator (Note 1)	Turns OFF	Lights red	Turns OFF	Lights red	Lights red	Lights red	Lights red	Lights red
Lower application indicator (Note 1)	Turns OFF	Turns OFF	Lights red	Lights red	Lights red	Lights red	Lights red	Lights red
Stable light reception indicator	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Digital indicator	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Frequency indicator	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Function setting indicator (Note 2)	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Interlock indicator	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
OSSD indicator	Lights red	Lights red	Lights red	Lights red	Lights red	Lights red	Lights red	Lights red

Notes: 1) The states of the upper application indicator and lower application indicator can also be checked from the side of the device.

2) The function setting indicator (yellow / orange) lights yellow when the blanking function or parallel connection is used, and blinks orange when the communication module **SF4D-TM1** (option) is connected.



## • Emitter indicator operation 3

<Conditions: Line synchronization, Test input function invalid, Interlock function valid>

Emitter	Light blocked state				Light received state (all beam channels)				
	Top end beam channel				Interlock state	Unstable light reception state	Stable light reception state		
	Light blocked	Light received	Light blocked	Light received					
	Bottom end beam				Received light intensity				
	Light blocked	Light blocked	Light received	Light received					
Other beam channels				Level 3	Level 1	Level 1	Level 2	Level 3	
Light received / Light blocked	Light received / Light blocked	Light received / Light blocked	Light blocked						
Interlock state					Interlock released state				
Control output (OSSD 1 / 2)	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	ON
Upper application indicator (Note 1)	Turns OFF	Lights red	Turns OFF	Lights red	Lights red	Lights blue	Lights blue	Lights blue	Lights blue
Lower application indicator (Note 1)	Turns OFF	Turns OFF	Lights red	Lights red	Lights red	Lights blue	Lights blue	Lights blue	Lights blue
Stable light reception indicator	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Lights green	Lights orange	Lights green	Lights green	Lights green
Digital indicator	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Green 3 lights	Green 1 lights	Green 1 lights	Green 2 lights	Green 3 lights
Frequency indicator	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Light emission intensity control indicator (Note 2)	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Test indicator	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Operation indicator	Lights red	Lights red	Lights red	Lights red	Lights red	Lights green	Lights green	Lights green	Lights green

Notes: 1) The states of the upper application indicator and lower application indicator can also be checked from the side of the device.

2) The light emission intensity control indicator (orange) lights orange when long mode is selected with the DIP switches.

# Adjustment

## • Receiver indicator operation 3

<Conditions: Line synchronization, Test input function invalid, Interlock function valid>

Receiver	Light blocked state				Light received state (all beam channels)				
	Top end beam channel				Interlock state	Unstable light reception state	Stable light reception state		
	Light blocked	Light received	Light blocked	Light received					
	Bottom end beam				Received light intensity				
	Light blocked	Light blocked	Light received	Light received					
	Other beam channels				Level 3	Level 1	Level 1	Level 2	Level 3
Light received / Light blocked	Light received / Light blocked	Light received / Light blocked	Light blocked						
Interlock state					Interlock released state				
Control output (OSSD 1 / 2)	OFF	OFF	OFF	OFF	OFF	ON	ON	ON	ON
Upper application indicator (Note 1)	Turns OFF	Lights red	Turns OFF	Lights red	Lights red	Lights blue	Lights blue	Lights blue	Lights blue
Lower application indicator (Note 1)	Turns OFF	Turns OFF	Lights red	Lights red	Lights red	Lights blue	Lights blue	Lights blue	Lights blue
Stable light reception indicator	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Lights green	Lights orange	Lights green	Lights green	Lights green
Digital indicator	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Green 3 lights	Green 1 lights	Green 1 lights	Green 2 lights	Green 3 lights
Frequency indicator	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Function setting indicator (Note 2)	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Interlock indicator	Lights yellow	Lights yellow	Lights yellow	Lights yellow	Lights yellow	Turns OFF	Turns OFF	Turns OFF	Turns OFF
OSSD indicator	Lights red	Lights red	Lights red	Lights red	Lights red	Lights green	Lights green	Lights green	Lights green

Notes: 1) The states of the upper application indicator and lower application indicator can also be checked from the side of the device.

2) The function setting indicator (yellow / orange) lights yellow when the blanking function or parallel connection is used, and blinks orange when the communication module **SF4D-TM1** (option) is connected.

## • Emitter indicator operation 4

<Conditions: Optical synchronization (frequency 1), Test input function invalid, Interlock function invalid>

Emitter	Light blocked state				Light received state (all beam channels)			
	Top end beam channel				Unstable light reception state	Stable light reception state		
	Light blocked	Light received	Light blocked	Light received				
	Bottom end beam				Received light intensity			
	Light blocked	Light blocked	Light received	Light received				
Other beam channels				Level 1	Level 1	Level 2	Level 3	
Light received / Light blocked	Light received / Light blocked	Light received / Light blocked	Light blocked					
Control output (OSSD 1 / 2)	OFF	OFF	OFF	OFF	ON	ON	ON	ON
Upper application indicator	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Lower application indicator	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Stable light reception indicator	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Digital indicator	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Frequency indicator	Lights orange	Lights orange	Lights orange	Lights orange	Lights orange	Lights orange	Lights orange	Lights orange
Light emission intensity control indicator (Note)	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Test indicator	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Operation indicator	Lights green	Lights green	Lights green	Lights green	Lights green	Lights green	Lights green	Lights green

Note: The light emission intensity control indicator (orange) lights orange when long mode is selected with the DIP switches.

# Adjustment

## ● Receiver indicator operation 4

<Conditions: Optical synchronization (frequency 1), Test input function invalid, Interlock function invalid>

Receiver	Light blocked state				Light received state (all beam channels)			
	Top end beam channel				Unstable light reception state	Stable light reception state		
	Light blocked	Light received	Light blocked	Light received				
	Bottom end beam				Received light intensity			
	Light blocked	Light blocked	Light received	Light received				
Other beam channels				Level 1	Level 1	Level 2	Level 3	
Light received / Light blocked	Light received / Light blocked	Light received / Light blocked	Light blocked					
Control output (OSSD 1 / 2)	OFF	OFF	OFF	OFF	ON	ON	ON	ON
Upper application indicator (Note 1)	Turns OFF	Lights red	Turns OFF	Lights red	Lights blue	Lights blue	Lights blue	Lights blue
Lower application indicator (Note 1)	Turns OFF	Turns OFF	Lights red	Lights red	Lights blue	Lights blue	Lights blue	Lights blue
Stable light reception indicator	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Lights orange	Lights green	Lights green	Lights green
Digital indicator	Yellow c lights	Turns OFF	Turns OFF	Turns OFF	Green 1 lights	Green 1 lights	Green 2 lights	Green 3 lights
Frequency indicator	Lights orange	Lights orange	Lights orange	Lights orange	Lights orange	Lights orange	Lights orange	Lights orange
Function setting indicator (Note 2)	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Interlock indicator	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
OSSD indicator	Lights red	Lights red	Lights red	Lights red	Lights green	Lights green	Lights green	Lights green

Notes: 1) The states of the upper application indicator and lower application indicator can also be checked from the side of the device.

2) The function setting indicator (yellow / orange) lights yellow when the blanking function or parallel connection is used, and blinks orange when the communication module **SF4D-TM1** (option) is connected.

## • Emitter indicator operation 5

<Conditions: Optical synchronization (frequency 1), Test input function valid, Interlock function invalid>

Emitter	Light blocked state				Light received state (all beam channels)			
	Top end beam channel				Unstable light reception state	Stable light reception state		
	Light blocked	Light received	Light blocked	Light received				
	Bottom end beam				Received light intensity			
	Light blocked	Light blocked	Light received	Light received				
Other beam channels				Level 1	Level 1	Level 2	Level 3	
Light received / Light blocked	Light received / Light blocked	Light received / Light blocked	Light blocked					
Control output (OSSD 1 / 2)	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
Upper application indicator	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Lower application indicator	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Stable light reception indicator	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Digital indicator	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Frequency indicator	Lights orange	Lights orange	Lights orange	Lights orange	Lights orange	Lights orange	Lights orange	Lights orange
Light emission intensity control indicator (Note)	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Test indicator	Lights orange	Lights orange	Lights orange	Lights orange	Lights orange	Lights orange	Lights orange	Lights orange
Operation indicator	Lights green	Lights green	Lights green	Lights green	Lights green	Lights green	Lights green	Lights green

Note: The light emission intensity control indicator (orange) lights orange when long mode is selected with the DIP switches.

# Adjustment

## ● Receiver indicator operation 5

<Conditions: Optical synchronization (frequency 1), Test input function valid, Interlock function invalid>







Receiver	Light blocked state				Light received state (all beam channels)			
	Top end beam channel				Unstable light reception state	Stable light reception state		
	Light blocked	Light received	Light blocked	Light received				
	Bottom end beam				Received light intensity			
	Light blocked	Light blocked	Light received	Light received				
Other beam channels				Level 1	Level 1	Level 2	Level 3	
Light received / Light blocked	Light received / Light blocked	Light received / Light blocked	Light blocked	Level 1	Level 1	Level 2	Level 3	
Control output (OSSD 1 / 2)	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
Upper application indicator (Note 1)	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Lower application indicator (Note 1)	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Stable light reception indicator	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Digital indicator	Yellow c lights	Yellow c lights	Yellow c lights	Yellow c lights	Yellow c lights	Yellow c lights	Yellow c lights	Yellow c lights
Frequency indicator	Lights orange	Lights orange	Lights orange	Lights orange	Lights orange	Lights orange	Lights orange	Lights orange
Function setting indicator (Note 2)	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Interlock indicator	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
OSSD indicator	Lights red	Lights red	Lights red	Lights red	Lights red	Lights red	Lights red	Lights red

Notes: 1) The states of the upper application indicator and lower application indicator can also be checked from the side of the device.

2) The function setting indicator (yellow / orange) lights yellow when the blanking function or parallel connection is used, and blinks orange when the communication module **SF4D-TM1** (option) is connected.

## ● Series connection, emitter indicator operation 1

<Conditions: Line synchronization, Test input function invalid, Interlock function invalid>

	Light received state (all beam channels)			Light received state (all beam channels)	Light blocked state	Light received state (all beam channels)
	Main sensor	Sub sensor 1	Sub sensor 2			
Emitter	Stable light reception state • Received light intensity Level 3	Stable light reception state • Received light intensity Level 3	Stable light reception state • Received light intensity Level 3	Stable light reception state • Received light intensity Level 3	Top end beam channel: Light received Bottom end beam channel: Light received Other beam channels: Light blocked	Stable light reception state • Received light intensity Level 3
						
Control output (OSSD 1 / 2)	ON	ON	ON	OFF	OFF	OFF
Upper application indicator (Note 1)	Lights blue	Lights blue	Lights blue	Lights red	Lights red	Lights red
Lower application indicator (Note 1)	Lights blue	Lights blue	Lights blue	Lights red	Lights red	Lights red
Stable light reception indicator	Lights green	Lights green	Lights green	Lights green	Turns OFF	Lights green
Digital indicator	Green 3 lights	Green 3 lights	Green 3 lights	Green 3 lights	Turns OFF	Green 3 lights
Frequency indicator	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Light emission intensity control indicator (Note 2)	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Test indicator	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Operation indicator	Lights green	Lights green	Lights green	Lights red	Lights red	Lights red








Notes: 1) The states of the upper application indicator and lower application indicator can also be checked from the side of the device.

2) The light emission intensity control indicator (orange) lights orange when long mode is selected with the DIP switches.

# Adjustment

## • Series connection, receiver indicator operation 1

<Conditions: Line synchronization, Test input function invalid, Interlock function invalid>

Receiver	Light received state (all beam channels)			Light received state (all beam channels)	Light blocked state	Light received state (all beam channels)
	Main sensor	Sub sensor 1	Sub sensor 2	Main sensor	Sub sensor 1	Sub sensor 2
	Stable light reception state • Received light intensity Level 3	Stable light reception state • Received light intensity Level 3	Stable light reception state • Received light intensity Level 3	Stable light reception state • Received light intensity Level 3	Stable light reception state • Received light intensity Level 3	Top end beam channel: Light received Bottom end beam channel: Light received Other beam channels: Light blocked
						
Control output (OSSD 1 / 2)	ON	ON	ON	OFF	OFF	OFF
Upper application indicator (Note 1)	Lights blue	Lights blue	Lights blue	Lights red	Lights red	Lights red
Lower application indicator (Note 1)	Lights blue	Lights blue	Lights blue	Lights red	Lights red	Lights red
Stable light reception indicator	Lights green	Lights green	Lights green	Lights green	Turns OFF	Lights green
Digital indicator	Green 3 lights	Green 3 lights	Green 3 lights	Green 3 lights	Turns OFF	Green 3 lights
Frequency indicator	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Function setting indicator (Note 2)	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Interlock indicator	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
OSSD indicator	Lights green	Lights green	Lights green	Lights red	Lights red	Lights red







Notes: 1) The states of the upper application indicator and lower application indicator can also be checked from the side of the device.

2) The function setting indicator (yellow / orange) lights yellow when the blanking function or parallel connection is used, and blinks orange when the communication module **SF4D-TM1** (option) is connected.



## ● Series connection, emitter indicator operation 2

<Conditions: Optical synchronization (frequency 1), Test input function invalid, Interlock function invalid>








	Light received state (all beam channels)			Light received state (all beam channels)	Light blocked state	Light received state (all beam channels)
	Main sensor	Sub sensor 1	Sub sensor 2			
Emitter	Stable light reception state • Received light intensity Level 3	Stable light reception state • Received light intensity Level 3	Stable light reception state • Received light intensity Level 3	Stable light reception state • Received light intensity Level 3	Top end beam channel: Light received Bottom end beam channel: Light received Other beam channels: Light blocked	Stable light reception state • Received light intensity Level 3
						
Control output (OSSD 1 / 2)	ON	ON	ON	OFF	OFF	OFF
Upper application indicator	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Lower application indicator	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Stable light reception indicator	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Digital indicator	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Frequency indicator	Lights orange	Lights orange	Lights orange	Lights orange	Lights orange	Lights orange
Light emission intensity control indicator (Note)	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Test indicator	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Operation indicator	Lights green	Lights green	Lights green	Lights green	Lights green	Lights green

Note: The light emission intensity control indicator (orange) lights orange when long mode is selected with the DIP switches.

# Adjustment

## • Series connection, receiver indicator operation 2

<Conditions: Optical synchronization (frequency 1), Test input function invalid, Interlock function invalid>

Receiver	Light received state (all beam channels)			Light received state (all beam channels)	Light blocked state	Light received state (all beam channels)
	Main sensor	Sub sensor 1	Sub sensor 2	Main sensor	Sub sensor 1	Sub sensor 2
	Stable light reception state • Received light intensity Level 3	Stable light reception state • Received light intensity Level 3	Stable light reception state • Received light intensity Level 3	Stable light reception state • Received light intensity Level 3	Stable light reception state • Received light intensity Level 3	Top end beam channel: Light received Bottom end beam channel: Light received Other beam channels: Light blocked
						
Control output (OSSD 1 / 2)	ON	ON	ON	OFF	OFF	OFF
Upper application indicator (Note 1)	Lights blue	Lights blue	Lights blue	Lights red	Lights red	Lights red
Lower application indicator (Note 1)	Lights blue	Lights blue	Lights blue	Lights red	Lights red	Lights red
Stable light reception indicator	Lights green	Lights green	Lights green	Lights green	Turns OFF	Lights green
Digital indicator	Green 3 lights	Green 3 lights	Green 3 lights	Green 3 lights	Turns OFF	Green 3 lights
Frequency indicator	Lights orange	Lights orange	Lights orange	Lights orange	Lights orange	Lights orange
Function setting indicator (Note 2)	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Interlock indicator	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
OSSD indicator	Lights green	Lights green	Lights green	Lights red	Lights red	Lights red

Notes: 1) The states of the upper application indicator and lower application indicator can also be checked from the side of the device.

2) The function setting indicator (yellow / orange) lights yellow when the blanking function or parallel connection is used, and blinks orange when the communication module **SF4D-TM1** (option) is connected.

## ● Emitter indicator operation 1 when error occurs

When the device detects an error, the control output (OSSD 1 / 2) turns OFF and a number blinks or lights yellow in the digital indicator.

- When an error is detected in the emitter, the emitter enters the lockout state. Light emission stops, and thus the control output (OSSD 1 / 2) turns OFF.
- When an error is detected in the receiver, the receiver enters the lockout state and the control output (OSSD 1 / 2) turns OFF.

**<Conditions: Line synchronization, Test input function invalid, Interlock function invalid>  
Example: Series connection error ("2" blinks yellow)**

Emitter	Light blocked state				Light received state (all beam channels)
	Top end beam channel				
	Light blocked	Light received	Light blocked	Light received	
	Bottom end beam				
	Light blocked	Light blocked	Light received	Light received	
Other beam channels					
Light received / Light blocked	Light blocked	Light blocked	Light blocked		
Control output (OSSD 1 / 2)	OFF	OFF	OFF	OFF	OFF
Upper application indicator (Note 1)	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Lower application indicator (Note 1)	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Stable light reception indicator (Note 2)	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Digital indicator	Yellow number blinks or lights	Yellow number blinks or lights	Yellow number blinks or lights	Yellow number blinks or lights	Yellow number blinks or lights
Frequency indicator	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Light emission intensity control indicator (Note 3)	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Test indicator	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Operation indicator	Lights red	Lights red	Lights red	Lights red	Lights red

Notes: 1) The states of the upper application indicator and lower application indicator can also be checked from the side of the device.

2) The stable light reception indicator (green) does not light in the lockout state.

3) The light emission intensity control indicator (orange) lights orange when long mode is selected with the DIP switches.

4) For details on yellow blinking or lit numbers in the digital indicator, refer to "**Chapter 5 Troubleshooting**".

## Adjustment

- Receiver indicator operation 1 when error occurs

<Conditions: Line synchronization, Test input function invalid, Interlock function invalid>

Example: Series connection error (“2” blinks yellow)

Receiver	Light blocked state				Light received state (all beam channels)
	Top end beam channel				
	Light blocked	Light received	Light blocked	Light received	
	Bottom end beam				
	Light blocked	Light blocked	Light received	Light received	
	Other beam channels				
Light received / Light blocked	Light blocked	Light blocked	Light blocked		
Control output (OSSD 1 / 2)	OFF	OFF	OFF	OFF	OFF
Upper application indicator (Note 1)	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Lower application indicator (Note 1)	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Stable light reception indicator (Note 2)	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Digital indicator	Yellow number blinks or lights	Yellow number blinks or lights	Yellow number blinks or lights	Yellow number blinks or lights	Yellow number blinks or lights
Frequency indicator	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Function setting indicator (Note 3)	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Interlock indicator	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
OSSD indicator	Lights red	Lights red	Lights red	Lights red	Lights red

Notes: 1) The states of the upper application indicator and lower application indicator can also be checked from the side of the device.

2) The stable light reception indicator (green) does not light in the lockout state.

3) The function setting indicator (yellow / orange) lights yellow when the blanking function or parallel connection is used, and blinks orange when the communication module **SF4D-TM1** (option) is connected.

4) For details on yellow blinking or lit numbers in the digital indicator, refer to “**Chapter 5 Troubleshooting**”.

After removing the cause of the error, you must turn the power OFF and then ON (the device will not recover automatically).

Cause of error: Control output (OSSD) short, scattered light detected, sensor failure, etc.

Refer to “**Chapter 5 Troubleshooting**” to remove the cause of the problem.

## • Emitter indicator operation 2 when error occurs

When the device detects an error, the control output (OSSD 1 / 2) turns OFF and a number blinks or lights yellow in the digital indicator.

- When an error is detected in the emitter, the emitter enters the lockout state. Light emission stops, and thus the control output (OSSD 1 / 2) turns OFF.
- When an error is detected in the receiver, the receiver enters the lockout state and the control output (OSSD 1 / 2) turns OFF.

<Conditions: Optical synchronization (frequency 1), Test input function invalid, Interlock function invalid>

Example: Series connection error ("2" blinks yellow)

Emitter	Light blocked state				Light received state (all beam channels)	Error detected in receiver
	Top end beam channel					
	Light blocked	Light received	Light blocked	Light received		
	Bottom end beam					
	Light blocked	Light blocked	Light received	Light received		
Other beam channels						
Light received / Light blocked	Light received / Light blocked	Light received / Light blocked	Light blocked			
Control output (OSSD 1 / 2)	OFF	OFF	OFF	OFF	OFF	OFF
Upper application indicator	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Lower application indicator	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Stable light reception indicator (Note 1)	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Digital indicator	Yellow number blinks or lights	Yellow number blinks or lights	Yellow number blinks or lights	Yellow number blinks or lights	Yellow number blinks or lights	Turns OFF
Frequency indicator	Lights orange	Lights orange	Lights orange	Lights orange	Lights orange	Lights orange
Light emission intensity control indicator (Note 2)	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Test indicator	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Operation indicator	Lights red	Lights red	Lights red	Lights red	Lights red	Lights green

Notes: 1) The stable light reception indicator (green) does not light in the lockout state.

2) The light emission intensity control indicator (orange) lights orange when long mode is selected with the DIP switches.

3) For details on yellow blinking or lit numbers in the digital indicator, refer to "Chapter 5 Troubleshooting".

## Adjustment

- Receiver indicator operation 2 when error occurs

<Conditions: Optical synchronization (frequency 1), Test input function invalid, Interlock function invalid>

Example: Series connection error (“2” blinks yellow)

Receiver	Light blocked state				Light received state (all beam channels)	Error detected in emitter
	Top end beam channel					
	Light blocked	Light received	Light blocked	Light received		
	Bottom end beam					
	Light blocked	Light blocked	Light received	Light received		
	Other beam channels					
Light received / Light blocked	Light received / Light blocked	Light received / Light blocked	Light blocked			
Control output (OSSD 1 / 2)	OFF	OFF	OFF	OFF	OFF	OFF
Upper application indicator (Note 1)	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Lower application indicator (Note 1)	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Stable light reception indicator (Note 2)	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Digital indicator	Yellow number blinks or lights	Yellow number blinks or lights	Yellow number blinks or lights	Yellow number blinks or lights	Yellow number blinks or lights	Yellow c lights
Frequency indicator	Lights orange	Lights orange	Lights orange	Lights orange	Lights orange	Lights orange
Function setting indicator (Note 3)	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
Interlock indicator	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF	Turns OFF
OSSD indicator	Lights red	Lights red	Lights red	Lights red	Lights red	Lights red

Notes: 1) The states of the upper application indicator and lower application indicator can also be checked from the side of the device.

2) The stable light reception indicator (green) does not light in the lockout state.

3) The function setting indicator (yellow / orange) lights yellow when the blanking function or parallel connection is used, and blinks orange when the communication module **SF4D-TM1** (option) is connected.

4) For details on yellow blinking or lit numbers in the digital indicator, refer to “**Chapter 5 Troubleshooting**”.

After removing the cause of the error, you must turn the power OFF and then ON (the device will not recover automatically).

Cause of error: Control output (OSSD) short, scattered light detected, sensor failure, etc.

Refer to “**Chapter 5 Troubleshooting**” to remove the cause of the problem.

# Chapter 3 Functions

3-1 Self-Diagnosis Function (Common for all cables) .....	100
3-2 Interlock Function (8-core cable, 12-core cable) .....	100
3-3 Lockout Release Function (Common for all cables) .....	102
3-4 Test Input Function (Common for all cables) .....	103
3-5 Auxiliary Output (Non-Safety Output) (8-core cable, 12-core cable) .....	104
3-6 External Device Monitor Function (8-core cable, 12-core cable) .....	105
3-7 Muting Function (12-core cable) .....	107
3-8 Override Function (12-core cable) .....	112
3-9 DIP Switch Settings .....	114
3-10 Application indicator function (12-core cable) .....	116
3-11 Functions That Can be Set Using the Optional Communication Module <b>SF4D-TM1</b> .....	119
3-11-1 Fixed Blanking Function .....	119
3-11-2 Floating Blanking Function .....	120
3-11-3 Interlock Function .....	121
3-11-4 External Device Monitor Function .....	121
3-11-5 Auxiliary Output .....	122
3-11-6 Application Indicator Function .....	123
3-11-7 Muting Function .....	124
3-11-8 Override Function .....	126
3-11-9 Protection Function .....	126
3-11-10 I/O Setting Function .....	126

## Functions

---

### 3-1 Self-Diagnosis Function (Common for all cables)

The device includes a self-diagnosis function.

Self-diagnosis is executed when the power is turned ON and periodically during operation.

If an abnormality is detected, the device is immediately put in the lockout state and the control output (OSSD 1 / 2) is fixed in the OFF state.

Refer to “**Chapter 5 Troubleshooting**” to remove the cause of the problem.

### 3-2 Interlock Function (8-core cable, 12-core cable)

The interlock function prevents the control output (OSSD 1 / 2) from automatically turning ON when the device is in the light-receiving state.

With manual reset selected and the control output (OSSD 1 / 2) in the OFF state (interlock state), execute a reset in the light-receiving state to turn ON the control output (OSSD 1 / 2).

Manual reset / automatic reset can be selected by means of the connection of the interlock setting input wire (pale purple) when the power is turned ON.

Interlock setting input wire (Pale purple)	Interlock function
When using PNP output: Connect to +V When using NPN output: Connect to 0V	Manual reset
Open	Auto reset


#### **WARNING**

- Always verify that nobody is in the danger zone before using the interlock function.  
Risk of death or serious injury.
- Install the reset switch in a location that allows operation from outside the danger zone and which provides a clear view of the entire danger zone.
- When using the device with auto-reset, use a safety relay unit or other device to prevent automatic restart of the system after safety output shutoff. (EN 60204-1)



Manual reset: The control output (OSSD 1 / 2) does not automatically turn ON when the device is in the light-receiving state. The control output (OSSD 1 / 2) turns ON when the device is reset {test / reset input: (open) → [short (+V when using PNP output or 0V when using NPN output)] → (open)} in the light-receiving state.

### <Timing chart>

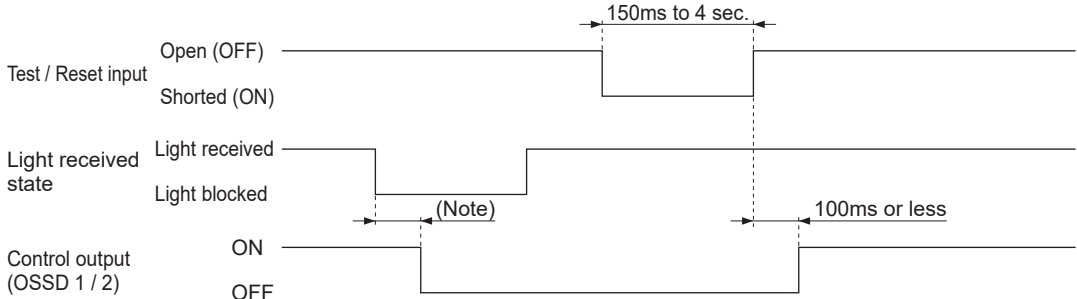


Note: The response time depends on the number of beam channels.

		Response time (OFF response)											
		Main sensor	Sub sensor										
Number of units in series connection	Number of units in parallel connection	1 unit	1 unit	2 units	3 units	4 units	0 unit	0 unit	1 unit	1 unit	2 units	2 units	3 units
			0 unit	0 unit	0 unit	0 unit	1 unit	2 units	1 unit	2 units	1 unit	2 units	1 unit
Number of beam channels	4 to 48	6ms	10ms	10ms	12ms	12ms	14ms	14ms	14ms	14ms	14ms	14ms	14ms
	49 to 96	8ms	10ms	10ms	12ms	12ms	14ms	14ms	14ms	14ms	14ms	14ms	14ms
	97 to 127	10ms	12ms	12ms	14ms	14ms	14ms	14ms	14ms	14ms	14ms	14ms	14ms
	128 to 144	—	12ms	12ms	14ms	14ms	14ms	14ms	14ms	14ms	14ms	14ms	14ms
	145 to 192	—	14ms	14ms	16ms	16ms	14ms	14ms	—	—	—	—	—
	193 to 256	—	16ms	16ms	18ms	18ms	—	—	—	—	—	—	—

Auto reset: The control output (OSSD 1 / 2) automatically turns ON when the device is in the light-receiving state.

### <Timing chart>

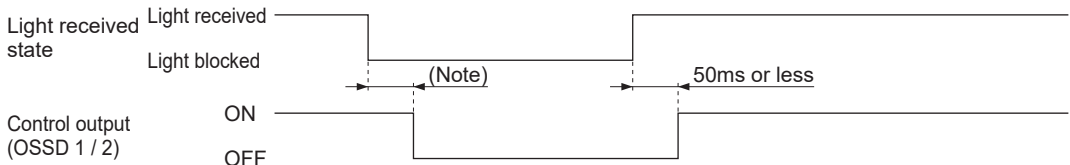

Note: The response time depends on the number of beam channels.

		Response time (OFF response)											
		Main sensor	Sub sensor										
Number of units in series connection	Number of units in parallel connection	1 unit	1 unit	2 units	3 units	4 units	0 unit	0 unit	1 unit	1 unit	2 units	2 units	3 units
			0 unit	0 unit	0 unit	0 unit	1 unit	2 units	1 unit	2 units	1 unit	2 units	1 unit
Number of beam channels	4 to 48	6ms	10ms	10ms	12ms	12ms	14ms	14ms	14ms	14ms	14ms	14ms	14ms
	49 to 96	8ms	10ms	10ms	12ms	12ms	14ms	14ms	14ms	14ms	14ms	14ms	14ms
	97 to 127	10ms	12ms	12ms	14ms	14ms	14ms	14ms	14ms	14ms	14ms	14ms	14ms
	128 to 144	—	12ms	12ms	14ms	14ms	14ms	14ms	14ms	14ms	14ms	14ms	14ms
	145 to 192	—	14ms	14ms	16ms	16ms	14ms	14ms	—	—	—	—	—
	193 to 256	—	16ms	16ms	18ms	18ms	—	—	—	—	—	—	—

### <Reference>


The conditions for interlock activation can be changed using the communication module **SF4D-TM1** (option) and Configurator Light Curtain software.

# Functions


## 3-3 Lockout Release Function (Common for all cables)

This function releases the device from the lockout state and returns it to normal operation. When in the lockout state, the device is returned to normal operation by removing the cause of the lockout, performing lockout release: [open the output polarity setting / lockout release input wire (pale blue) that was short-circuited, and then short-circuit within approx. 150ms to 4 sec.].

### <Timing chart>

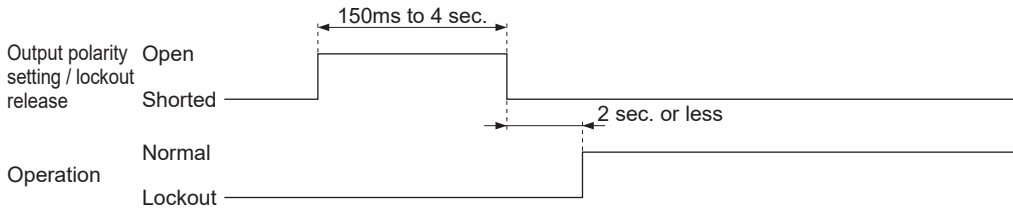


### <Using PNP output>

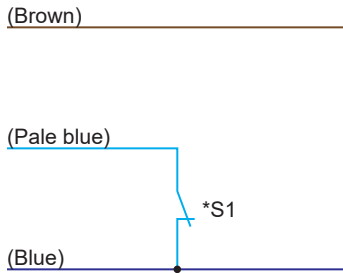

#### \*Switch S1

- Output polarity setting / Lockout release input 0 to +2.5V (source current 5mA or less): Short circuit

### <Using NPN output>

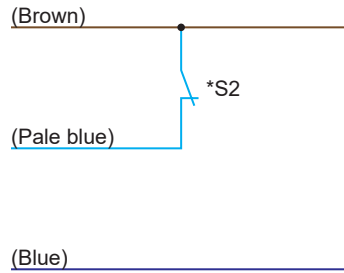

#### \*Switch S2

- Output polarity setting / Lockout release input  $V_s$  to  $V_s - 2.5V$  (sink current 5mA or less): Short circuit (Note)

Note:  $V_s$  is the supply voltage.


### 3-4 Test Input Function (Common for all cables)

The test input function is used to check the operation of the control output (OSSD 1 / 2). This function forcibly turn OFF the control output (OSSD 1 / 2) when the device is in the light receiving state. ON or OFF can be selected for the test input function using the test / reset input wire (pink).

• **Line synchronization**

Light received / Light blocked	Interlock function	Test / Reset input wire (Pink)	Test input	Control output (OSSD 1 / 2) state
Light received state	Manual reset	Open	Invalid	ON
		When using PNP output: Connect to +V When using NPN output: Connect to 0V	Valid	OFF
	Auto reset	Open	Valid	OFF
		When using PNP output: Connect to +V When using NPN output: Connect to 0V	Invalid	ON
Light blocked state	-	-	-	OFF

<Timing chart>

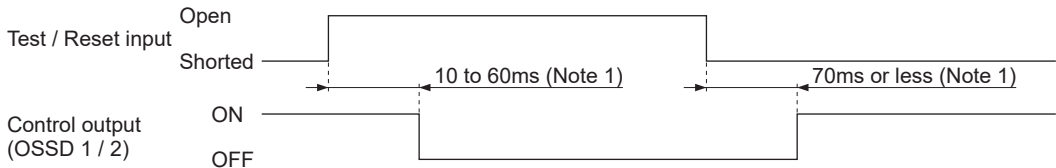


Notes: 1) The range depends on the number of beam channels and number of series connections.  
2) Operation in auto reset mode is indicated. In manual reset mode, light is emitted when open and stopped when short-circuited.

• **Optical synchronization**

Light received / Light blocked	Test / Reset input wire (Pink)	Test input	Control output (OSSD 1 / 2) state
Light received state	Open	Invalid	ON
	When using PNP output: Connect to +V When using NPN output: Connect to 0V	Valid	OFF
Light blocked state	-	-	OFF

<Timing chart>

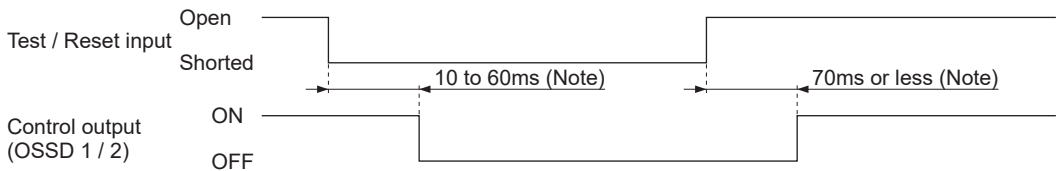

Note: The range depends on the number of beam channels and number of series connections.

<b>⚠ WARNING</b>
Do not use the test input function for the purpose of stopping the machine for which the device is installed. Risk of death or serious injury.


## Functions

### 3-5 Auxiliary Output (Non-Safety Output) (8-core cable, 12-core cable)

The device is equipped with an auxiliary output for non-safety applications. The auxiliary output can be used to monitor specific states of the device.

Auxiliary output	Normal operation			Lockout
	Test input state			
	Valid	Invalid		
		Control output (OSSD 1 / 2) state		
	ON	OFF		
Control output (OSSD 1 / 2) negative logic	ON	OFF	ON	ON

#### <Timing chart>

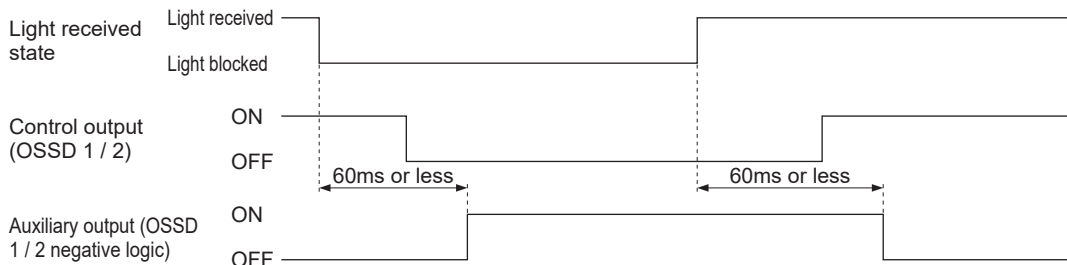

#### **⚠ WARNING**

Do not use the auxiliary output for the purpose of stopping the machine for which the device is installed. Risk of death or serious injury.

#### <Reference>

The output operation setting of the auxiliary output can be changed using the communication module **SF4D-TM1** (option) and Configurator Light Curtain software.

Example auxiliary output application

Example 1: Preventative maintenance by checking unstable light reception

By setting the auxiliary output function to No. 5 (ON when light reception is unstable), you can check the decrease of received light.

Example 2: Checking the interlock state to determine if device startup is possible

By setting the auxiliary output function to No. 8 (ON when light is received, OFF when light is blocked), you can check if the interlock can be released by reset.

Example 3: Checking the lockout state to determine the maintenance method

By setting the auxiliary output function to No. 13 (ON during lockout), you can check if lockout caused the control output (OSSD 1 / 2) to turn OFF.

### 3-6 External Device Monitor Function (8-core cable, 12-core cable)

The external device monitor function is used to check if an external device (safety relay, contactor) connected to the control output (OSSD 1 / 2) operates normally in accordance with the control output (OSSD 1 / 2).

Contact "b" of the external device is monitored, and if an error is detected such as malfunctioning due to contact welding, the device is put in the lockout state and the control output (OSSD 1 / 2) turns OFF.

The monitor time of contact "b" is 300ms. If 300ms is exceeded, the lockout state activates.

The monitor time of contact "b" can be changed in a range of 100 to 600 ms by using the communication module **SF4D-TM1** (option) and Configurator Light Curtain software.


#### <Enabling the external device monitor function>

Connect the external device monitor input wire (pale purple) to the external safety relay that is connected to the control output 1 (OSSD 1) wire (black) and the control output 2 (OSSD 2) wire (white).

#### <Disabling the external device monitor function>


- Not connecting any external device to the auxiliary output  
Connect the external device monitor input wire (pale purple) to the auxiliary output wire (red). When this connection is made, the auxiliary output cannot be connected with any external device.
- Connecting an external device to the auxiliary output  
Change the external device monitor setting from "Enable" to "Disable." To change this setting, the communication module **SF4D-TM1** (option) and Configurator Light Curtain software are required. When the setting is changed as described above, an external device can be connected to the auxiliary output.

#### <Timing chart (Normal)>

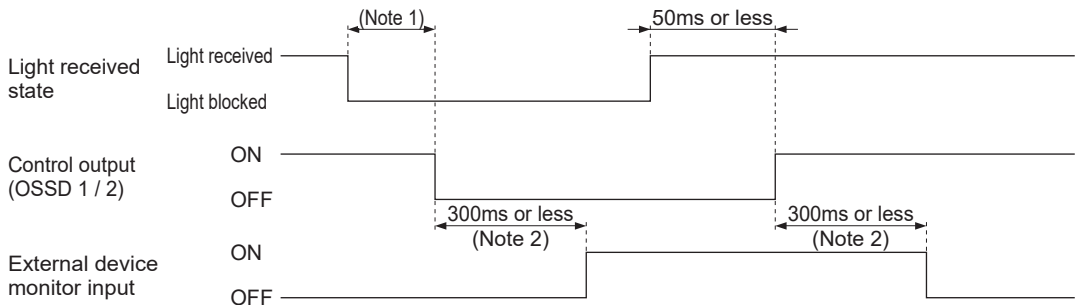


# Functions

## <Timing chart (Error 1)>

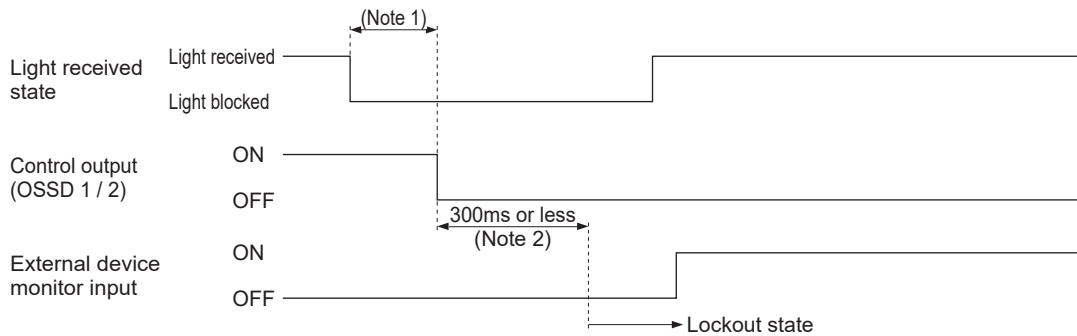

## <Timing chart (Error 2)>

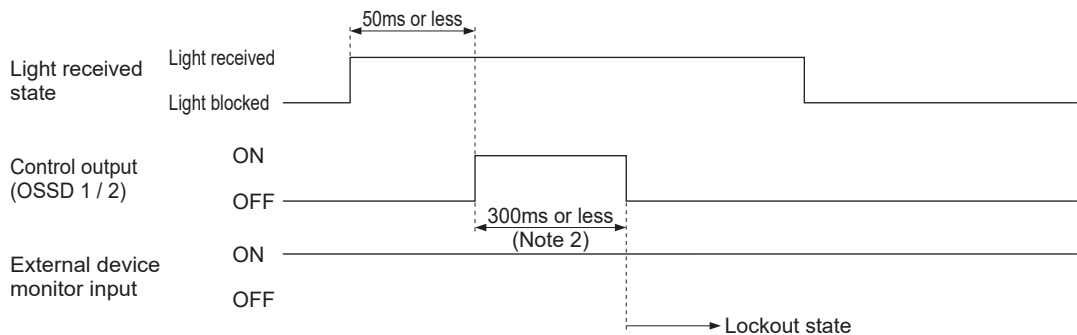

Notes: 1) The response time depends on the number of beam channels.

		Response time (OFF response)											
		Main sensor	Sub sensor										
			1 unit	2 units	3 units	4 units	0 unit	0 unit	1 unit	1 unit	2 units	2 units	3 units
Number of units in series connection	1 unit	1 unit	2 units	3 units	4 units	0 unit	0 unit	1 unit	1 unit	2 units	2 units	3 units	
Number of units in parallel connection	0 unit	0 unit	0 unit	0 unit	1 unit	2 units	1 unit	2 units	1 unit	2 units	1 unit	1 unit	
Number of beam channels	4 to 48	6ms	10ms	10ms	12ms	12ms	14ms	14ms	14ms	14ms	14ms	14ms	14ms
	49 to 96	8ms	10ms	10ms	12ms	12ms	14ms	14ms	14ms	14ms	14ms	14ms	14ms
	97 to 127	10ms	12ms	12ms	14ms	14ms	14ms	14ms	14ms	14ms	14ms	14ms	14ms
	128 to 144	—	12ms	12ms	14ms	14ms	14ms	14ms	14ms	14ms	14ms	14ms	14ms
	145 to 192	—	14ms	14ms	16ms	16ms	14ms	14ms	—	—	—	—	—
193 to 256	—	16ms	16ms	18ms	18ms	—	—	—	—	—	—	—	

2) Using the communication module **SF4D-TM1** (option), you can change the allowed response time within the range 100 to 600ms.

### 3-7 Muting Function (12-core cable)

#### **WARNING**

- Risk of an accident if muting control is used incorrectly. Fully understand the muting function before use. Requirements for muting control are given by the international standards below.  
ISO 13849-1:2015 (EN ISO 13849-1:2015, JIS B 9705-1):  
“Safety of machinery - Safety-related parts of control systems - Part 1: General principles for design, Article 5.2.5 Muting”  
IEC 61496-1 (ANSI/UL 61496, JIS B 9704-1):  
“Safety of machinery - Electro sensitive protective equipment - Part 1: General requirements and tests, Annex A, A.7 Muting”  
IEC 60204-1 (JIS B 9960-1):  
“Safety of machinery - Electrical equipment of machines - Part 1: General requirements, 9.2.4 Suspension of safeguards”  
EN 415-4:  
“Safety of packaging machines - Part 4: Palletizers and depalletizers, Annex A, A2.2 Muting”  
ANSI/RIA R15.06-2012:  
“U.S. A. Standards for Industrial Robots and Robot Systems - Safety Requirements, 5.10.10 Muting”
- Use muting control when the machine cycle is not dangerous. Maintain safety by other methods while muting control is activated.
- In an application where muting control is activated when a workpiece passes through, place the muting sensor so that the conditions for muting control are not satisfied when a person intrudes, regardless of whether or not a workpiece is passing through.
- Conduct a risk assessment, and if a muting indicator is required, check the standards and regulations in the country or region where the device is to be used and install the indicator accordingly.
- Be sure to test operation before using the muting function.

The muting function temporarily invalid the safety functions of the device. When the control output (OSSD 1 / 2) is ON, use the muting function when you want to allow a workpiece to pass through the sensing area of the device without stopping the machinery.

The muting function is valid when the following conditions are all satisfied.

- The control output (OSSD 1 / 2) is ON.
- Muting inputs A and B change from OFF (open) to ON. The time difference between muting input A changing to ON and muting input B changing to ON is from 0.03 to under 3 sec.

Note: When optical synchronization is selected, do not block the beam axis of the top end or the beam axis of the bottom end. Doing so cancels the muting function.

A photoelectric sensor with semiconductor output, proximity sensor, or position switch with a NO (Normally Open) contact can be used for the muting sensor.

#### **<Reference>**

You can change the time range to 0 to 3 sec. Use the communication module **SF4D-TM1** (option) and Configurator Light Curtain software, and connect an NO (Normally Open) type muting sensor to muting input A and an NC (Normally Closed) type muting sensor to muting input B.

## Functions

### <Output operation of muting sensors>

	Operation when ON	Operation when OFF
NO (Normally Open) type ON when light not received (photoelectric sensor, etc.) ON when object approaches (proximity sensor, etc.) ON when contact occurs (position switch, etc.)	0V or +V	Open

### ⚠ WARNING

Use only a muting sensor that is capable of the above <Output operation of muting sensors>. If a muting sensor other than the above is used, the muting function may activate at a time not intended by the machine designer and create a risk of death or serious injury.

### <Start conditions for muting>

The muting state activates when the following conditions are all satisfied.


- The device is not in the lockout state.
- The device is in the light receiving state and the control output (OSSD 1 / 2) is ON.
- The time difference when muting inputs A and B change to ON is from 0.03 to under 3 sec.

### <Release conditions for muting>

The muting state deactivates when any one of the following conditions is satisfied.


- The device enters the lockout state.
- Muting input A or B turned OFF for at least 20ms.
- The muting time exceeded two hours.

### <Example of muting sensor installation conditions>

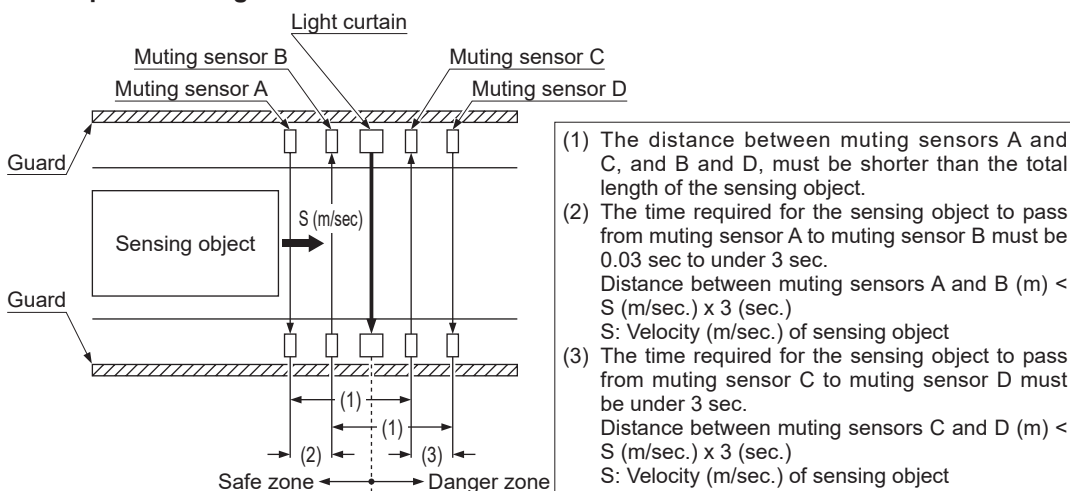




<PNP output type>

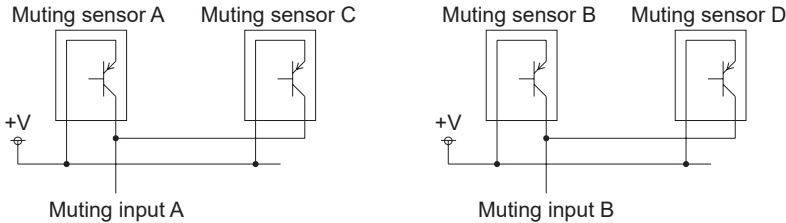

<NPN output type>

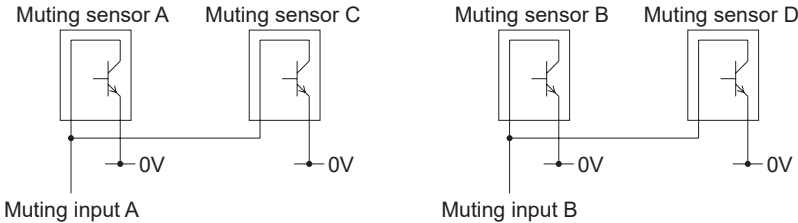


< Preventing light interference of muting sensor >

When a photoelectric sensor (such as **CX-410** series) is used as a muting sensor, light interference may occur and disable the light curtain's muting function to operate according to the setting. The following shows causes of light interference and countermeasures. Please take an appropriate countermeasure to prevent light interference.

Cause

- (1) Light interference between muting sensors
- (2) Light interference from light curtain to muting sensor
- (3) Light interference from muting sensor to light curtain

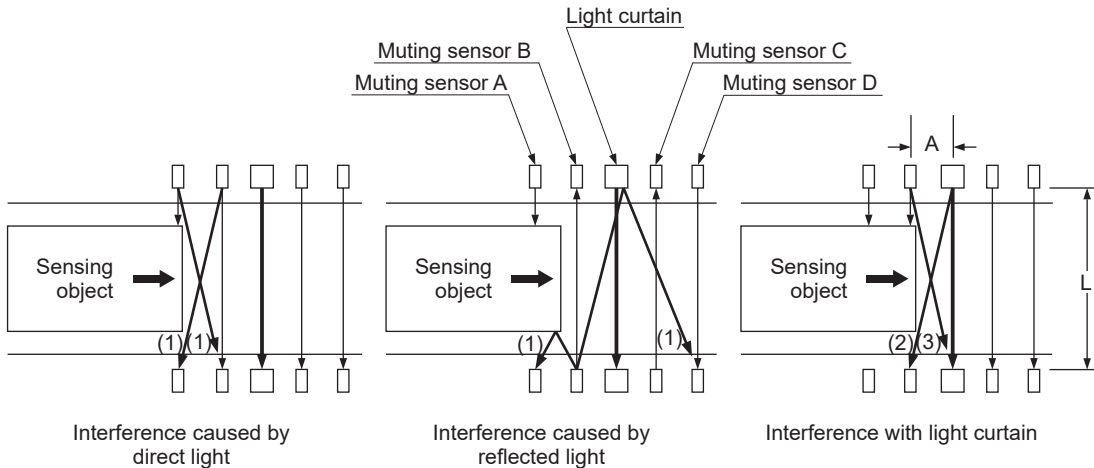

## Functions

### Countermeasure

#### (1) Light interference between muting sensors

- Increase the distance from the sensor that causes interference.
- If light reflected by the sensing object causes interference, decrease the distance between the object and muting sensor.
- Displace the beam axis from each other to prevent interference. (Example: Change the installation height or place them at an oblique angle.)
- Install a light shielding plate.
- Attach an interference prevention filter. (Example: **PF-CX4**)
- Attach a slit to reduce the light intensity. (Example: **OS-CX** series)
- Lower the sensitivity.

#### (2) Light interference from light curtain to muting sensor

- Increase the distance A between the muting sensor and the light curtain that causes interference.
- Displace the beam axis from each other to prevent interference. (Example: Change the installation height or place them at an oblique angle.)
- Install a light shielding plate.
- Set the muting sensor and the light curtain that causes interference in a staggered arrangement.
- Lower the sensitivity of the light sensor affected by interference.

#### (3) Light interference from muting sensor to light curtain


- Use a red LED type sensor. (Example: **CX-411**)
- Increase the distance A between the light curtain and the muting sensor that causes interference.
- Displace the beam axis from each other to prevent interference. (Example: Change the installation height or place them at an oblique angle.)
- Install a light shielding plate.
- Set the light curtain and the muting sensor that causes interference in a staggered arrangement.
- Attach a slit to reduce the light intensity. (Example: **OS-CX** series)

If light interference occurs between the muting sensor and light curtain as described in (2) or (3) it can be prevented by providing the distance A (m) that satisfies the formula below:

Distance (L) between the emitter and receiver of the light curtain	Distance (A) between the muting sensor and light curtain
When L is between 0.2 and 3m	0.262m or more
When L is between 3 and 15m	$L \times \tan 5^\circ = L \times 0.0874\text{m}$ or more

Note that nearby photoelectric sensors can cause light interference in some cases. Please check the surrounding area to see if there are sources of light interference.

<Timing chart>

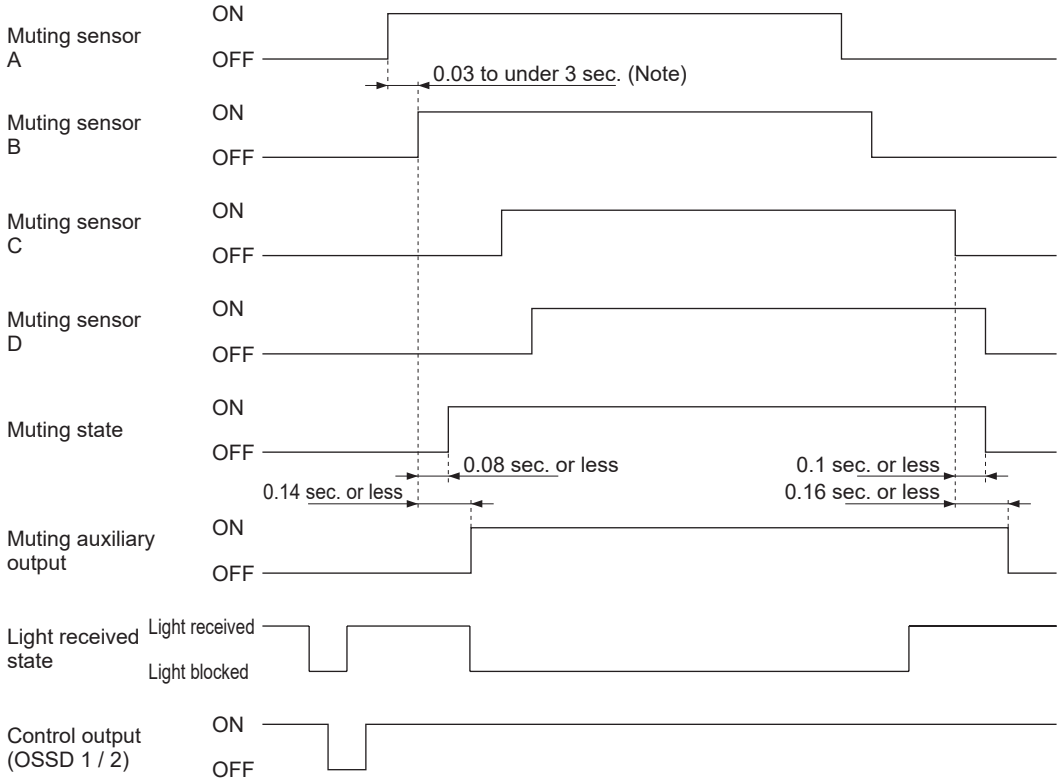

Note: Using the communication module **SF4D-TM1** (option), you can change the allowed response time within the range 0.1 to 4 sec.

<Reference>

The communication module **SF4D-TM1** (option) and Configurator Light Curtain software can be used to invalidate the muting function on a particular beam axis, and to specify the order of input of muting inputs A and B for enabling of the muting function.

About Muting Auxiliary Output

When the muting function is enabled, signals interlocked with the muting output are output.

<Ratings>

- NPN open-collector transistor
- Maximum sink current: Equivalent to 6-W incandescent lamp (approx. 250mA)
- Applied voltage: Same as supply voltage
- Residual voltage: 2V or less
- Leakage current: 0.2mA or less
- Protective circuit (short circuit protection): Incorporated (1A min.)

It can be used for a case where the indicator is lit for warning when muting is executed. Refer to "Muting indicator disconnection detection" in "3-11-7 Muting Function".

### 3-8 Override Function (12-core cable)

#### **WARNING**

- Risk of an accident if muting control is used incorrectly. Fully understand the muting function before use. Requirements for muting control are given by the international standards below.  
ISO 13849-1:2015 (EN ISO 13849-1:2015, JIS B 9705-1):  
“Safety of machinery - Safety-related parts of control systems - Part 1: General principles for design, Article 5.2.5 Muting”  
IEC 61496-1 (ANSI/UL 61496, JIS B 9704-1):  
“Safety of machinery - Electro sensitive protective equipment - Part 1: General requirements and tests, Annex A, A.7 Muting”  
IEC 60204-1 (JIS B 9960-1):  
“Safety of machinery - Electrical equipment of machines - Part 1: General requirements, 9.2.4 Overriding safeguards”  
EN 415-4:  
“Safety of packaging machines - Part 4: Palletizers and depalletizers, Annex A, A2.2 Muting”  
ANSI/RIA R15.06-2012:  
“U.S. A. Standards for Industrial Robots and Robot Systems - Safety Requirements, 5.10.10 Muting”
- Use muting control when the machine cycle is not dangerous. Maintain safety by other methods while muting control is activated.
- In an application where muting control is activated when a workpiece passes through, place the muting sensor so that the conditions for muting control are not satisfied when a person intrudes, regardless of whether or not a workpiece is passing through.
- Conduct a risk assessment, and if a muting indicator is required, check the standards and regulations in the country or region where the device is to be used and install the indicator accordingly.
- Be sure to test operation before using the muting function.
- Always operate the device that starts the override function manually. Install the device for override function startup in a location that allows operation from outside the danger zone and which provides a clear view of the entire danger zone.
- Always verify that no one is in the danger zone before using the override function. Risk of death or serious injury.

The override function forcibly invalid the safety functions of the device. Use the override function when you want to start the machine when the control output (OSSD 1 / 2) is OFF while the muting function is being used, or when the muting sensor is ON while the line is starting.

The override function is valid when the following conditions are all satisfied.

- A signal is input to one or both of muting inputs A and B.
- The override input is shorted to 0V or +V, and the test / reset input is open.  
(Continuously for 3 seconds)


The override function is invalid if at least one of the two conditions is not satisfied, or if 60 sec. elapses.

Note: The override function only operates when auto reset is selected (interlock invalid).

#### **<Reference>**

You can set an interval from 60 to 600 sec. in increments of 10 sec. using the communication module **SF4D-TM1** (option) and Configurator Light Curtain software.

<Timing chart>

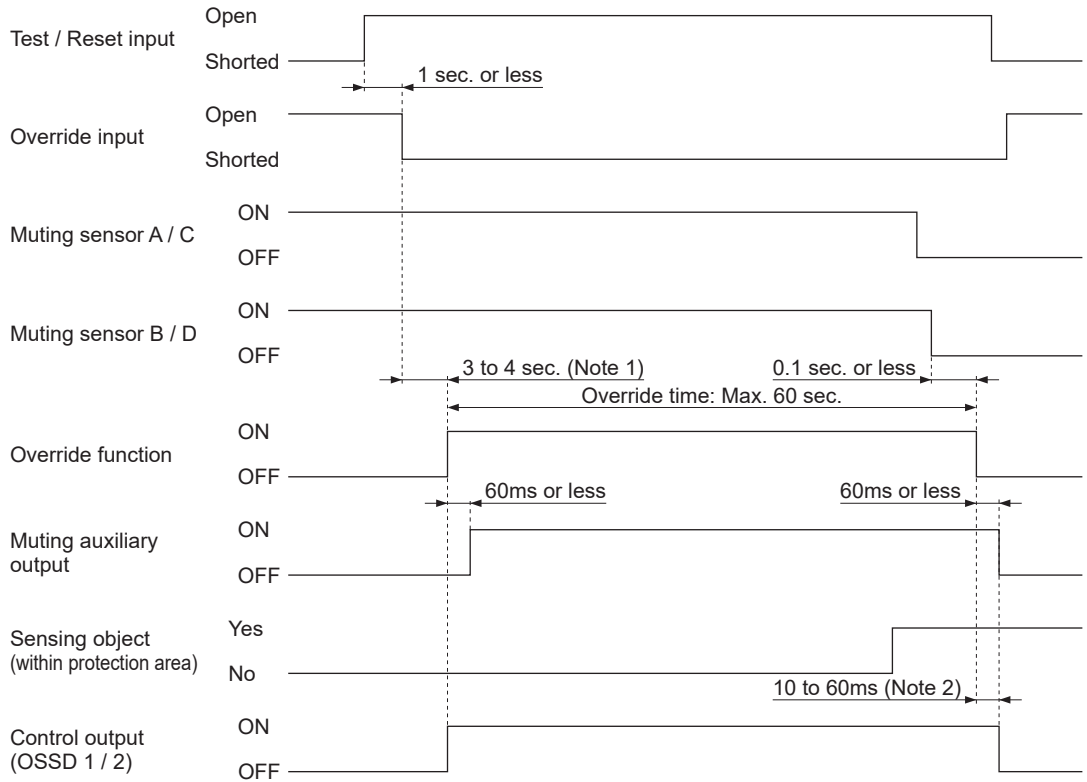

- Notes: 1) If the muting indicator does not turn ON after 1 sec. when the muting indicator diagnosis function is valid, the override function is invalid. When the muting indicator diagnosis function is invalid, the muting function is valid 3 sec. after the input conditions of muting sensors A (C) and B (D) are satisfied.  
 2) The range depends on the number of beam channels and number of series connections.

## Functions

### 3-9 DIP Switch Settings

Some of the device settings can be changed using DIP switches. The settings that can be changed using the DIP switches are indicated below.


#### <Changing settings using the DIP switches>

Item	Description	Settings and ranges, indicator	Factory default setting
DIP switch 1 / 2 (Emitter / Receiver) Synchronization method	Selects the synchronization method. When optical synchronization is selected, you can set a different frequency to reduce mutual interference.	Line synchronization • DIP switch 1: OFF • DIP switch 2: OFF Frequency indicator (orange): "☐" turns OFF Optical synchronization, Frequency 1 • DIP switch 1: ON • DIP switch 2: OFF Frequency indicator (orange): "☐" lights Optical synchronization, Frequency 2 • DIP switch 1: OFF • DIP switch 2: ON Frequency indicator (orange): "☐" lights Line synchronization • DIP switch 1: ON • DIP switch 2: ON Frequency indicator (orange): "☐" turns OFF	Line synchronization
DIP switch 3 (Emitter) Light emission intensity control function	Controls the light from the emitter for the change of sensing range.	Short mode Sensing range <b>SF4D-F</b> ☐: 0.2 to 7m <b>SF4D-H</b> ☐, <b>SF4D-A</b> ☐: 0.2 to 9m • DIP switch 3: OFF Light emission intensity control indicator (orange): "☐" turns OFF Long mode Sensing range <b>SF4D-F</b> ☐: 0.8 to 12m <b>SF4D-H</b> ☐, <b>SF4D-A</b> ☐: 0.8 to 15m • DIP switch 3: ON Light emission intensity control indicator (orange): "☐" lights	Short mode
DIP switch 3 (Receiver) Indicator selector	The upper application indicator and lower application indicator can be used as an beam axis alignment mode or an application mode.	Beam axis alignment mode • DIP switch 3: OFF Application mode • DIP switch 3: ON	Beam axis alignment mode
DIP switch 4 (Emitter / Receiver) Power save mode	Turns OFF the indicators reduce power consumption.	Normal mode (Allows illumination of some indicators) • DIP switch 4: OFF Power save mode (Upper application indicator and lower application indicator, Digital indicator / received light intensity are always OFF) • DIP switch 4: ON	Normal mode

#### CAUTION



Make sure that the power is OFF when setting DIP switch 1 / 2 (emitter / receiver) and DIP switch 3 (emitter). If DIP switch settings are changed while the power is ON, the settings will not be reflected. The settings will be reflected after the power is turned OFF and then turned back ON.

Remove the indicator cover from the device to access the DIP switches.

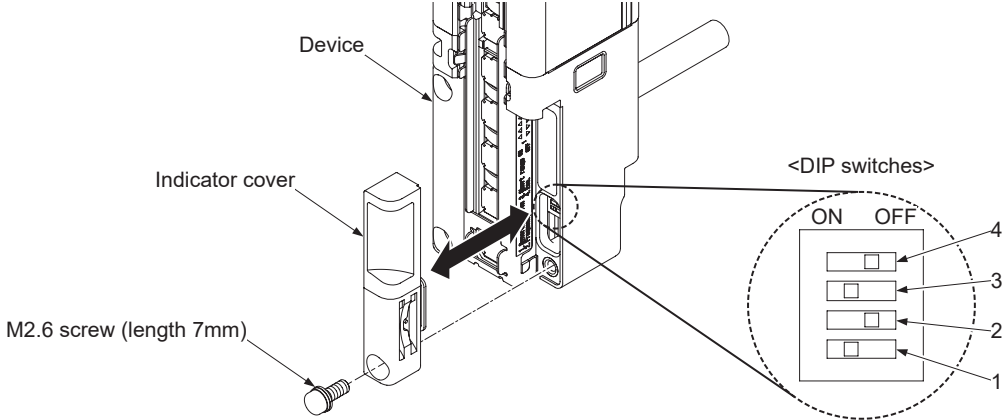

**⚠ CAUTION**

- After setting the DIP switches, always reattach the indicator cover on the device. Tighten to a torque of 0.3N·m or less.
- There is packing on the indicator cover. If the packing is not fitted on the cover properly, fit as shown below before attaching to the device.

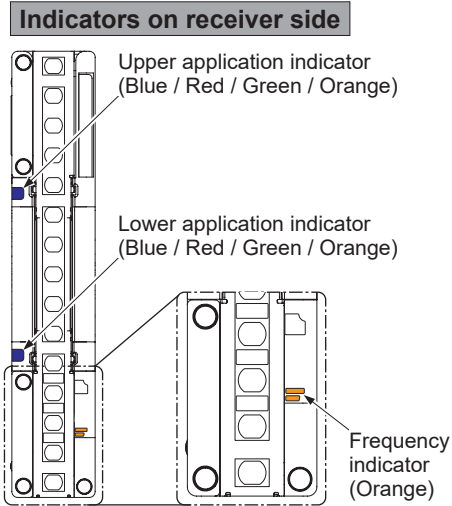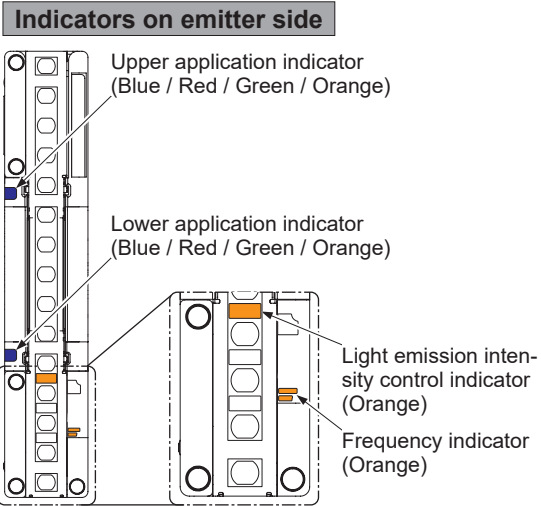

# Functions


## 3-10 Application indicator function (12-core cable)

This function allows the upper application indicator and lower application indicator to be used as an application indicator.

Use a 12-core cable, and set DIP switch 3 to ON.

You can select application indicator lights / turns OFF with the application indicator input 1 wire (gray) or application indicator input 2 wire (gray / black).

### DIP switches of receiver

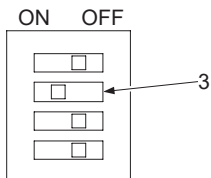

Application indicator	Application indicator input 1 (Gray)	Application indicator input 2 (Gray / Black)
Lights green	Short circuit	Open
Lights red	Open	Short circuit
Lights orange	Short circuit	Short circuit
Turns OFF	Open	Open

Short circuit: When using PNP output: Connect to +V  
When using NPN output: Connect to 0V

### <Reference>


The operation (lights, blink, turns OFF) settings of the application indicator can be changed using the communication module **SF4D-TM1** (option) and Configurator Light Curtain software.

## CAUTION

The following diagrams show the connection of wires for when using the application indicator function. Wiring methods other than those shown below vary depending on the functions used in combination. For the detail of wiring for the use of different functions, refer to “2-5 Wiring”

### Wiring diagram


#### <Using PNP output>

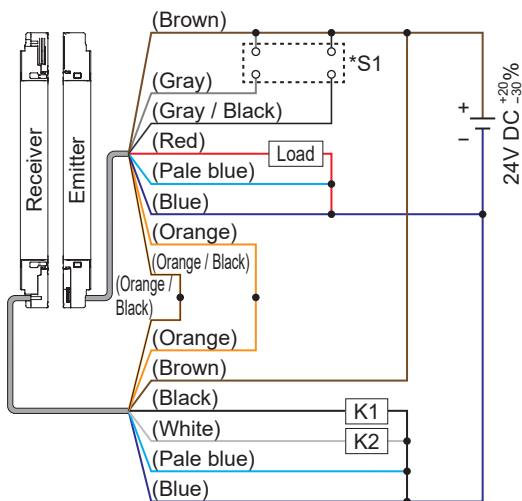

#### \*Switch S1

- Application indicator input 1 / 2  
Vs to Vs - 2.5V (sink current 5mA or less):  
Short circuit (Note)

#### <Using NPN output>

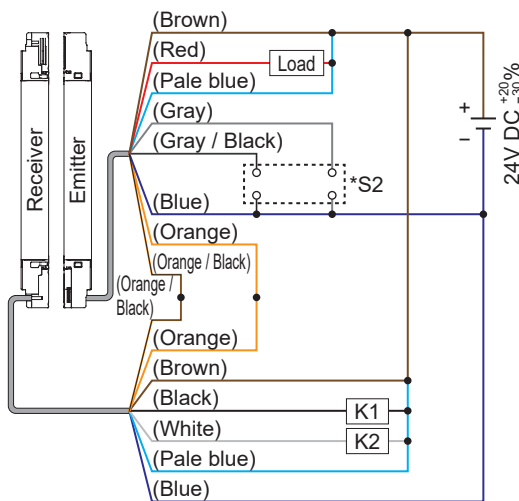

#### \*Switch S2

- Application indicator input 1 / 2  
0 to +2.5V (source current 5mA or less):  
Short circuit

Note: Vs is the supply voltage.




Emitter		Receiver	
Lead wire color	Name	Lead wire color	Name
Brown	+V	Orange / Black	Synchronization -
Gray	Application indicator input 1	Orange	Synchronization +
Gray / Black	Application indicator input 2	Brown	+V
Red	Auxiliary output 1	Black	Control output 1 (OSSD 1)
Pale blue	Output polarity setting / Lockout release input	White	Control output 2 (OSSD 2)
Blue	0V	Pale blue	Output polarity setting / Lockout release input
Orange	Synchronization +	Blue	0V
Orange / Black	Synchronization -		


# Functions

## Application indicator / Lights green


### <Using PNP output>

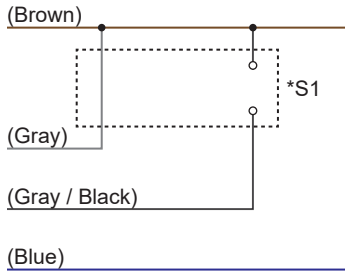

### <Using NPN output>

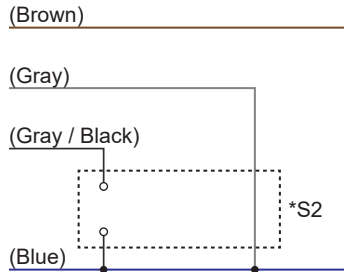


### <Application indicator>

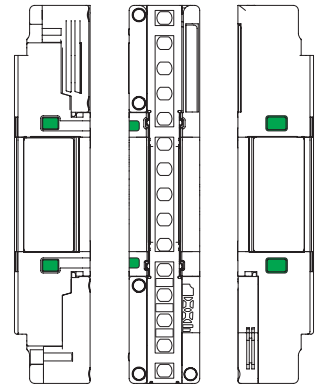


## Application indicator / Lights red


### <Using PNP output>

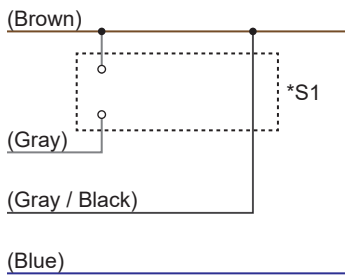

### <Using NPN output>

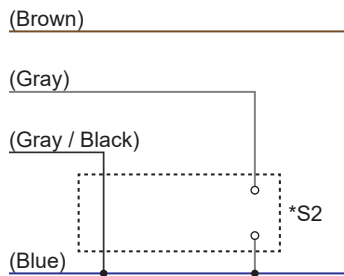


### <Application indicator>

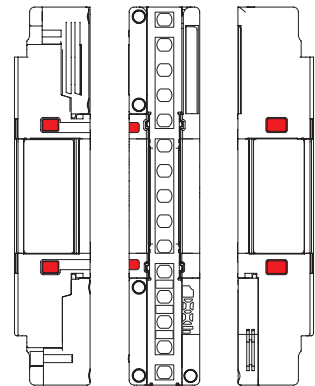


## Application indicator / Lights orange


### <Using PNP output>

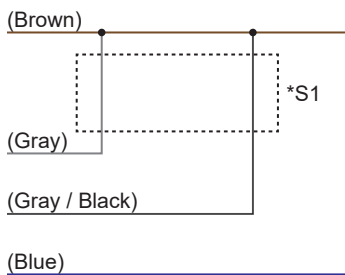

### <Using NPN output>

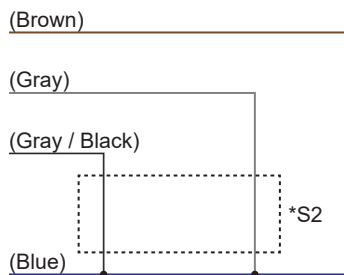

### <Application indicator>

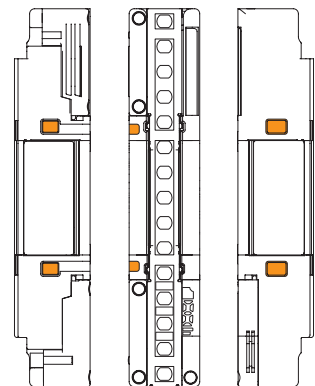

### 3-11 Functions That Can be Set Using the Optional Communication Module SF4D-TM1

Using the communication module **SF4D-TM1** (option) and Configurator Light Curtain software, you can use new functions and change various settings.

Note: The Configurator Light Curtain software can be downloaded free-of-charge from our website ([industry.panasonic.com/](http://industry.panasonic.com/)).

#### 3-11-1 Fixed Blanking Function

The fixed blanking function can be used to prevent the device's control output (OSSD 1 / 2) from turning OFF when a specific beam axis is blocked. Use this function when an obstacle always blocks a particular beam axis.

Item	Description	Settings / ranges	Factory default setting
Fixed blanking beam axis setting	You can change the beam axis that is invalid.	Zero beam axes (fixed blanking function invalid)	Zero beam axes (invalid)
		Any number of beam axes (1 or more) However, you cannot invalid all beam axes.	


When light from the emitter is received by the receiver on a valid beam axis of the fixed blanking function, control output (OSSD 1 / 2) is fixed in the OFF state. Check installation conditions and then turn ON the power. (The fixed blanking function remains valid even when the power is turned OFF and ON.)


When the fixed blanking function is used, the device's digital indicator remains OFF regardless of the intensity of light received.


When optical synchronization is selected, you cannot specify both the beam axis of the bottom end and the beam axis of the top end as fixed blanking beam axes.


**⚠ WARNING**

When the fixed blanking function is used, the device's control output (OSSD 1 / 2) does not turn OFF when a specific beam axis is blocked. Use a protective structure to prevent arrival at the machine's danger zone from the sensing area of the beam axis.



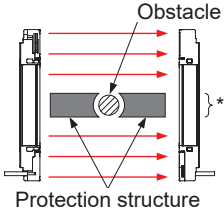



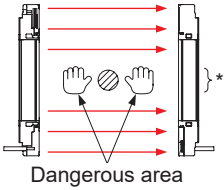

\*: Beam channels the fixed blanking function has been set to ON

## Functions

### 3-11-2 Floating Blanking Function

#### ⚠ WARNING

- When the floating blanking function is used, the minimum sensing object becomes larger, and the safe distance also becomes longer. Recalculate the safe distance and install the device accordingly.
- When the minimum number of beam axes is zero, use the interlock function as required by IEC 62046. When the minimum number of beam axes is zero, the control output (OSSD 1 / 2) turns ON even there are no obstacles in the sensing area.

This floating function prevents the control output (OSSD 1 / 2) from turning OFF when the number of blocked beam axes is equal to or less than the set number of beam axes. Use the function when there is a moving obstacle in the sensing area.

Item	Description	Settings / ranges	Factory default setting
Floating blanking beam axis setting	You can change the beam axis that is invalid.	Zero beam axes (floating blanking function invalid) Any number of beam axes (1 or more)	0 beam axes (Invalid)
Floating blanking number of beam axes setting	You can change the number of beam axes that are invalid.	Any number of beam axes • Maximum: 1 to 5 beam axes • Minimum: 0 to 5 beam axes	-
Floating blanking both end beam axes setting	You can validate or invalidate the floating blanking function for both end beam axes.	Valid (Floating blanking function can be set) Invalid (Floating blanking function cannot be set)	-

Selections for the floating blanking number of beam axes setting are 0 to 5.

The condition for the control output (OSSD 1 / 2) turning OFF is when the number of blocked beam axes is over the maximum number of beam axes, or is under the minimum number of beam axes.

You can specify a valid area (number of valid beam axes number).

You can validate or invalidate the floating blanking function for both end beam axes.

You can have the control output (OSSD 1 / 2) turn ON only when a number of contiguous beam axes within the set beam axes are blocked.

When the floating blanking function is used, the digital indicator remains OFF when there is a blocking object in the sensing area, regardless of the intensity of light received.

The minimum sensing object varies depending on the number of set beam axes.

#### <Minimum sensing object>

	Floating blanking function					
	Not set	Setting (maximum number of beam channels)				
	0 beam channels	1 beam channel	2 beam channels	3 beam channels	4 beam channels	5 beam channels
<b>SF4D-F</b> □	ø14mm	ø24mm	ø34mm	ø44mm	ø54mm	ø64mm
<b>SF4D-H</b> □	ø25mm	ø45mm	ø65mm	ø85mm	ø105mm	ø125mm
<b>SF4D-A</b> □	ø45mm	ø85mm	ø125mm	ø165mm	ø205mm	ø245mm


**3-11-3 Interlock Function**

Item	Description	Settings / ranges	Factory default setting
Interlock conditions	You can change the conditions for entering the interlock state. <ul style="list-style-type: none"> <li>• Only when the power is turned ON</li> <li>• When the device changes from the light receiving state to the light blocked state</li> </ul>	Start interlock <ul style="list-style-type: none"> <li>• Only when the power is turned ON</li> </ul>	Start / restart interlock
		Restart interlock <ul style="list-style-type: none"> <li>• When the device changes from the light receiving state to the light blocked state</li> </ul>	
		Start / restart interlock <ul style="list-style-type: none"> <li>• When the power is turned ON, and when the device is blocked</li> </ul>	

To use manual reset with optical synchronization, refer to “**3-11-10 I/O Setting Function**”.

For optical synchronization, the reset operation is {Test / reset input: [Short-circuit (+V for PNP output, 0V for NPN output)] → (Open) → [Short-circuit (+V for PNP output, 0V for NPN output)]}.

**<Timing chart>**

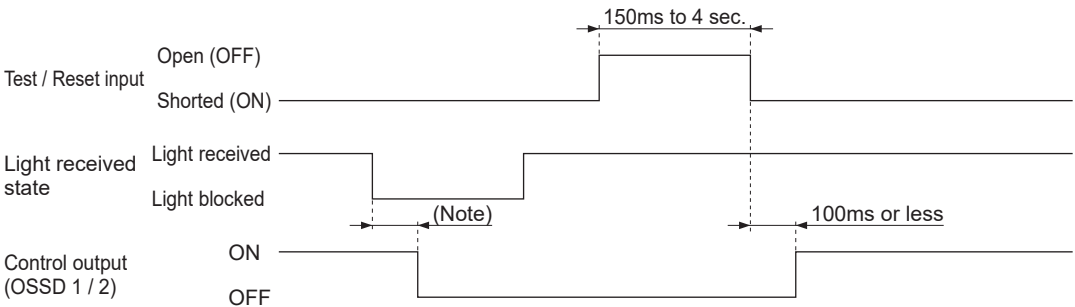

Note: The response time depends on the number of beam channels. For details, refer to <Response time by number of beam channels> in **6-1 Specifications**.

**3-11-4 External Device Monitor Function**

Item	Description	Settings / ranges	Factory default setting
External device monitor function	When the monitoring result of contact "b" of the external device is abnormal, the device enters the lockout state.	Valid (Enters lockout state)	Valid
		Invalid (Does not enter lockout state)	
External device monitor time	When the operation of contact "b" of the external device exceeds the monitor time, the device enters the lockout state.	Monitor time: 100 to 600ms (increments of 10ms)	300ms

# Functions

## 3-11-5 Auxiliary Output

Item	Description	Settings / ranges	Factory default setting
Auxiliary output operation setting	You can change the auxiliary output operation setting.	Control output (OSSD 1 / 2) negative logic	Control output (OSSD 1 / 2) negative logic
		Control output (OSSD 1 / 2) positive logic	
		Output OFF when test input is valid Output ON when test input is invalid	
		Output ON when test input is valid Output OFF when test input is invalid	
		OFF when light reception is unstable (Note 1, 2)	
		ON when light reception is unstable (Note 1, 2)	
		ON during muting	
		OFF during muting	
		ON when light is received, OFF when blocked (Note 3)	
		OFF when light is received, ON when blocked (Note 3)	
		OFF during lockout	
ON during lockout			

- Notes: 1) Auxiliary output does not operate when the following functions are used.
- When fixed blanking function or floating blanking function is valid.
  - When the muting function or override function is operating.
- 2) If the operation when light reception is unstable is set, auxiliary output operates after approximately 3 seconds elapses in the unstable light reception state.
- 3) The light received / blocked state of the sensing area is output regardless of the functions and states below.
- Fixed blanking function, floating blanking function, muting function, override function, interlock function, lockout state

## 3-11-6 Application Indicator Function

### • Normal state

Function setting	State	Color selection	Illumination pattern
Indicator input wire	When input to application indicator input 1	Select one of blue, green, cyan, red, magenta, orange, invalid (turns OFF)	Select lights or blinking
	When input to application indicator input 2	Select one of blue, green, cyan, red, reddish purple, orange, invalid (turns OFF)	Select lights or blinking
Control output (OSSD 1 / 2)	When the control output (OSSD 1 / 2) turns ON	Select one of blue, green, cyan, magenta, orange, invalid (turns OFF)	Lights
	When the control output (OSSD 1 / 2) turns OFF	Select one of blue, cyan, red, magenta, orange, invalid (turns OFF)	Lights
Interlock	When the interlock state activates	Select one of blue, green, cyan, red, magenta, orange, invalid (turns OFF)	Lights
Test input	When an input signal enters the test / reset input wire (pink) and the test input state activates	Select one of blue, green, cyan, red, magenta, orange, invalid (turns OFF)	Lights

### • Interrupt

Function setting	State	Color selection	Illumination pattern
Lockout	The device enters the lockout state	Select red or invalid (turns OFF)	Blinking
Muting	When an input signal enters the muting input A wire (yellow) and muting input B wire (pink), and the device enters the muting state	Select one of blue, green, cyan, red, magenta, yellow, invalid (turns OFF)	Select lights or blinking
Override	When an input signal enters the override input wire (yellow) and the device enters the override state	Select one of blue, green, cyan, red, magenta, yellow, invalid (turns OFF)	Select lights or blinking

## Functions

### 3-11-7 Muting Function

Item	Description	Settings / ranges	Factory default setting
Muting sensor output setting (Note 1)	You can change the output setting of the muting sensor.	NONO (Normally Open / Normally Open) • Muting input A: Normally Open • Muting input B: Normally Open NONC (Normally Open / Normally Closed) • Muting input A: Normally Open • Muting input B: Normally Closed	NONO
Muting input allowed time difference	You can change the allowed input time difference between muting inputs A and B.	When the muting sensor output setting is NONO • Lower limit: 0.03 sec., 0.1 to 59.9 sec. (increments of 0.1 sec.) • Upper limit: 0.1 to 60.0 sec. (increments of 0.1 sec.) When the muting sensor output setting is NONC • Lower limit: 0 to 59.9 sec. (increments of 0.1 sec.) • Upper limit: 0.1 to 60.0 sec. (increments of 0.1 sec.)	Lower limit: 0.03 sec. Upper limit: 3 sec.
Muting input order	You can change the order in which muting inputs A and B turn ON.	Random (either muting input A or B can turn ON first) A→B (muting input A turns ON first) B→A (muting input B turns ON first)	Random
Muting valid time	You can change the maximum time that the muting state can be maintained.	1 to 28,800 sec. (8 hours) (increments of 1 sec.), or unlimited	7,200 sec (2 hours)
Muting indicator disconnection detection function	When a muting indicator [LED or incandescent bulb: 1 to 6W (40 to 250mA when 24V is used)] is not connected to the muting auxiliary output, muting cannot be started, or is canceled.(Note 3)	Invalid Valid	Invalid
Individual beam axis muting	You can change the beam axis that is muted. When a beam axis for which the muting function is not set is blocked, the muting state is canceled and the control output (OSSD 1 / 2) turns OFF.	All beam axes 0 beam axes (no muting) Any number of beam axes	All beam axes
Exit-only muting (Note 2)	Eliminates the need to install a muting sensor on the exit side.	Invalid Valid (Exit-only muting)	Invalid

Notes: 1) For details, refer to “**Changing the muting sensor output setting**”.

2) For details, refer to “**Exit-only muting function**”.

3) When using the muting auxiliary output, check if the muting indicator (LED or incandescent lamp) is not disconnected or if a specified load is connected.



### ■Changing the muting sensor output setting

The muting sensor output setting can be changed to NONC (Normally Open / Normally Closed) to validate operation even when there is no input time difference.

#### <NONO [Normally Open / Normally Open (factory default setting)]>

Auxiliary output	Muting input	Input time difference	Operation when ON	Operation when OFF
NO (Normally Open) type ON when light not received (photoelectric sensor, etc.) ON when object approaches (proximity sensor, etc.) ON when contact occurs (position switch, etc.)	A, B	0.03 to 3 sec. *Can be changed	0V or +V	Open

#### <NONC [Normally Open / Normally Closed]>

Auxiliary output	Muting input	Input time difference	Operation when ON	Operation when OFF
NO (Normally Open) type ON when light not received (photoelectric sensor, etc.) ON when object approaches (proximity sensor, etc.) ON when contact occurs (position switch, etc.)	A	0 to 3 sec. (Simultaneous input possible) *Can be changed	0V or +V	Open
NC (Normally Closed) type ON when light received (photoelectric sensor, etc.) ON when object moves away (proximity sensor, etc.) ON when contact does not occur (position switch, etc.)	B			

### ■Exit-only muting function

When the exit-only muting function is used, a muting sensor is only installed on the danger zone side. There is no need for installation on the safe zone side. The conditions required for the exit-only muting function are described below.

#### <Installation conditions for exit-only muting>

- The detected object must move from the danger zone to the safe zone.
- One-way movement only.
- The detected object must pass through the sensing area within 4 seconds after muting sensor 1 or 2 turns OFF.

#### <Start conditions for muting>

Same.

#### <Release conditions for muting>

The following release conditions change when exit-only muting is used.

- Blocking continues even after an elapse of 4 seconds after muting input A or B is OFF at approx. 20ms or more.
- When the device changes to the light receiving state.

## Functions

---

### 3-11-8 Override Function

Item	Description	Settings / ranges	Factory default setting
Override valid time	You can change the maximum time that the override state can be maintained.	0 (invalid) 1 to 600 sec. (increments of 1 sec.)	60 sec.

When the muting disconnection detection function is valid, the override function is released when a circuit break occurs.

### 3-11-9 Protection Function

Item	Description	Settings / ranges	Factory default setting
Protection function	You can require that a password (4 alphanumeric digits) be entered in order to change device settings.	Invalid (settings can be changed without entering a password) Valid (password required to change settings)	Invalid

### 3-11-10 I/O Setting Function

Item	Description	Settings / ranges	Factory default setting
I/O setting function	You can select from placement patterns with a determined input signal and non-safety output signal.	This depends on the selected cable. For details, refer to the "SF4D-TM1 User's Manual".	Invalid

#### <Reference>

Some inputs and outputs such as the control outputs (OSSD 1 / 2) and power cabling cannot be changed.

# Chapter 4 Maintenance

---

4-1 Daily Inspection .....	128
4-2 Periodic Inspection (Every Six Months) .....	129
4-3 Inspection after Maintenance .....	129

## Maintenance

### <Reference>


If you discover an abnormal condition, refer to “**Chapter 5 Troubleshooting**” and inform your technician.  
 If you are unsure what action to take, contact our office.  
 Make a copy of the checklist, enter a checkmark after checking each item, and retain the list.

## 4-1 Daily Inspection

### ⚠ WARNING

Before starting work, inspect the items below and verify that there are no abnormalities. Risk of death or serious injury if inspection is neglected or the device is operated with an abnormal condition.

### Checklist (daily inspection)

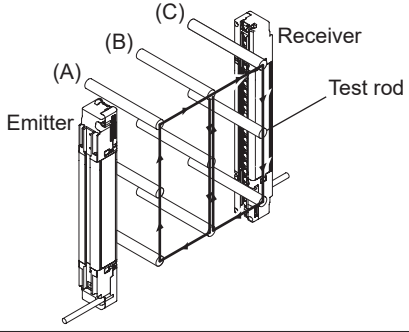Check column	Inspection item
<input type="checkbox"/>	Dangerous parts of the machine cannot be reached without passing through the sensing area of the device.
<input type="checkbox"/>	Some part of the operator's body remains in the sensing area when working with dangerous parts of the machine.
<input type="checkbox"/>	The device is installed at a distance that is equal to or greater than the calculated safety distance.
<input type="checkbox"/>	No safety guard or protective structure damage.
<input type="checkbox"/>	No damaged, defective, or bent wires.
<input type="checkbox"/>	All connectors are firmly connected.
<input type="checkbox"/>	No dirt or scratches on the light emitting surface.
<input type="checkbox"/>	Test rods are not deformed or defective.
<input type="checkbox"/>	When no objects are present in the sensing area, the operation indicator (green) of the emitter and the OSSD indicator (green) of the receiver are lit. The control output (OSSD 1 / 2) is ON. You can check for effects of external noise in this state. If external noise affects operation, remove the cause and reinspect.
<input type="checkbox"/>	<p>When moved at a speed of 1,600mm/sec. or less, it should be possible to detect the test rod (ø14mm for <b>SF4D-F</b>, ø25mm for <b>SF4D-H</b>, ø45mm for <b>SF4D-A</b>) directly in front of the emitter (A), midway between the emitter and the receiver (B), and directly in front of the receiver (C) (3 positions). When the test rod is in the sensing area (A) to (C), the OSSD indicator (red) of the receiver and the operation indicator (red) of the emitter remain lit.</p>  <p>The diagram illustrates the SF4D safety device's sensing mechanism. It shows an 'Emitter' on the left and a 'Receiver' on the right. A 'Test rod' is shown at three different positions relative to the device: (A) directly in front of the emitter, (B) midway between the emitter and the receiver, and (C) directly in front of the receiver. The sensing area is depicted as a rectangular frame between the emitter and receiver.</p>
<input type="checkbox"/>	When the machine is in the operating state, dangerous parts operate normally (do not stop) when no objects are present in the sensing area.
<input type="checkbox"/>	When the machine is in the operating state, dangerous parts stop immediately when the test rod is inserted directly in front of the emitter (A), midway between the emitter and the receiver (B), and directly in front of the receiver (C) (3 positions).
<input type="checkbox"/>	Dangerous parts remain stopped as long as the test rod is present in the sensing area.
<input type="checkbox"/>	Dangerous parts stop immediately when the power of the device is turned OFF.
<input type="checkbox"/>	Be sure to test operation before using the muting function. Check the condition of the muting indicator (dirt, brightness, etc.).

## 4-2 Periodic Inspection (Every Six Months)

**⚠ WARNING**

Be sure to inspect the following items every six months and verify that there are no abnormalities. Risk of death or serious injury if inspection is neglected or the device is operated with an abnormal condition.

### Checklist (periodic inspection)

Check column	Inspection item
<input type="checkbox"/>	The structure of the machine does not obstruct any safety mechanisms for stopping operation.
<input type="checkbox"/>	No modification has been made in the machine control system that obstructs the safety mechanisms.
<input type="checkbox"/>	Output from the device is correctly detected.
<input type="checkbox"/>	Wiring from the device is correct.
<input type="checkbox"/>	The response time of the overall system is equal to or less than the calculated value.
<input type="checkbox"/>	The current number of operation cycles (time) of parts with a limited service life is less than the number of service life cycles (time).
<input type="checkbox"/>	No screws or connectors related to the device are loose.
<input type="checkbox"/>	No objects that scatter or reflect light have been added near the device.

## 4-3 Inspection after Maintenance

In the situations below, inspect all items listed in “4-1 Daily Inspection” and “4-2 Periodic Inspection (Every Six Months)”.

- 1) When any parts of the device are replaced.
- 2) When an abnormal condition is noticed during operation.
- 3) After aligning the beam axes of the emitter and receiver.
- 4) When the installation site or environment of the device is changed.
- 5) When the wiring method or wiring layout is changed.
- 6) When a safety relay unit or external device (forcible guide relay or magnetic contactor) part has been replaced.
- 7) When safety controller or safety PLC settings are changed.

## Maintenance

---

(MEMO)

# Chapter 5 Troubleshooting

---

5-1 Emitter Troubleshooting .....	132
5-2 Receiver Troubleshooting .....	135


# Troubleshooting

**<Reference>**

- Check the wiring.
- Check the power voltage and power supply capacity.

## 5-1 Emitter Troubleshooting

**<Indicators on emitter>**

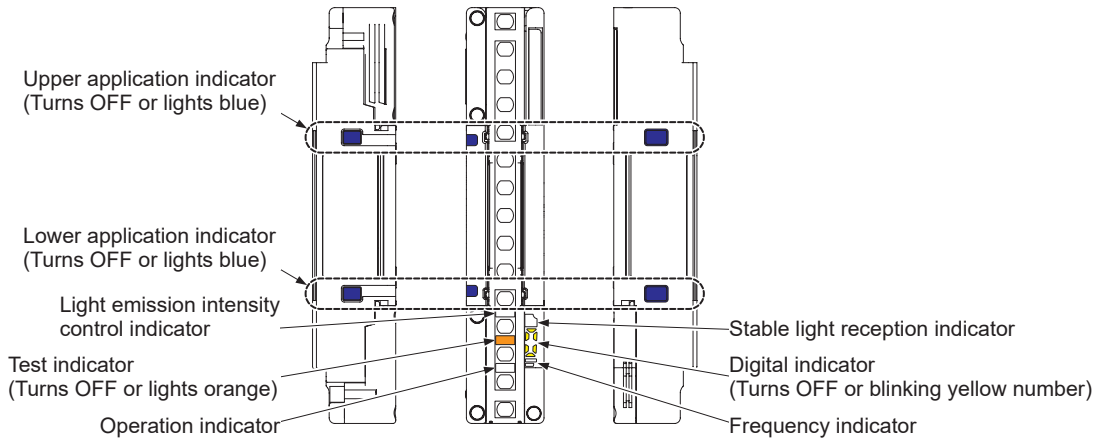








**<All indicators are turns OFF>**

Cause	Remedy
Power is not supplied.	Make sure the power supply capacity is sufficient. Connect the power supply correctly.
Supply voltage is outside the specified range.	Set the supply voltage correctly.
Connector not connected securely.	Connect the connector firmly.



## <Digital indicator shows a blinking or steadily lit yellow number>

Cause		Remedy
 lights] Error in device settings.	Error in settings.	If you used the communication module <b>SF4D-TM1</b> (option) and Configurator Light Curtain software, initialize the function.
	Internal failure	Contact our office.
 blinks] Error in the number of beam channels	The device is affected by noise or the power supply. An internal circuit has failed.	<ul style="list-style-type: none"> <li>• Check the noise environment of the device.</li> <li>• Check the connections, supply voltage, and power supply capacity.</li> <li>• Replace the device.</li> </ul>
	 blinks] Series connection error, error in total number of beam channels	<p>The number of sensors in series connection exceeds the specified limit.</p> <p>The total number of beam channels of the sensors in series connection exceeds the specified limit.</p> <p>Incorrect emitter and receiver connection when connected in a series connection.</p> <p>In a series connection, the DIP switches 1 / 2 (synchronization method) are not all set to the same state.</p> <p>End cap is not attached.</p> <p>Cable for series connection is disconnected.</p> <p>Another error has generated.</p>
 blinks] Emitter and receiver system mismatch.	The emitter system and receiver system do not match.	<p>Make sure the beam pitch, number of sensors and number of beam channels of the emitter and receiver match.</p> <p>Connect the output polarity setting / lockout release input wires (pale blue) of the emitter and receiver in the same way.</p> <ul style="list-style-type: none"> <li>• Using PNP output: Connect to 0V (blue)</li> <li>• Using NPN output: Connect to + V (brown)</li> </ul>
 blinks] Error in wiring of output polarity setting / lockout release input wire (pale blue).	<p>Output polarity setting / lockout release input wire (pale blue) is broken or shorted to another input / output wire.</p> <p>Incorrect connection of output polarity setting / lockout release input wire (pale blue) on receiver side of emitter / receiver.</p>	<p>&lt;Using PNP output&gt; Connect the output polarity setting / lockout release input wire (pale blue) to 0V (blue).</p> <p>&lt;Using NPN output&gt; Connect the output polarity setting / lockout release input wire (pale blue) to + V (brown).</p>
 blinks] Power supply voltage error	The voltage of the power supplied to the device exceeds the specified range.	Make sure the power supply voltage conforms to the specification.
 blinks] Muting auxiliary output error	Output is shorted to another input / output wire.	Use the muting auxiliary output at a current from 250mA or less.
	Excessive rush current in the muting auxiliary output.	
	Output circuit error.	Output circuit damage. Replace the device.

## Troubleshooting

Cause		Remedy	
[" " lights] Synchronization error	Mismatch between synchronization method and wiring.	The wiring and synchronization method (line synchronization, optical synchronization) must be made to match. To change the synchronization method, refer to "3-9 DIP Switch Settings". For wiring, refer to "2-5 Wiring".	
	Line synchronization	Synchronization + wire (orange) or synchronization - wire (orange / black) is shorted or broken.	Make sure that the synchronization + wire (orange) and synchronization - wire (orange / black) are connected correctly.
		The receiver has generated an error.	Check the operation of the receiver.
	Optical synchronization	Significant noise outside the specified range is being received.	Check the noise environment of the device.
Cable for series connection has failed.		Replace the cable for series connection.	
[" " blinks] Emitter error	The other emitter connected in series is locked out.	Check the digital indicator (yellow) of the other emitter connected in series.	
[" " blinks] Effects of noise or power supply, or internal circuit failure.	The device is affected by noise or the power supply. An internal circuit has failed.	Check the noise environment of the device. Check the connections, supply voltage, and power supply capacity. If you are extending the synchronization + wire (orange) and synchronization - wire (orange / black) using a cable other than the special-use cable, use a 0.2mm <sup>2</sup> or more twisted pair cable. If the problem persists, check the number that is blinking in the digital indicator (yellow) and the number of times it blinks, and contact our office.	
[" " blinks] Synchronization error	Receiver is in lockout state.	Check an digital indicator (yellow) of receiver.	


### <Test indicator (orange) lights up>

Cause		Remedy
Test state activated. (Error state or interlock setting error.)	Digital indicator (yellow) is blinking.	Check the number shown in the digital indicator.
	Auto reset was selected with the test / reset input wire (pink) open.	<Using PNP output> Connect the test / reset input wire (pink) to + V (brown). <Using NPN output> Connect the test / reset input wire (pink) to 0V (blue).
	Manual reset was selected with the test / reset input wire (pink) connected to 0V or +V.	Open the test / reset input wire (pink).

Take action as indicated in the troubleshooting for the emitter and receiver. If the problem persists, contact our office.

## 5-2 Receiver Troubleshooting

### <Indicators on emitter>

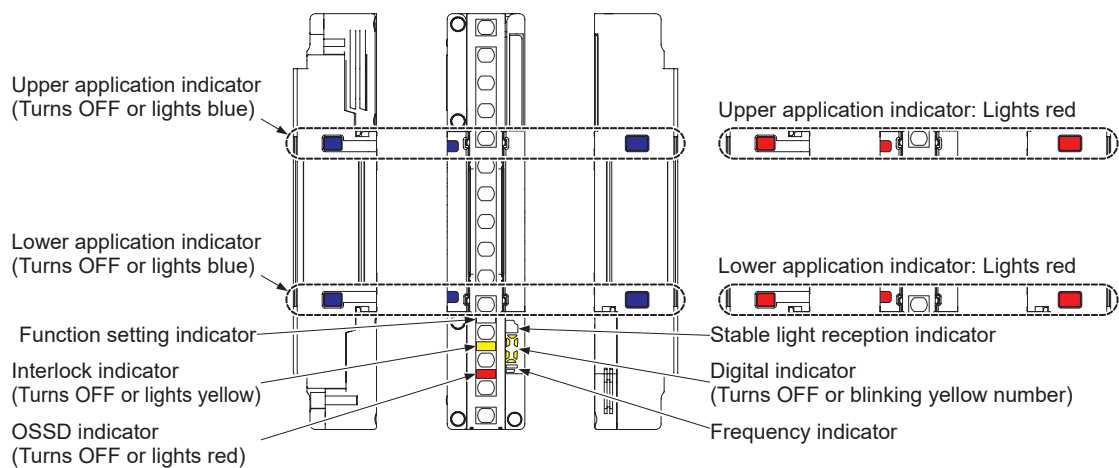









### <All indicators are turns OFF>

Cause	Remedy
Power is not supplied.	Make sure the power supply capacity is sufficient. Connect the power supply correctly.
Supply voltage is outside the specified range.	Set the supply voltage correctly.
Connector not firmly connected.	Connect the connector firmly.







## Troubleshooting

### <Digital indicator shows a blinking or steadily lit yellow number>

	Cause	Remedy
 lights] Error in device settings.	Error in settings.	If you used the communication module <b>SF4D-TM1</b> (option) and Configurator Light Curtain software, initialize the function.
	Internal error	Contact our office.
 blinks] Error in the number of beam channels	Line synchronization	The device is affected by noise or the power supply. An internal circuit has failed. <ul style="list-style-type: none"> <li>• Check the noise environment of the device.</li> <li>• Check the connections, supply voltage, and power supply capacity.</li> <li>• Replace the device.</li> </ul>
	Optical synchronization	Scattered light is received, or light emitted from a different model is received.
 blinks] Series connection error, error in total number of beam channels	The number of sensors in series connection exceeds the specified limit.	Limit the number of sensors in series connection to 5 or less.
	The total number of beam channels of the sensors in series connection exceeds the specified limit.	Limit the total number of beam channels to 256 or less.
	Incorrect emitter and receiver connection when connected in a series connection.	Connect emitters to emitters and receivers to receivers using a series connection cable.
	In a series connection, the DIP switches 1 / 2 (synchronization method) are not all set to the same state.	Set all DIP switches 1 / 2 (synchronization method) to the same state.
	End cap is not attached.	Make sure the end cap is installed correctly.
	Cable for series connection is disconnected.	<ul style="list-style-type: none"> <li>• Make sure the cable for series connection is connected correctly.</li> <li>• Replace the cable for series connection.</li> </ul>
	Another error has generated.	Check the operation of other sensors in series connection.
 blinks] Emitter and receiver system mismatch.	The emitter system and receiver system do not match.	Make sure the beam pitch, number of sensors and number of beam channels of the emitter and receiver match. <p>Wire the output polarity setting / lockout release input wire (pale blue) of the emitter and the receiver in the same way.</p> <ul style="list-style-type: none"> <li>• Using PNP output: Connect to 0V (blue)</li> <li>• Using NPN output: Connect to + V (brown)</li> </ul>
 blinks] Scattered light error.	Scattered light is received, or light emitted from a different model No. is received.	After turning on the power, make sure that the receiver does not receive scattered light. <p>If light emitted from a different model No. is received, follow the instructions in “<b>2-3-4-4 Preventing Mutual Interference by Device Placement</b>”.</p>

	Cause	Remedy	
 ["5", "6" blinks] Control output (OSSD 1 / 2) error.	The control output 1 (OSSD 1) wire (black) or the control output 2 (OSSD 2) wire (white) is shorted to 0V or +V.	Connect the control output 1 (OSSD 1) wire (black) and the control output 2 (OSSD 2) wire (white) to the safety relay unit, external device (forcible guide relay or magnetic contactor), safety controller, or safety PLC. The current values of the control output 1 (OSSD 1) wire (black) and the control output 2 (OSSD 2) wire (white) must be within the specified range.	
	The control output 1 (OSSD 1) wire (black) and control output 2 (OSSD 2) wire (white) are shorted to each other, or to another input / output wire.		
	Excessive current is flowing in the control output 1 (OSSD 1) wire (black) or control output 2 (OSSD 2) wire (white).		
	The output polarity setting / lockout release input wire (pale blue), and the control output 1 (OSSD 1) wire (black) and control output 2 (OSSD 2) wire (white) are not connected correctly.	<Using PNP output> <ul style="list-style-type: none"> <li>• Connect the output polarity setting / lockout release input wire (pale blue) to 0V (blue).</li> <li>• Connect the control output 1 (OSSD 1) wire (black) and the control output 2 (OSSD 2) wire (white) to the safety relay unit, external device (forcible guide relay or magnetic contactor), safety controller, or safety PLC.</li> </ul> <Using NPN output> <ul style="list-style-type: none"> <li>• Connect the output polarity setting / lockout release input wire (pale blue) to + V (brown).</li> <li>• Connect the control output 1 (OSSD 1) wire (black) and the control output 2 (OSSD 2) wire (white) to the safety relay unit, external device (forcible guide relay or magnetic contactor), safety controller, or safety PLC.</li> </ul>	
	Output circuit error.	Output circuit damage. Replace the device.	
 ["5" blinks] Error in wiring of output polarity setting / lockout release input wire (pale blue).	Output polarity setting / lockout release input wire (pale blue) is broken or shorted to another input / output wire. Incorrect connection of output polarity setting / lockout release input wire (pale blue) of receiver side of emitter / receiver.	<Using PNP output> Connect the output polarity setting / lockout release input wire (pale blue) to 0V (blue).  <Using NPN output> Connect the output polarity setting / lockout release input wire (pale blue) to + V (brown).	
 ["7" blinks] External device error.	When a safety relay is used	The safety relay contact has welded.	Replace the safety relay.
		The response time of the safety relay is slow.	Replace with a safety relay with a suitable response time. This can also be set using the communication module <b>SF4D-TM1</b> (option) and Configurator Light Curtain software. Refer to " <b>3-6 External Device Monitor Function (8-core cable, 12-core cable)</b> ".
		Safety relay contact "b" is not connected.	Correctly connect the safety relay. Refer to " <b>2-5-7 Wiring Configuration for Valid External Device Monitor Function (Example of Control Category 4 Wiring)</b> ".

## Troubleshooting

Cause		Remedy	
 blinks External device error.	When the external device monitor function is invalid.	<ul style="list-style-type: none"> <li>• Connect the auxiliary output wire (red) and external device monitor input wire (pale purple).</li> <li>• Using the communication module <b>SF4D-TM1</b> (option) and Configurator Light Curtain software, set the external device monitor function to "Not used".</li> </ul>	
	Auxiliary output does not operate correctly.	<ul style="list-style-type: none"> <li>• Check if the auxiliary output wire (red) is broken or has shorted.</li> <li>• Using the communication module <b>SF4D-TM1</b> (option) and Configurator Light Curtain software, return the auxiliary output setting to the factory default setting (mode 0).</li> </ul>	
 blinks Power supply voltage error	The voltage of the power supplied to the device exceeds the specified range.	Make sure the power supply voltage conforms to the specification.	
 lights Synchronization error	Mismatch between synchronization method and wiring.	The wiring and synchronization method (line synchronization, optical synchronization) must be made to match. To change the synchronization method, refer to " <b>3-9 DIP Switch Settings</b> ". For wiring, refer to " <b>2-5 Wiring</b> ".	
	Line synchronization	Synchronization + wire (orange) or synchronization - wire (orange / black) is shorted or broken.	Make sure that the synchronization + wire (orange) and synchronization - wire (orange / black) are connected correctly.
		The emitter has generated an error.	Check the operation of the emitter.
	Optical synchronization	The beam axes of the top and bottom ends are not received.	Make sure the beam axis of either the top end or bottom end is received.
		Significant noise outside the specified range is being received.	Check the noise environment of the device.
		Cable for series connection has failed.	Replace the cable for series connection.
 blinks Emitter error	Emitter is in lockout state.	Check a digital indicator (yellow) of emitter.	
 blinks Effects of noise or power supply, or internal circuit failure.	The device is affected by noise or the power supply. An internal circuit has failed.	Check the noise environment of the device. Check the connections, supply voltage, and power supply capacity, and check for scattered light. If you are extending the synchronization + wire (orange) and synchronization - wire (orange / black) using a cable other than the special-use cable, use a 0.2mm <sup>2</sup> or more twisted pair cable. If the problem persists, check the number that is blinking in the digital indicator (yellow) and the number of times it blinks, and contact our office.	
 blinks Synchronization error	The other receiver connected in series is locked out.	Check the digital indicator (yellow) of the other receiver connected in series.	

### <Upper application indicator and lower application indicator light blue, and OSSD indicator lights red>

Cause	Remedy
Beam received with fixed blanking function valid When the floating blanking function is valid, the blocked beam is lower than the lowest beam.	Check installation conditions and turn the power OFF then ON.

### <Interlock indicator lights yellow>

Cause	Remedy
The control output (OSSD 1 / 2) has been turned OFF by interlock.	Perform a reset [Open test / reset input wire (pink) → Short to 0V or +V → Open]. If the interlock function is not needed (when auto reset is used), open the interlock setting input wire (pale purple), and isolate.

### <Upper application indicator and lower application indicator light red or are OFF>

Cause	Remedy
Beam axes not aligned.	Perform beam axis adjustment. Refer to “ <b>2-6 Adjustment</b> ”. Align the upper and lower directions between the emitter and receiver.
Synchronization + wire (orange) or synchronization - wire (orange / black) error. Synchronization + wire (orange) or synchronization - wire (orange / black) has shorted or is broken.	Correctly connect the synchronization + wire (orange) and synchronization - wire (orange / black).

Take action as indicated in the troubleshooting for the emitter and receiver. If the problem persists, contact our office.

## Troubleshooting

---

(MEMO)




# Chapter 6 Specifications and Dimensions

6-1 Specifications	142
6-2 Options	148
6-3 Dimensions	154
6-3-1 Rear Mounting with <b>MS-SFD-1-5</b> and <b>MS-SFB-2</b>	154
6-3-2 Side Mounting with <b>MS-SFD-1-5</b> and <b>MS-SFB-2</b>	155
6-3-3 Rear Mounting with <b>MS-SFD-1-6</b> and <b>MS-SFB-2</b>	156
6-3-4 Side Mounting with <b>MS-SFD-1-6</b> and <b>MS-SFB-2</b>	157
6-3-5 Rear Mounting with <b>MS-SFD-1-8</b> and <b>MS-SFB-2</b>	158
6-3-6 Side Mounting with <b>MS-SFD-1-8</b> and <b>MS-SFB-2</b>	159
6-3-7 Mounting with <b>MS-SFD-3-6</b>	160
6-3-8 Rear Mounting with <b>MS-SFD-4BG</b> and <b>MS-SFB-2</b>	161
6-3-9 Side Mounting with <b>MS-SFD-4BG</b> and <b>MS-SFB-2</b>	162
6-3-10 Mounting Brackets	163
6-3-10-1 Beam Adjustment Mounting Bracket <b>MS-SFD-1-5</b>	163
6-3-10-2 Beam Adjustment Mounting Bracket <b>MS-SFD-1-6</b>	164
6-3-10-3 Beam Adjustment Mounting Bracket <b>MS-SFD-1-8</b>	165
6-3-10-4 Intermediate Support Bracket <b>MS-SFB-2</b>	166
6-3-10-5 No Dead-Space Beam Adjustment Mounting Bracket <b>MS-SFD-3-6</b>	167
6-3-10-6 <b>SF4B-G</b> Compatible Mounting Bracket <b>MS-SFD-4BG</b>	168

# Specifications

## 6-1 Specifications

Model No.

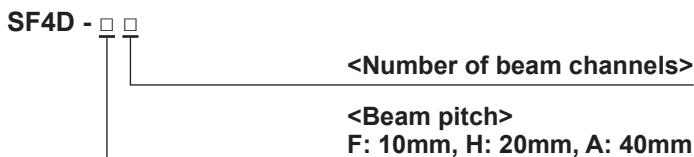

Example: **SF4D-H32**

Number of beam channels: 32 channels

Beam pitch: 20mm

Specifications by model No.

<10mm pitch type>

Type	10mm pitch type			
Model No.	SF4D-F15	SF4D-F23	SF4D-F31	SF4D-F39
Number of beam channels	15	23	31	39
Protection height	150mm	230mm	310mm	390mm
When using as safety equipment for press machines in China (Note)	140mm	220mm	300mm	380mm
Current consumption	Emitter: 110mA or less Receiver: 130mA or less		Emitter: 120mA or less Receiver: 130mA or less	Emitter: 120mA or less Receiver: 140mA or less
PFHd	$1.21 \times 10^{-9}$	$1.48 \times 10^{-9}$	$1.80 \times 10^{-9}$	$2.07 \times 10^{-9}$
MTTFd	1,031 years	833 years	672 years	582 years
Weight (emitter / receiver total)	Approx. 270g	Approx. 470g	Approx. 680g	Approx. 890g

Type	10mm pitch type			
Model No.	SF4D-F47	SF4D-F55	SF4D-F63	SF4D-F71
Number of beam channels	47	55	63	71
Protection height	470mm	550mm	630mm	710mm
When using as safety equipment for press machines in China (Note)	460mm	540mm	620mm	700mm
Current consumption	Emitter: 120mA or less Receiver: 140mA or less		Emitter: 120mA or less Receiver: 150mA or less	
PFHd	$2.40 \times 10^{-9}$	$2.66 \times 10^{-9}$	$2.99 \times 10^{-9}$	$3.25 \times 10^{-9}$
MTTFd	498 years	447 years	396 years	363 years
Weight (emitter / receiver total)	Approx. 1,100g	Approx. 1,300g	Approx. 1,500g	Approx. 1,700g

Type	10mm pitch type			
Model No.	SF4D-F79	SF4D-F95	SF4D-F111	SF4D-F127
Number of beam channels	79	95	111	127
Protection height	790mm	950mm	1,110mm	1,270mm
When using as safety equipment for press machines in China (Note)	780mm	940mm	1,100mm	1,260mm
Current consumption	Emitter: 120mA or less Receiver: 150mA or less	Emitter: 120mA or less Receiver: 160mA or less	Emitter: 120mA or less Receiver: 170mA or less	Emitter: 120mA or less Receiver: 180mA or less
PFHd	$3.58 \times 10^{-9}$	$4.17 \times 10^{-9}$	$4.76 \times 10^{-9}$	$5.36 \times 10^{-9}$
MTTFd	328 years	281 years	245 years	217 years
Weight (emitter / receiver total)	Approx. 1,900g	Approx. 2,300g	Approx. 2,800g	Approx. 3,200g

PFHd: Probability of dangerous failure per hour, MTTFd: Mean time to dangerous failure (in years).

Note: In Japan, do not use this device as safety equipment for a press machine. Please use the model **SF4D-□-01** for press machines or shears (paper shears) in Japan.

## <20mm pitch type>

Type	20mm pitch type			
Model No.	SF4D-H8	SF4D-H12	SF4D-H16	SF4D-H20
Number of beam channels	8	12	16	20
Protection height	150mm	230mm	310mm	390mm
When using as safety equipment for press machines in China (Note)	140mm	220mm	300mm	380mm
Current consumption	Emitter: 100mA or less, Receiver: 120mA or less			
PFHd	$9.57 \times 10^{-10}$	$1.12 \times 10^{-9}$	$1.26 \times 10^{-9}$	$1.40 \times 10^{-9}$
MTTFd	1,340 years	1,119 years	988 years	881 years
Weight (emitter / receiver total)	Approx. 270g	Approx. 470g	Approx. 680g	Approx. 890g

Type	20mm pitch type			
Model No.	SF4D-H24	SF4D-H28	SF4D-H32	SF4D-H36
Number of beam channels	24	28	32	36
Protection height	470mm	550mm	630mm	710mm
When using as safety equipment for press machines in China (Note)	460mm	540mm	620mm	700mm
Current consumption	Emitter: 100mA or less Receiver: 130mA or less	Emitter: 110mA or less Receiver: 130mA or less		Emitter: 120mA or less Receiver: 130mA or less
PFHd	$1.56 \times 10^{-9}$	$1.73 \times 10^{-9}$	$1.87 \times 10^{-9}$	$2.04 \times 10^{-9}$
MTTFd	782 years	701 years	647 years	591 years
Weight (emitter / receiver total)	Approx. 1,100g	Approx. 1,300g	Approx. 1,500g	Approx. 1,700g

Type	20mm pitch type			
Model No.	SF4D-H40	SF4D-H48	SF4D-H56	SF4D-H64
Number of beam channels	40	48	56	64
Protection height	790mm	950mm	1,110mm	1,270mm
When using as safety equipment for press machines in China (Note)	780mm	940mm	1,100mm	1,260mm
Current consumption	Emitter: 120mA or less, Receiver: 140mA or less			Emitter: 120mA or less Receiver: 150mA or less
PFHd	$2.17 \times 10^{-9}$	$2.48 \times 10^{-9}$	$2.78 \times 10^{-9}$	$3.09 \times 10^{-9}$
MTTFd	552 years	481 years	426 years	383 years
Weight (emitter / receiver total)	Approx. 1,900g	Approx. 2,300g	Approx. 2,800g	Approx. 3,200g

Type	20mm pitch type			
Model No.	SF4D-H72	SF4D-H80	SF4D-H88	SF4D-H96
Number of beam channels	72	80	88	96
Protection height	1,430mm	1,590mm	1,750mm	1,910mm
When using as safety equipment for press machines in China (Note)	1,420mm	1,580mm	1,740mm	1,900mm
Current consumption	Emitter: 120mA or less Receiver: 150mA or less		Emitter: 120mA or less Receiver: 160mA or less	
PFHd	$3.39 \times 10^{-9}$	$3.69 \times 10^{-9}$	$4.00 \times 10^{-9}$	$4.30 \times 10^{-9}$
MTTFd	347 years	318 years	293 years	272 years
Weight (emitter / receiver total)	Approx. 3,600g	Approx. 4,000g	Approx. 4,400g	Approx. 4,800g

PFHd: Probability of dangerous failure per hour, MTTFd: Mean time to dangerous failure (in years).

Note: In Japan, do not use this device as safety equipment for a press machine. Please use the model SF4D-□-01 for press machines or shears (paper shears) in Japan.

## Specifications

### <40mm pitch type>

Type	40mm pitch type			
Model No.	SF4D-A4	SF4D-A6	SF4D-A8	SF4D-A10
Number of beam channels	4	6	8	10
Protection height	150mm	230mm	310mm	390mm
When using as safety equipment for press machines in China (Note)	120mm	200mm	280mm	360mm
Current consumption	Emitter: 100mA or less, Receiver: 120mA or less			
PFHd	$8.29 \times 10^{-10}$	$9.34 \times 10^{-10}$	$1.01 \times 10^{-9}$	$1.11 \times 10^{-9}$
MTTFd	1,577 years	1,378 years	1,267 years	1,136 years
Weight (emitter / receiver total)	Approx. 270g	Approx. 470g	Approx. 680g	Approx. 890g

Type	40mm pitch type			
Model No.	SF4D-A12	SF4D-A14	SF4D-A16	SF4D-A18
Number of beam channels	12	14	16	18
Protection height	470mm	550mm	630mm	710mm
When using as safety equipment for press machines in China (Note)	440mm	520mm	600mm	680mm
Current consumption	Emitter: 100mA or less, Receiver: 130mA or less			
PFHd	$1.18 \times 10^{-9}$	$1.29 \times 10^{-9}$	$1.36 \times 10^{-9}$	$1.46 \times 10^{-9}$
MTTFd	1,060 years	966 years	910 years	840 years
Weight (emitter / receiver total)	Approx. 1,100g	Approx. 1,300g	Approx. 1,500g	Approx. 1,700g

Type	40mm pitch type			
Model No.	SF4D-A20	SF4D-A24	SF4D-A28	SF4D-A32
Number of beam channels	20	24	28	32
Protection height	790mm	950mm	1,110mm	1,270mm
When using as safety equipment for press machines in China (Note)	760mm	920mm	1,080mm	1,240mm
Current consumption	Emitter: 100mA or less Receiver: 130mA or less	Emitter: 100mA or less Receiver: 140mA or less		Emitter: 110mA or less Receiver: 140mA or less
PFHd	$1.54 \times 10^{-9}$	$1.71 \times 10^{-9}$	$1.89 \times 10^{-9}$	$2.07 \times 10^{-9}$
MTTFd	798 years	710 years	640 years	582 years
Weight (emitter / receiver total)	Approx. 1,900g	Approx. 2,300g	Approx. 2,800g	Approx. 3,200g

Type	40mm pitch type			
Model No.	SF4D-A36	SF4D-A40	SF4D-A44	SF4D-A48
Number of beam channels	36	40	44	48
Protection height	1,430mm	1,590mm	1,750mm	1,910mm
When using as safety equipment for press machines in China (Note)	1,400mm	1,560mm	1,720mm	1,880mm
Current consumption	Emitter: 110mA or less, Receiver: 150mA or less			Emitter: 110mA or less Receiver: 160mA or less
PFHd	$2.24 \times 10^{-9}$	$2.42 \times 10^{-9}$	$2.60 \times 10^{-9}$	$2.77 \times 10^{-9}$
MTTFd	534 years	493 years	458 years	428 years
Weight (emitter / receiver total)	Approx. 3,600g	Approx. 4,000g	Approx. 4,400g	Approx. 4,800g

PFHd: Probability of dangerous failure per hour, MTTFd: Mean time to dangerous failure (in years).

Note: In Japan, do not use this device as safety equipment for a press machine. Please use the model SF4D-□-01 for press machines or shears (paper shears) in Japan.

## Common specifications

Type	10mm pitch type	20mm pitch type	40mm pitch type
Model No.	<b>SF4D-F□</b>	<b>SF4D-H□</b>	<b>SF4D-A□</b>
Sensing range (effective)	Short mode: 0.2 to 7m Long mode: 0.8 to 12m (selectable by DIP switch)	Short mode: 0.2 to 9m, Long mode: 0.8 to 15m (selectable by DIP switch)	
Minimum sensing object	ø14mm opaque object	ø25mm opaque object	ø45mm opaque object
Effective aperture angle	±2.5° or less at a sensing range of 3m or longer (based on IEC 61496-2)		
Supply voltage	24V DC $\begin{smallmatrix} +20\% \\ -30\% \end{smallmatrix}$ Ripple P-P 10% or less (excluding voltage drop due to cable)		
Control output (OSSD 1 / 2)	PNP open-collector transistor / NPN open collector transistor (selectable)		
	<PNP output selected>		<NPN output selected>
	<ul style="list-style-type: none"> <li>• Maximum source current: 350mA</li> <li>• Applied voltage: Same as supply voltage (between control output and +V)</li> <li>• Residual voltage: 2V or less (source current 350mA) (excluding voltage drop due to cable)</li> <li>• Leakage current 0.2mA or less (including power OFF state)</li> <li>• Maximum load capacity: 2.2μF (from no load to maximum output current)</li> <li>• Load wiring resistance: 3Ω or less</li> </ul>		<ul style="list-style-type: none"> <li>• Maximum sink current: 350mA</li> <li>• Applied voltage: Same as supply voltage (between control output and 0V)</li> <li>• Residual voltage: 2V or less (sink current 350mA) (excluding voltage drop due to cable)</li> <li>• Leakage current 0.2mA or less (including power OFF state)</li> <li>• Maximum load capacity: 2.2μF (from no load to maximum output current)</li> <li>• Load wiring resistance: 3Ω or less</li> </ul>
	Operation mode (Output operation)		
ON when all beams are received, OFF when one or more beams are blocked (Also OFF when internal sensor error or synchronization signal error occurs) (Note 1)			
Protective circuit (short circuit protection)			Incorporated
Response time			OFF response: 10ms or less (not connected in series / parallel), 18ms or less (connected in series / parallel) (Refer to “<Response time by number of beam channels>”) ON response: 50ms or less (Note 2, 3)
Auxiliary output (AUX) (Non-safety output)	PNP open-collector transistor / NPN open collector transistor (selectable)		
	<PNP output selected>		<NPN output selected>
	<ul style="list-style-type: none"> <li>• Maximum source current: 60mA</li> <li>• Applied voltage: Same as supply voltage (between auxiliary output and +V)</li> <li>• Residual voltage: 2V or less (source current 60mA) (excluding voltage drop due to cable)</li> <li>• Leakage current 0.2mA or less (including power OFF state)</li> </ul>		<ul style="list-style-type: none"> <li>• Maximum sink current: 60mA</li> <li>• Applied voltage: Same as supply voltage (between auxiliary output and 0 V)</li> <li>• Residual voltage: 2V or less (sink current 60mA) (excluding voltage drop due to cable)</li> <li>• Leakage current 0.2mA or less (including power OFF state)</li> </ul>
	Operation mode (Output operation)		
OSSD ON: OFF, OSSD OFF: ON (Note 1)			
Protective circuit (short circuit protection)			Incorporated
Response time			OFF response: 60ms or less, ON response: 60ms or less
Synchronization method	Line synchronization / optical synchronization (selectable by DIP switch)		
Interference prevention function	Line synchronization: Two units or less (auto)		
	Optical synchronization: Two units or less (selectable by DIP switch)		
<ul style="list-style-type: none"> <li>• Series connection: 5 units or less (total number of beam channels 256 or less)</li> <li>• Parallel connection: 3 units or less (total number of beam channels 192 or less)</li> <li>• Mixed series and parallel connections: Total of 5 units or less (total number of beam channels 144 or less)</li> </ul>			
Protective structure	IP67, IP65 (IEC), NEMA Type 13 (NEMA 250)		
Ambient temperature	-10 to +55°C (No condensation or icing), Storage: -25 to +60°C		
Ambient humidity	30 to 85% RH, storage: 30 to 95% RH		
Ambient illumination	Incandescent light: 5,000lx or less at the light-receiving surface		
Degree of pollution	3		
Operating altitude	2,000m or less (Note 4)		
Withstand voltage	AC 1,000V for one minute (between all supply terminals connected together and enclosure)		
Insulation resistance	20MΩ or higher using DC 500V megger (between all supply terminals connected together and enclosure)		

## Specifications

Type	10mm pitch type	20mm pitch type	40mm pitch type
Model No.	<b>SF4D-F</b> □	<b>SF4D-H</b> □	<b>SF4D-A</b> □
Vibration resistance	10 to 55Hz, 0.75mm double amplitude for two hours each in X, Y, and Z directions Malfunction resistance 10 to 55Hz, 0.75mm double amplitude 20 times each in X, Y, and Z directions		
Shock resistance	300m/s <sup>2</sup> (approx. 30G) 3 times each in X, Y, and Z directions Malfunction resistance 100m/s <sup>2</sup> (approx. 10G) 1,000 times each in X, Y, and Z directions		
SFF (Safe Failure Fraction)	99%		
HFT (Hardware Fault Tolerance)	1		
Subsystem type	Type B (IEC 61508-2)		
T1 (proof test interval)	20 years		
Failure response time	Within response time (OFF response)		
Safety state	Control output (OSSD 1 / 2) OFF state		
Emitter element	Infrared LED (peak emission wavelength: 850nm)		
Connection method	By connector		
Cable extension	Total length of emitter / receiver can be extended up to 70m each using optional connection cable (Note 5)		
Material	Enclosure: Aluminum, Detection surface: Polycarbonate / resin and SS304 Upper cap / lower cap: Nylon		
Accessories	<b>SF4B-TR14</b> (test rod): 1 pc.	<b>SF4B-TR25</b> (test rod): 1 pc.	-

Notes: 1) The setting can be changed using the communication module **SF4D-TM1** (option) and Configurator Light Curtain software.

- 2) Because the control output (OSSD 1 / 2) must be OFF for at least 80ms, the ON response will be delayed more than 50ms when the light blocked time is less than 30ms.
- 3) When optical synchronization is selected, if the beam axes of both the top end and bottom end are blocked, the ON response speed decreases by as much as 1 sec.
- 4) Do not use or store in an environment pressurized to atmospheric pressure or higher at an altitude of 0m.
- 5) Taking cable voltage drop and other factors into account, use a cable length as indicated below for the source / sink current of the control output (OSSD 1 / 2).

Number of sub-sensors	Control output (OSSD 1 / 2) source / sink current	Length of power cable + length of series connection cable (total cable length)	Cable	
			Length of power cable	Length of series connection cable
0 (no series connection)	100mA	70m or less	-	-
	200mA	70m or less	-	-
	350mA	10.5m or less	-	-
1	100mA	50m or less	-	Total cable length minus the power cable length
	200mA	50m or less	-	
	350mA	50m or less	10.5m or less	
2	100mA	50m or less	-	
	200mA	50m or less	-	
	350mA	50m or less	10.5m or less	
3	100mA	50m or less	-	
	200mA	50m or less	40.5m or less	
	350mA	50m or less	10.5m or less	
4	100mA	25.5m or less	-	
	200mA	25.5m or less	20.5m or less	
	350mA	25.5m or less	10.5m or less	

Power cable: A bottom cap cable (option) combined with an extension cable (option)

### <Response time by number of beam channels>

#### Control output (OSSD 1 / 2)

		Response time (OFF response)											
		Main sensor	Sub sensor										
Number of units in series connection		1 unit	1 unit	2 units	3 units	4 units	0 unit	0 unit	1 unit	1 unit	2 units	2 units	3 units
Number of units in parallel connection			0 unit	0 unit	0 unit	0 unit	1 unit	2 units	1 unit	2 units	1 unit	2 units	1 unit
Number of beam channels	4 to 48	6ms	10ms	10ms	12ms	12ms	14ms	14ms	14ms	14ms	14ms	14ms	14ms
	49 to 96	8ms	10ms	10ms	12ms	12ms	14ms	14ms	14ms	14ms	14ms	14ms	14ms
	97 to 127	10ms	12ms	12ms	14ms	14ms	14ms	14ms	14ms	14ms	14ms	14ms	14ms
	128 to 144	—	12ms	12ms	14ms	14ms	14ms	14ms	14ms	14ms	14ms	14ms	14ms
	145 to 192	—	14ms	14ms	16ms	16ms	14ms	14ms	—	—	—	—	—
193 to 256	—	16ms	16ms	18ms	18ms	—	—	—	—	—	—	—	

### CAUTION


Both emitter and receiver are adjusted before shipment, please apply both emitter and receiver with the same serial No. The serial No. is indicated on the plates of both emitter and receiver. (Under the model represents the serial No.)

## Options


### 6-2 Options

- Bottom cap cable: 2pcs./set

<Discrete wire>




<Connector>



Type	Model No.	Length	Remarks	
5-core	Discrete wire	<b>SFD-CCB5-S</b>	5m	For emitter: Gray connector For receiver: Black connector
	Discrete wire	<b>SFD-CCB10-S</b>	10m	
	Connector	<b>SFD-CB05-S</b>	0.5m	
8-core	Discrete wire	<b>SFD-CCB3</b>	3m	For emitter: Gray connector For receiver: Black connector
		<b>SFD-CCB7</b>	7m	
		<b>SFD-CCB10</b>	10m	
	Connector	<b>SFD-CCB15</b>	15m	
		<b>SFD-CB05</b>	0.5m	
		<b>SFD-CB10</b>	10m	
12-core	Discrete wire	<b>SFD-CCB3-MU</b>	3m	For emitter: Gray connector For receiver: Black connector
		<b>SFD-CCB7-MU</b>	7m	
		<b>SFD-CCB10-MU</b>	10m	
	Connector	<b>SFD-CB05-MU</b>	0.5m	


- Extension cable with connector on one end: 2 pcs./set



Type	Model No.	Length	Remarks
5-core	<b>SFD-CC3-S</b>	3m	Use to extend a 5-core cable. For emitter: Gray connector For receiver: Black connector
	<b>SFD-CC10-S</b>	10m	
8-core	<b>SFD-CC3</b>	3m	Use to extend a 8-core cable. For emitter: Gray connector For receiver: Black connector
	<b>SFD-CC10</b>	10m	
12-core	<b>SFD-CC3-MU</b>	3m	Use to extend a 12-core cable. For emitter: Gray connector For receiver: Black connector
	<b>SFD-CC7-MU</b>	7m	
	<b>SFD-CC10-MU</b>	10m	




- **Extension cable with connectors on both ends: 1 pc.**



Type		Model No.	Length	Remarks
5-core	For emitter	<b>SFD-CCJ10E-S</b>	10m	Use to extend a 5-core cable. Both ends of the cable are connectors. For emitter: Gray connector For receiver: Black connector
	For receiver	<b>SFD-CCJ10D-S</b>	10m	
8-core	For emitter	<b>SFB-CCJ3E</b>	3m	Use to extend an 8-core cable. Both ends of the cable are connectors. For emitter: Gray connector, Shielded cable For receiver: Black connector, Shielded cable
		<b>SFB-CCJ10E</b>	10m	
	For receiver	<b>SFB-CCJ3D</b>	3m	
		<b>SFB-CCJ10D</b>	10m	
12-core	For emitter	<b>SFB-CCJ3E-MU</b>	3m	Use to extend a 12-core cable. Both ends of the cable are connectors. For emitter: Gray connector, Shielded cable For receiver: Black connector, Shielded cable
		<b>SFB-CCJ10E-MU</b>	10m	
	For receiver	<b>SFB-CCJ3D-MU</b>	3m	
		<b>SFB-CCJ10D-MU</b>	10m	

- **Cable for series connection: 2pcs./set**




Model No.	Length	Remarks
<b>SFD-CSL005</b>	0.05m	Use to connect the device in series. If this device is to be installed in an L-shaped layout configuration, we recommend that an at least 0.1m long series connection cable be used. Common for emitter / receiver
<b>SFD-CSL01</b>	0.1m	
<b>SFD-CSL05</b>	0.5m	
<b>SFD-CSL1</b>	1m	
<b>SFD-CSL5</b>	5m	
<b>SFD-CSL10</b>	10m	

## Options


- **Beam Adjustment Mounting Bracket: 4 pcs./set**

<MS-SFD-1-5> <MS-SFD-1-6> <MS-SFD-1-8>

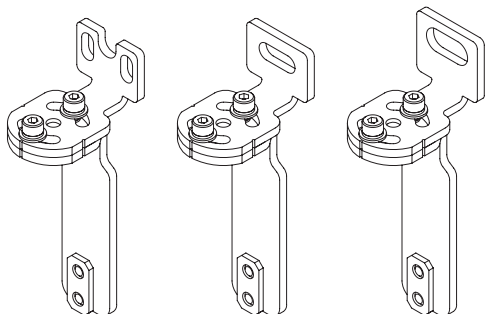

Model No.	Remarks	
<b>MS-SFD-1-5</b>	M5 hexagon-socket head bolt: 2 used or M8 hexagon-socket head bolt: 1 used	Can be mounted on rear or side of device. Material: SPCC
<b>MS-SFD-1-6</b>	M6 hexagon-socket head bolt: 1 used	
<b>MS-SFD-1-8</b>	M8 hexagon-socket head bolt: 1 used	


- **Intermediate supporting bracket: 2 pcs./set**

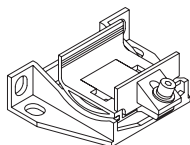

Model No.	Remarks	
<b>MS-SFB-2</b>	Bracket for support of the middle of the device. Use when installing the device in a location subject to vibration. M5 hexagon-socket head bolt: 2 used Material: Die-cast zinc alloy	


Note: When the number of beam axes is **SF4D-F**: 111 or more beam axes, **SF4D-H**: 56 or more beam axes, **SF4D-A**: 28 or more beam axes, one set is required.

- **No dead-space beam adjustment mounting bracket: 4 pcs./set**

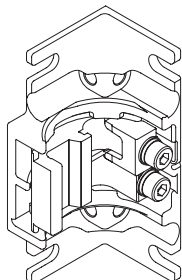


Model No.	Remarks	
<b>MS-SFD-3-6</b>	This is the mounting bracket for reducing the dead space. Can be mounted on rear or side of device. M5 hexagon-socket head bolt: 2 used M6 Hex bolt: 2 used Material: Die-cast zinc alloy	

- **SF4B-G compatible bracket: 4 pcs./set**

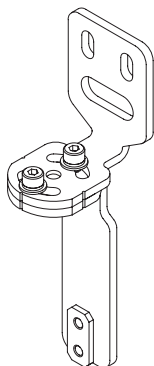

Model No.	Remarks	
<b>MS-SFD-4BG</b>	Mounting brackets for replacement of a previous <b>SF4B-G&lt;V2&gt;</b> series model with this model. No need to change the mounting hole pitch. Use when installing the device in a location subject to vibration. M5 hexagon-socket head bolt: 2 used M8 hexagon-socket head bolt: 1 used Material: SPCC	


- Front protective cover (wide type): 1 pc.

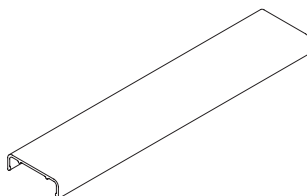

Model No.	Applicable models			Remarks			
FC-SFDH-8	SF4D-F15	SF4D-H8	SF4D-A4	Protects the detection surface of the device from dirt. Mounting the front protective cover shortens the sensing range as shown in the following table.			
FC-SFDH-12	SF4D-F23	SF4D-H12	SF4D-A6				
FC-SFDH-16	SF4D-F31	SF4D-H16	SF4D-A8				
FC-SFDH-20	SF4D-F39	SF4D-H20	SF4D-A10				
FC-SFDH-24	SF4D-F47	SF4D-H24	SF4D-A12				
FC-SFDH-28	SF4D-F55	SF4D-H28	SF4D-A14				
FC-SFDH-32	SF4D-F63	SF4D-H32	SF4D-A16				
FC-SFDH-36	SF4D-F71	SF4D-H36	SF4D-A18				
FC-SFDH-40	SF4D-F79	SF4D-H40	SF4D-A20				
FC-SFDH-48	SF4D-F95	SF4D-H48	SF4D-A24				
FC-SFDH-56	SF4D-F111	SF4D-H56	SF4D-A28				
FC-SFDH-64	SF4D-F127	SF4D-H64	SF4D-A32				
FC-SFDH-72	-	SF4D-H72	SF4D-A36				
FC-SFDH-80	-	SF4D-H80	SF4D-A40	Material: Polycarbonate			
FC-SFDH-88	-	SF4D-H88	SF4D-A44				
FC-SFDH-96	-	SF4D-H96	SF4D-A48				

Model No.	Front protective cover	Sensing range	
		Short mode	Long mode
SF4D-F□	Only emitter	0.2 to 6m	0.8 to 9.5m
	Only receiver	0.2 to 6m	0.8 to 9.5m
	Both	0.2 to 5.5m	0.8 to 9m
SF4D-H□ SF4D-A□	Only emitter	0.2 to 7.5m	0.8 to 12m
	Only receiver	0.2 to 7.5m	0.8 to 12m
	Both	0.2 to 7m	0.8 to 11m

- Front protective cover (slim type): 1 pc.

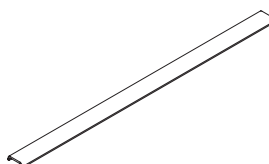


Model No.	Applicable models			Remarks			
FC-SFDH-8-S	SF4D-F15	SF4D-H8	SF4D-A4	Protects the detection surface of the device from dirt. Mounting the front protective cover shortens the sensing range as shown in the following table.			
FC-SFDH-12-S	SF4D-F23	SF4D-H12	SF4D-A6				
FC-SFDH-16-S	SF4D-F31	SF4D-H16	SF4D-A8				
FC-SFDH-20-S	SF4D-F39	SF4D-H20	SF4D-A10				
FC-SFDH-24-S	SF4D-F47	SF4D-H24	SF4D-A12				
FC-SFDH-28-S	SF4D-F55	SF4D-H28	SF4D-A14				
FC-SFDH-32-S	SF4D-F63	SF4D-H32	SF4D-A16				
FC-SFDH-36-S	SF4D-F71	SF4D-H36	SF4D-A18				
FC-SFDH-40-S	SF4D-F79	SF4D-H40	SF4D-A20				
FC-SFDH-48-S	SF4D-F95	SF4D-H48	SF4D-A24				
FC-SFDH-56-S	SF4D-F111	SF4D-H56	SF4D-A28				
FC-SFDH-64-S	SF4D-F127	SF4D-H64	SF4D-A32				
FC-SFDH-72-S	-	SF4D-H72	SF4D-A36				
FC-SFDH-80-S	-	SF4D-H80	SF4D-A40	Material: Polycarbonate			
FC-SFDH-88-S	-	SF4D-H88	SF4D-A44				
FC-SFDH-96-S	-	SF4D-H96	SF4D-A48				

Model No.	Front protective cover	Sensing range	
		Short mode	Long mode
SF4D-F□	Only emitter	0.2 to 6m	0.8 to 9.5m
	Only receiver	0.2 to 6m	0.8 to 9.5m
	Both	0.2 to 5.5m	0.8 to 9m
SF4D-H□ SF4D-A□	Only emitter	0.2 to 7.5m	0.8 to 12m
	Only receiver	0.2 to 7.5m	0.8 to 12m
	Both	0.2 to 7m	0.8 to 11m

Note: Avoid using this cover in a place where severe vibration occurs.


## Options

- Connector-type control unit: 1 pc.

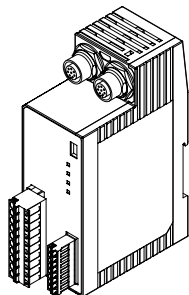


Model No.	Remarks
<b>SF-C11</b>	Control unit that complies with European and North American safety standards. Compatible with cables having an 8-core connector

- Thin-type control unit: 1 pc.

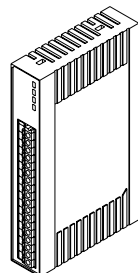


Model No.	Remarks
<b>SF-C13</b>	Control unit that complies with European and North American safety standards.

- Safety control unit: 1 pc.

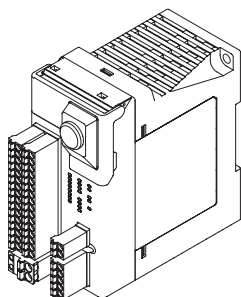


Model No.	Remarks
<b>SF-C21</b>	Equipped with a preset logic certified for the international safety standards and a customized logic. Various types of safety circuit can be configured by selecting a logic and connecting a safety device.

- Beam axis adjuster: 1 pc.

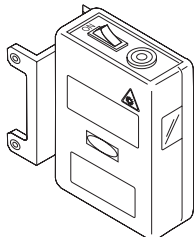

Model No.	Remarks
<b>SF-LAT-2N</b>	Convenient for beam adjustment.

- Test rod: 1 pc.

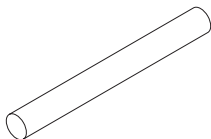

Model No.	Remarks
<b>SF4B-TR45</b>	For <b>SF4D-A</b> □. ø45mm. Can also be used for <b>SF4D-H</b> □ single beam axis floating.

- Communication module: 1 pc.

Model No.	Remarks
<b>SF4D-TM1</b>	Conversion module that lets you connect a PC to the device to change function settings and monitor the device status. The Configurator Light Curtain software is required to use the <b>SF4D-TM1</b> . The Configurator Light Curtain software can be downloaded free-of-charge from our website ( <a href="http://industry.panasonic.com/">industry.panasonic.com/</a> ).

- IO-Link communication unit: 1 pc.


Model	Remarks
<b>SFD-WL3</b>	When the <b>SFD-WL3</b> is connected to the IO-Link master, it is possible to monitor operating conditions (light received / light blocked, lockout, etc.) of this product.

# Dimensions

## 6-3 Dimensions

### 6-3-1 Rear Mounting with MS-SFD-1-5 and MS-SFB-2

(Units: mm)

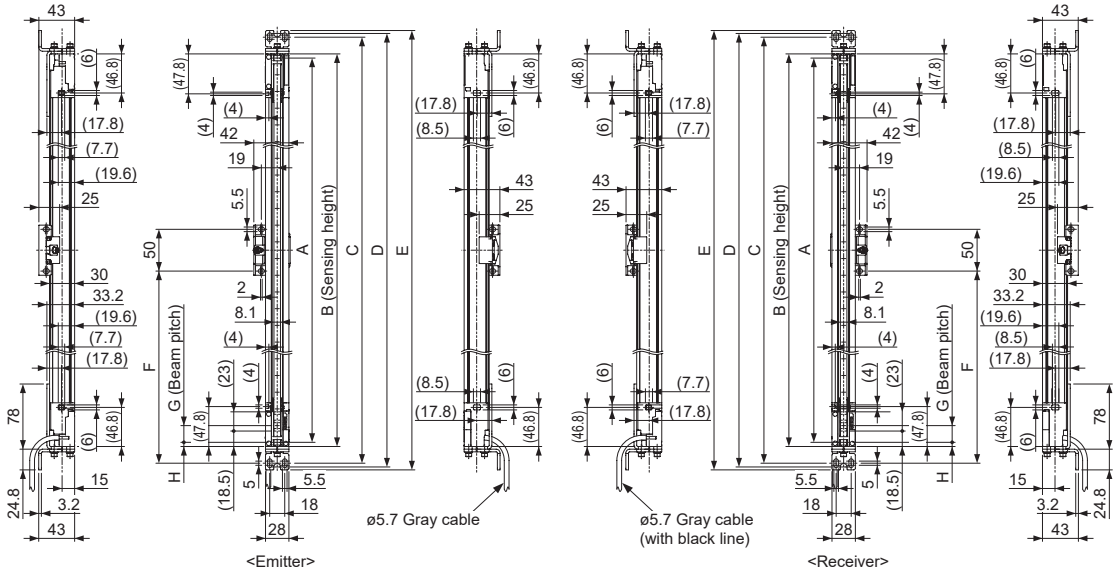


Model No.			A		B	C	D	E	F
			SF4D-F□ SF4D-H□	SF4D-A□					
SF4D-F15	SF4D-H8	SF4D-A4	140	120	150	190	199	206	-
SF4D-F23	SF4D-H12	SF4D-A6	220	200	230	270	279	286	-
SF4D-F31	SF4D-H16	SF4D-A8	300	280	310	350	359	366	-
SF4D-F39	SF4D-H20	SF4D-A10	380	360	390	430	439	446	-
SF4D-F47	SF4D-H24	SF4D-A12	460	440	470	510	519	526	-
SF4D-F55	SF4D-H28	SF4D-A14	540	520	550	590	599	606	-
SF4D-F63	SF4D-H32	SF4D-A16	620	600	630	670	679	686	-
SF4D-F71	SF4D-H36	SF4D-A18	700	680	710	750	759	766	-
SF4D-F79	SF4D-H40	SF4D-A20	780	760	790	830	839	846	-
SF4D-F95	SF4D-H48	SF4D-A24	940	920	950	990	999	1,006	-
SF4D-F111	SF4D-H56	SF4D-A28	1,100	1,080	1,110	1,150	1,159	1,166	550
SF4D-F127	SF4D-H64	SF4D-A32	1,260	1,240	1,270	1,310	1,319	1,326	630
-	SF4D-H72	SF4D-A36	1,420	1,400	1,430	1,470	1,479	1,486	710
-	SF4D-H80	SF4D-A40	1,580	1,560	1,590	1,630	1,639	1,646	790
-	SF4D-H88	SF4D-A44	1,740	1,720	1,750	1,790	1,799	1,806	870
-	SF4D-H96	SF4D-A48	1,900	1,880	1,910	1,950	1,959	1,966	950

Type	G	H
SF4D-F□	10	5
SF4D-H□	20	5
SF4D-A□	40	15

## 6-3-2 Side Mounting with MS-SFD-1-5 and MS-SFB-2

(Units: mm)

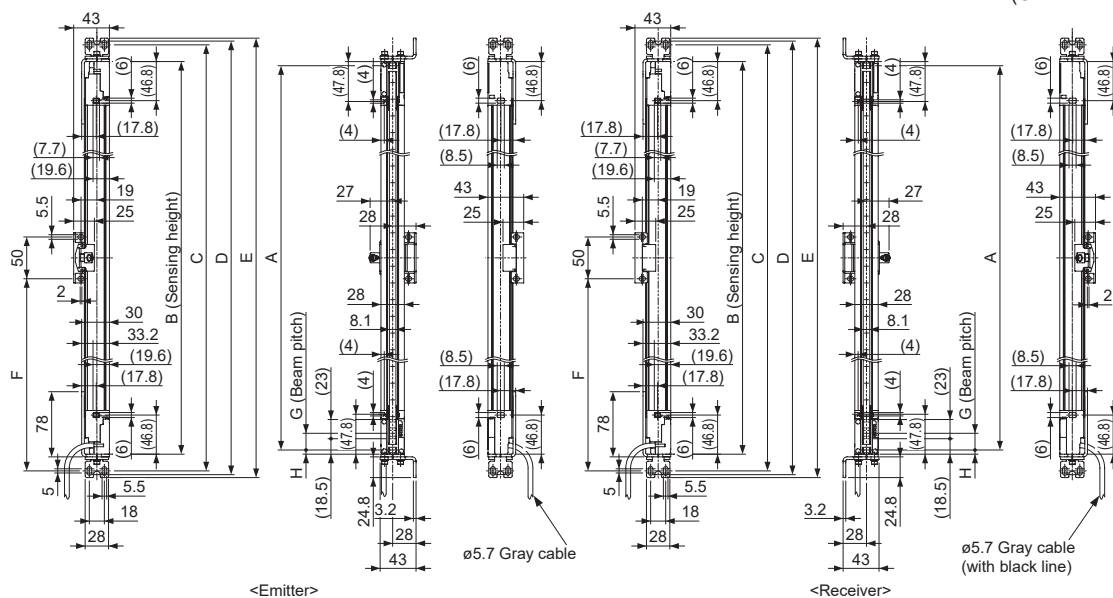


Model No.			A		B	C	D	E	F
			SF4D-F□ SF4D-H□	SF4D-A□					
SF4D-F15	SF4D-H8	SF4D-A4	140	120	150	190	199	206	-
SF4D-F23	SF4D-H12	SF4D-A6	220	200	230	270	279	286	-
SF4D-F31	SF4D-H16	SF4D-A8	300	280	310	350	359	366	-
SF4D-F39	SF4D-H20	SF4D-A10	380	360	390	430	439	446	-
SF4D-F47	SF4D-H24	SF4D-A12	460	440	470	510	519	526	-
SF4D-F55	SF4D-H28	SF4D-A14	540	520	550	590	599	606	-
SF4D-F63	SF4D-H32	SF4D-A16	620	600	630	670	679	686	-
SF4D-F71	SF4D-H36	SF4D-A18	700	680	710	750	759	766	-
SF4D-F79	SF4D-H40	SF4D-A20	780	760	790	830	839	846	-
SF4D-F95	SF4D-H48	SF4D-A24	940	920	950	990	999	1,006	-
SF4D-F111	SF4D-H56	SF4D-A28	1,100	1,080	1,110	1,150	1,159	1,166	550
SF4D-F127	SF4D-H64	SF4D-A32	1,260	1,240	1,270	1,310	1,319	1,326	630
-	SF4D-H72	SF4D-A36	1,420	1,400	1,430	1,470	1,479	1,486	710
-	SF4D-H80	SF4D-A40	1,580	1,560	1,590	1,630	1,639	1,646	790
-	SF4D-H88	SF4D-A44	1,740	1,720	1,750	1,790	1,799	1,806	870
-	SF4D-H96	SF4D-A48	1,900	1,880	1,910	1,950	1,959	1,966	950

Type	G	H
SF4D-F□	10	5
SF4D-H□	20	5
SF4D-A□	40	15

# Dimensions

## 6-3-3 Rear Mounting with MS-SFD-1-6 and MS-SFB-2

(Units: mm)

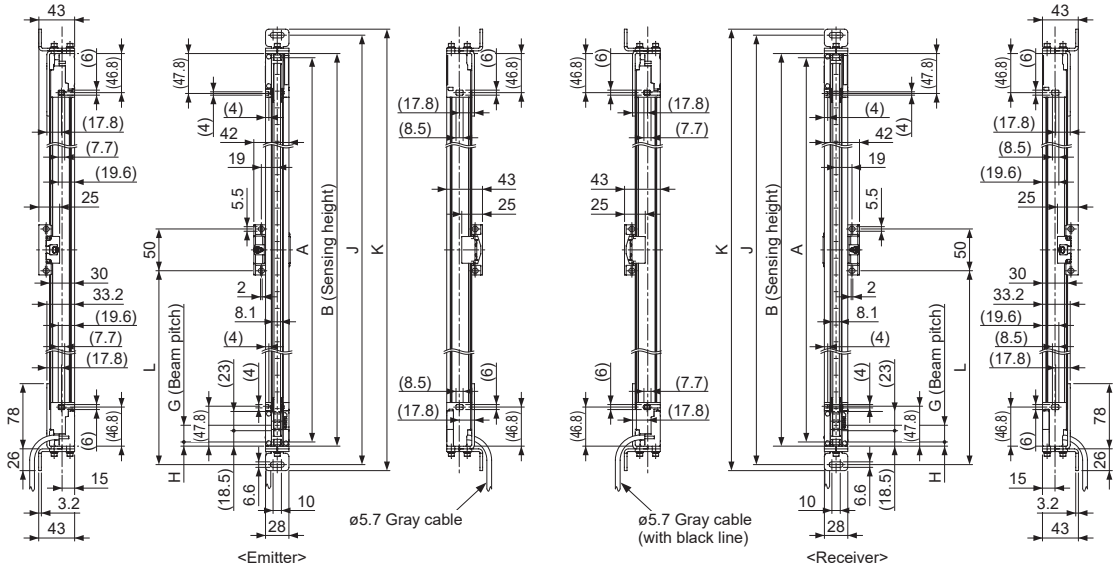


Model No.			A		B	J	K	L
			SF4D-F□	SF4D-A□				
SF4D-F15	SF4D-H8	SF4D-A4	140	120	150	194	208	-
SF4D-F23	SF4D-H12	SF4D-A6	220	200	230	274	288	-
SF4D-F31	SF4D-H16	SF4D-A8	300	280	310	354	368	-
SF4D-F39	SF4D-H20	SF4D-A10	380	360	390	434	448	-
SF4D-F47	SF4D-H24	SF4D-A12	460	440	470	514	528	-
SF4D-F55	SF4D-H28	SF4D-A14	540	520	550	594	608	-
SF4D-F63	SF4D-H32	SF4D-A16	620	600	630	674	688	-
SF4D-F71	SF4D-H36	SF4D-A18	700	680	710	754	768	-
SF4D-F79	SF4D-H40	SF4D-A20	780	760	790	834	848	-
SF4D-F95	SF4D-H48	SF4D-A24	940	920	950	994	1,008	-
SF4D-F111	SF4D-H56	SF4D-A28	1,100	1,080	1,110	1,154	1,168	552
SF4D-F127	SF4D-H64	SF4D-A32	1,260	1,240	1,270	1,314	1,328	632
-	SF4D-H72	SF4D-A36	1,420	1,400	1,430	1,474	1,488	712
-	SF4D-H80	SF4D-A40	1,580	1,560	1,590	1,634	1,648	792
-	SF4D-H88	SF4D-A44	1,740	1,720	1,750	1,794	1,808	872
-	SF4D-H96	SF4D-A48	1,900	1,880	1,910	1,954	1,968	952

Type	G	H
SF4D-F□	10	5
SF4D-H□	20	5
SF4D-A□	40	15



## 6-3-4 Side Mounting with MS-SFD-1-6 and MS-SFB-2

(Units: mm)

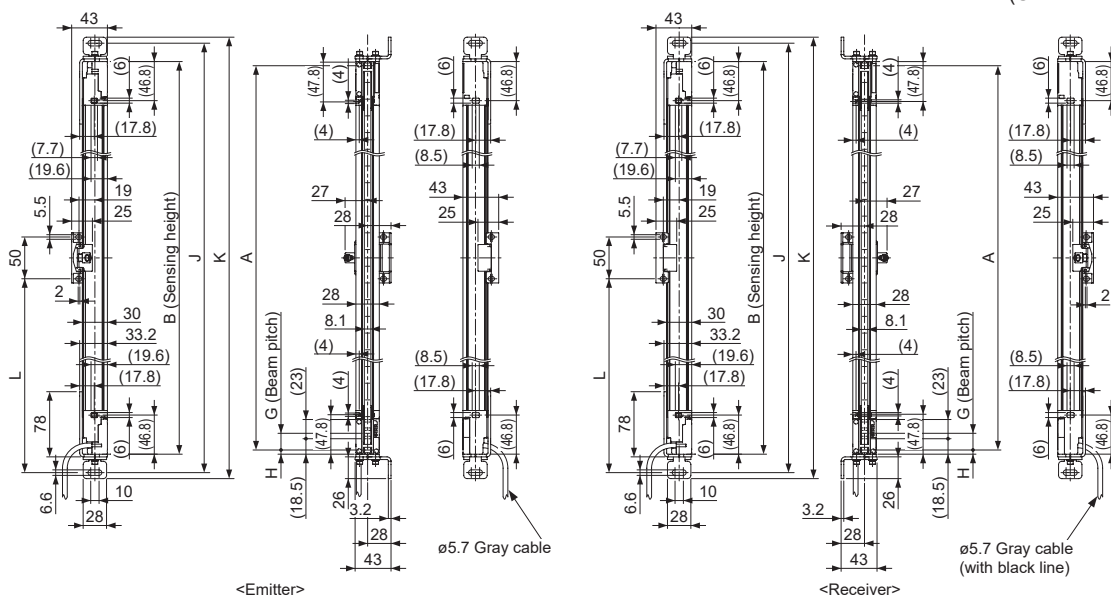


Model No.			A		B	J	K	L
			SF4D-F□ SF4D-H□	SF4D-A□				
SF4D-F15	SF4D-H8	SF4D-A4	140	120	150	194	208	-
SF4D-F23	SF4D-H12	SF4D-A6	220	200	230	274	288	-
SF4D-F31	SF4D-H16	SF4D-A8	300	280	310	354	368	-
SF4D-F39	SF4D-H20	SF4D-A10	380	360	390	434	448	-
SF4D-F47	SF4D-H24	SF4D-A12	460	440	470	514	528	-
SF4D-F55	SF4D-H28	SF4D-A14	540	520	550	594	608	-
SF4D-F63	SF4D-H32	SF4D-A16	620	600	630	674	688	-
SF4D-F71	SF4D-H36	SF4D-A18	700	680	710	754	768	-
SF4D-F79	SF4D-H40	SF4D-A20	780	760	790	834	848	-
SF4D-F95	SF4D-H48	SF4D-A24	940	920	950	994	1,008	-
SF4D-F111	SF4D-H56	SF4D-A28	1,100	1,080	1,110	1,154	1,168	552
SF4D-F127	SF4D-H64	SF4D-A32	1,260	1,240	1,270	1,314	1,328	632
-	SF4D-H72	SF4D-A36	1,420	1,400	1,430	1,474	1,488	712
-	SF4D-H80	SF4D-A40	1,580	1,560	1,590	1,634	1,648	792
-	SF4D-H88	SF4D-A44	1,740	1,720	1,750	1,794	1,808	872
-	SF4D-H96	SF4D-A48	1,900	1,880	1,910	1,954	1,968	952

Type	G	H
SF4D-F□	10	5
SF4D-H□	20	5
SF4D-A□	40	15

# Dimensions

## 6-3-5 Rear Mounting with MS-SFD-1-8 and MS-SFB-2

(Units: mm)

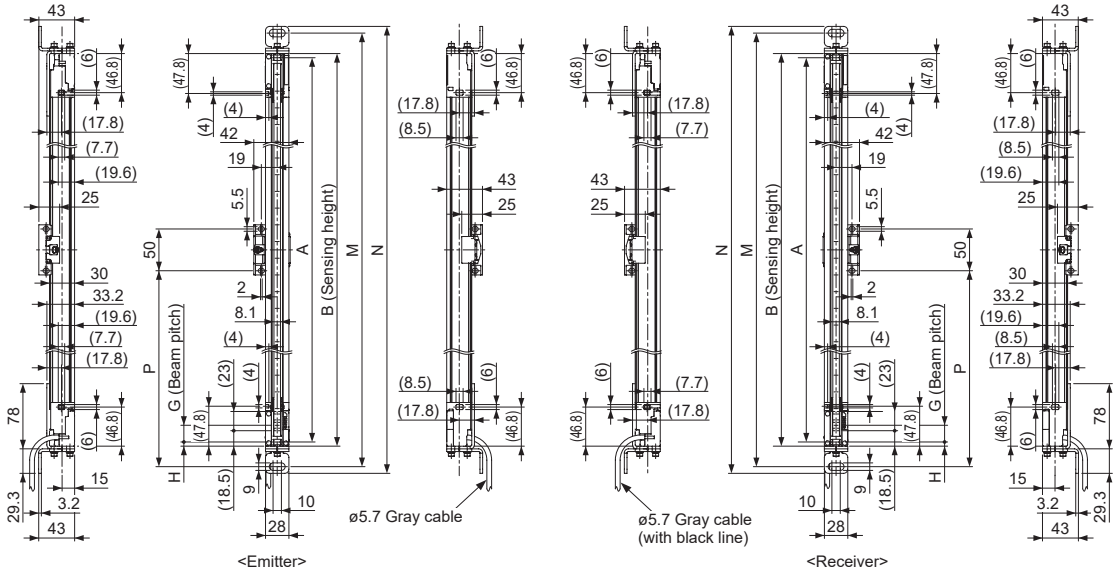


Model No.			A		B	M	N	P
			SF4D-F□	SF4D-A□				
SF4D-F15	SF4D-H8	SF4D-A4	140	120	150	199	215	-
SF4D-F23	SF4D-H12	SF4D-A6	220	200	230	279	295	-
SF4D-F31	SF4D-H16	SF4D-A8	300	280	310	359	375	-
SF4D-F39	SF4D-H20	SF4D-A10	380	360	390	439	455	-
SF4D-F47	SF4D-H24	SF4D-A12	460	440	470	519	535	-
SF4D-F55	SF4D-H28	SF4D-A14	540	520	550	599	615	-
SF4D-F63	SF4D-H32	SF4D-A16	620	600	630	679	695	-
SF4D-F71	SF4D-H36	SF4D-A18	700	680	710	759	775	-
SF4D-F79	SF4D-H40	SF4D-A20	780	760	790	839	855	-
SF4D-F95	SF4D-H48	SF4D-A24	940	920	950	999	1,015	-
SF4D-F111	SF4D-H56	SF4D-A28	1,100	1,080	1,110	1,159	1,175	555
SF4D-F127	SF4D-H64	SF4D-A32	1,260	1,240	1,270	1,319	1,335	635
-	SF4D-H72	SF4D-A36	1,420	1,400	1,430	1,479	1,495	715
-	SF4D-H80	SF4D-A40	1,580	1,560	1,590	1,639	1,655	795
-	SF4D-H88	SF4D-A44	1,740	1,720	1,750	1,799	1,815	875
-	SF4D-H96	SF4D-A48	1,900	1,880	1,910	1,959	1,975	955

Type	G	H
SF4D-F□	10	5
SF4D-H□	20	5
SF4D-A□	40	15

## 6-3-6 Side Mounting with MS-SFD-1-8 and MS-SFB-2

(Units: mm)

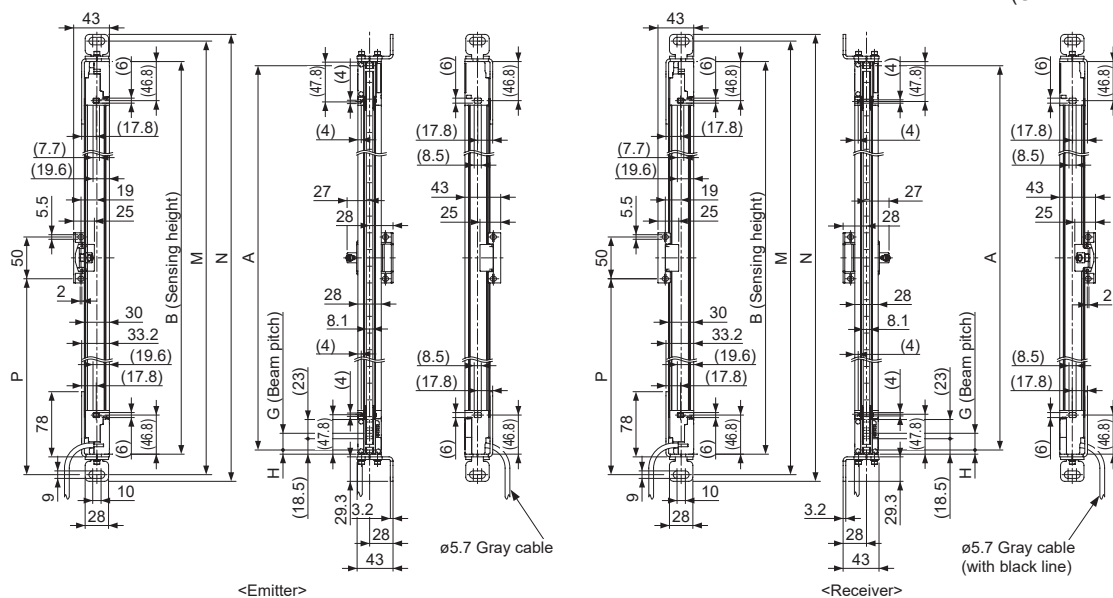


Model No.			A		B	M	N	P
			SF4D-F□ SF4D-H□	SF4D-A□				
SF4D-F15	SF4D-H8	SF4D-A4	140	120	150	199	215	-
SF4D-F23	SF4D-H12	SF4D-A6	220	200	230	279	295	-
SF4D-F31	SF4D-H16	SF4D-A8	300	280	310	359	375	-
SF4D-F39	SF4D-H20	SF4D-A10	380	360	390	439	455	-
SF4D-F47	SF4D-H24	SF4D-A12	460	440	470	519	535	-
SF4D-F55	SF4D-H28	SF4D-A14	540	520	550	599	615	-
SF4D-F63	SF4D-H32	SF4D-A16	620	600	630	679	695	-
SF4D-F71	SF4D-H36	SF4D-A18	700	680	710	759	775	-
SF4D-F79	SF4D-H40	SF4D-A20	780	760	790	839	855	-
SF4D-F95	SF4D-H48	SF4D-A24	940	920	950	999	1,015	-
SF4D-F111	SF4D-H56	SF4D-A28	1,100	1,080	1,110	1,159	1,175	555
SF4D-F127	SF4D-H64	SF4D-A32	1,260	1,240	1,270	1,319	1,335	635
-	SF4D-H72	SF4D-A36	1,420	1,400	1,430	1,479	1,495	715
-	SF4D-H80	SF4D-A40	1,580	1,560	1,590	1,639	1,655	795
-	SF4D-H88	SF4D-A44	1,740	1,720	1,750	1,799	1,815	875
-	SF4D-H96	SF4D-A48	1,900	1,880	1,910	1,959	1,975	955

Type	G	H
SF4D-F□	10	5
SF4D-H□	20	5
SF4D-A□	40	15

# Dimensions

## 6-3-7 Mounting with MS-SFD-3-6


(Units: mm)

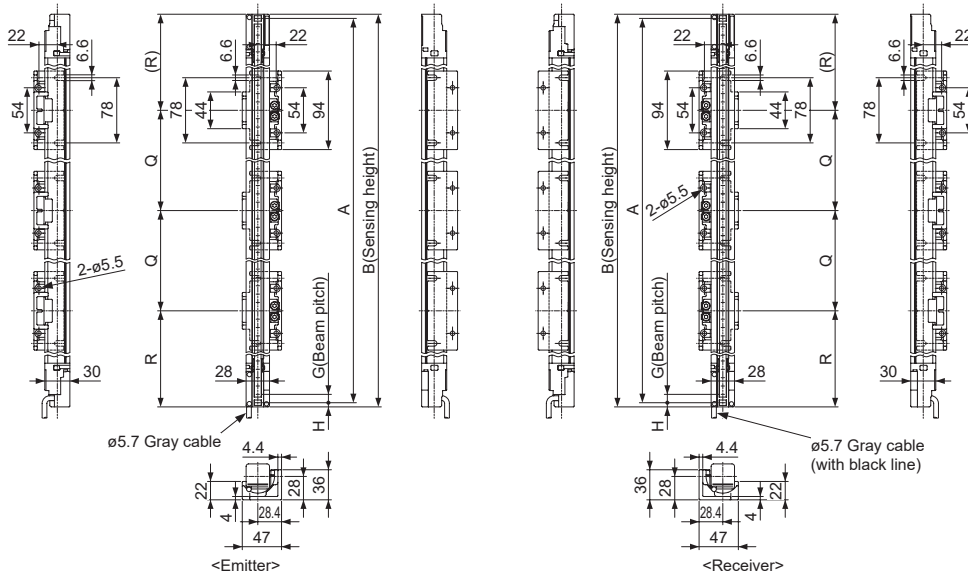

Model No.			A		B	Q	R	Count
			SF4D-F□	SF4D-A□				
SF4D-F15	SF4D-H8	SF4D-A4	140	120	150	0	75	1
SF4D-F23	SF4D-H12	SF4D-A6	220	200	230	94	68	2
SF4D-F31	SF4D-H16	SF4D-A8	300	280	310	110	100	
SF4D-F39	SF4D-H20	SF4D-A10	380	360	390	160	115	
SF4D-F47	SF4D-H24	SF4D-A12	460	440	470	200	135	
SF4D-F55	SF4D-H28	SF4D-A14	540	520	550	250	150	
SF4D-F63	SF4D-H32	SF4D-A16	620	600	630	290	170	
SF4D-F71	SF4D-H36	SF4D-A18	700	680	710	340	185	
SF4D-F79	SF4D-H40	SF4D-A20	780	760	790	380	205	
SF4D-F95	SF4D-H48	SF4D-A24	940	920	950	470	240	
SF4D-F111	SF4D-H56	SF4D-A28	1,100	1,080	1,110	560	275	
SF4D-F127	SF4D-H64	SF4D-A32	1,260	1,240	1,270	650	310	
-	SF4D-H72	SF4D-A36	1,420	1,400	1,430	730	350	3
-	SF4D-H80	SF4D-A40	1,580	1,560	1,590	530	265	
-	SF4D-H88	SF4D-A44	1,740	1,720	1,750	590	285	
-	SF4D-H96	SF4D-A48	1,900	1,880	1,910	650	305	

Type	G	H
SF4D-F□	10	5
SF4D-H□	20	5
SF4D-A□	40	15

6-3-8 Rear Mounting with MS-SFD-4BG and MS-SFB-2

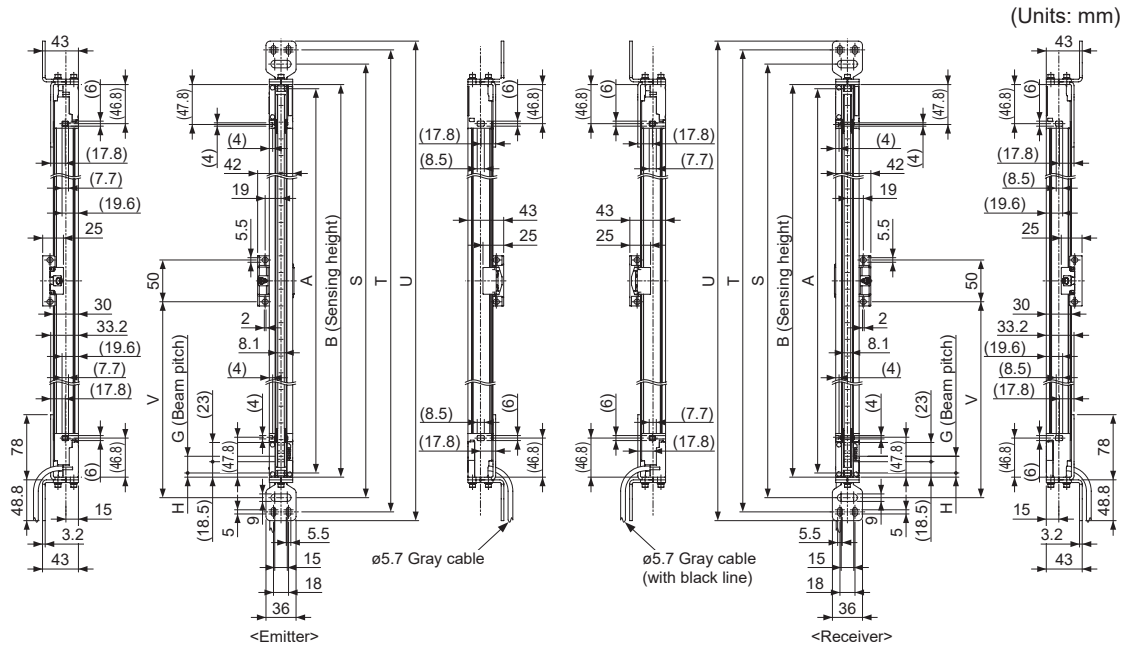


Model No.			A		B	S	T	U	V
			SF4D-F□	SF4D-A□					
SF4D-F15	SF4D-H8	SF4D-A4	140	120	150	199	233	254	-
SF4D-F23	SF4D-H12	SF4D-A6	220	200	230	279	313	334	-
SF4D-F31	SF4D-H16	SF4D-A8	300	280	310	359	393	414	-
SF4D-F39	SF4D-H20	SF4D-A10	380	360	390	439	473	494	-
SF4D-F47	SF4D-H24	SF4D-A12	460	440	470	519	553	574	-
SF4D-F55	SF4D-H28	SF4D-A14	540	520	550	599	633	654	-
SF4D-F63	SF4D-H32	SF4D-A16	620	600	630	679	713	734	-
SF4D-F71	SF4D-H36	SF4D-A18	700	680	710	759	793	814	-
SF4D-F79	SF4D-H40	SF4D-A20	780	760	790	839	873	894	-
SF4D-F95	SF4D-H48	SF4D-A24	940	920	950	999	1,033	1,054	-
SF4D-F111	SF4D-H56	SF4D-A28	1,100	1,080	1,110	1,159	1,193	1,214	555
SF4D-F127	SF4D-H64	SF4D-A32	1,260	1,240	1,270	1,319	1,353	1,374	635
-	SF4D-H72	SF4D-A36	1,420	1,400	1,430	1,479	1,513	1,534	715
-	SF4D-H80	SF4D-A40	1,580	1,560	1,590	1,639	1,673	1,694	795
-	SF4D-H88	SF4D-A44	1,740	1,720	1,750	1,799	1,833	1,854	875
-	SF4D-H96	SF4D-A48	1,900	1,880	1,910	1,959	1,993	2,014	955

Type	G	H
SF4D-F□	10	5
SF4D-H□	20	5
SF4D-A□	40	15

# Dimensions

## 6-3-9 Side Mounting with MS-SFD-4BG and MS-SFB-2

(Units: mm)

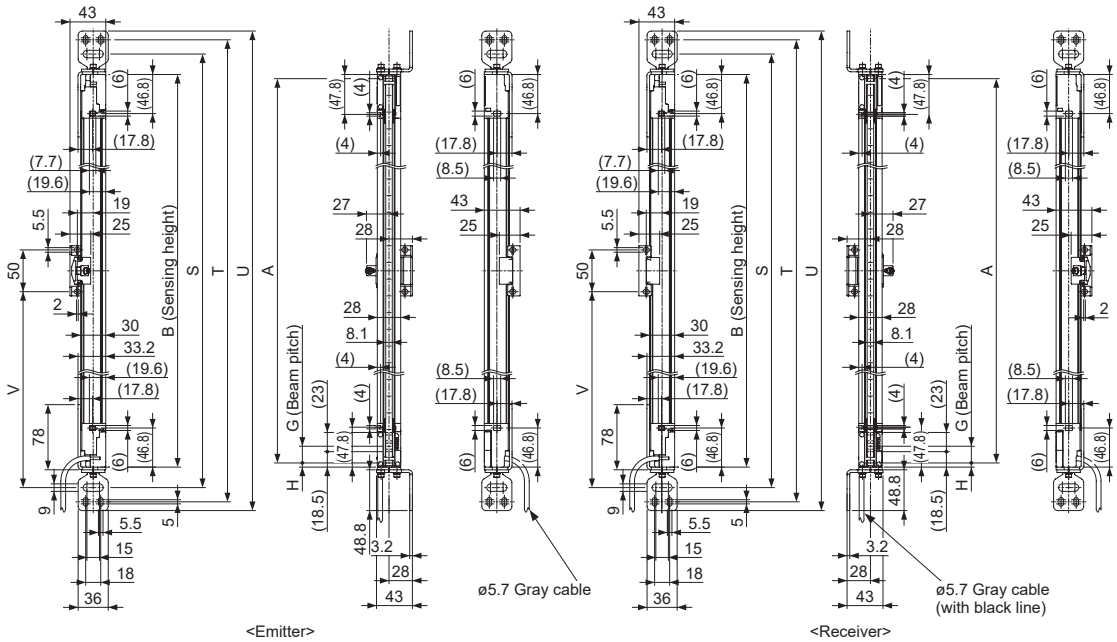


Model No.			A		B	S	T	U	V
			SF4D-F□	SF4D-A□					
SF4D-F15	SF4D-H8	SF4D-A4	140	120	150	199	233	254	-
SF4D-F23	SF4D-H12	SF4D-A6	220	200	230	279	313	334	-
SF4D-F31	SF4D-H16	SF4D-A8	300	280	310	359	393	414	-
SF4D-F39	SF4D-H20	SF4D-A10	380	360	390	439	473	494	-
SF4D-F47	SF4D-H24	SF4D-A12	460	440	470	519	553	574	-
SF4D-F55	SF4D-H28	SF4D-A14	540	520	550	599	633	654	-
SF4D-F63	SF4D-H32	SF4D-A16	620	600	630	679	713	734	-
SF4D-F71	SF4D-H36	SF4D-A18	700	680	710	759	793	814	-
SF4D-F79	SF4D-H40	SF4D-A20	780	760	790	839	873	894	-
SF4D-F95	SF4D-H48	SF4D-A24	940	920	950	999	1,033	1,054	-
SF4D-F111	SF4D-H56	SF4D-A28	1,100	1,080	1,110	1,159	1,193	1,214	555
SF4D-F127	SF4D-H64	SF4D-A32	1,260	1,240	1,270	1,319	1,353	1,374	635
-	SF4D-H72	SF4D-A36	1,420	1,400	1,430	1,479	1,513	1,534	715
-	SF4D-H80	SF4D-A40	1,580	1,560	1,590	1,639	1,673	1,694	795
-	SF4D-H88	SF4D-A44	1,740	1,720	1,750	1,799	1,833	1,854	875
-	SF4D-H96	SF4D-A48	1,900	1,880	1,910	1,959	1,993	2,014	955

Type	G	H
SF4D-F□	10	5
SF4D-H□	20	5
SF4D-A□	40	15

**6-3-10 Mounting Brackets**

**6-3-10-1 Beam Adjustment Mounting Bracket MS-SFD-1-5**

(Units: mm)

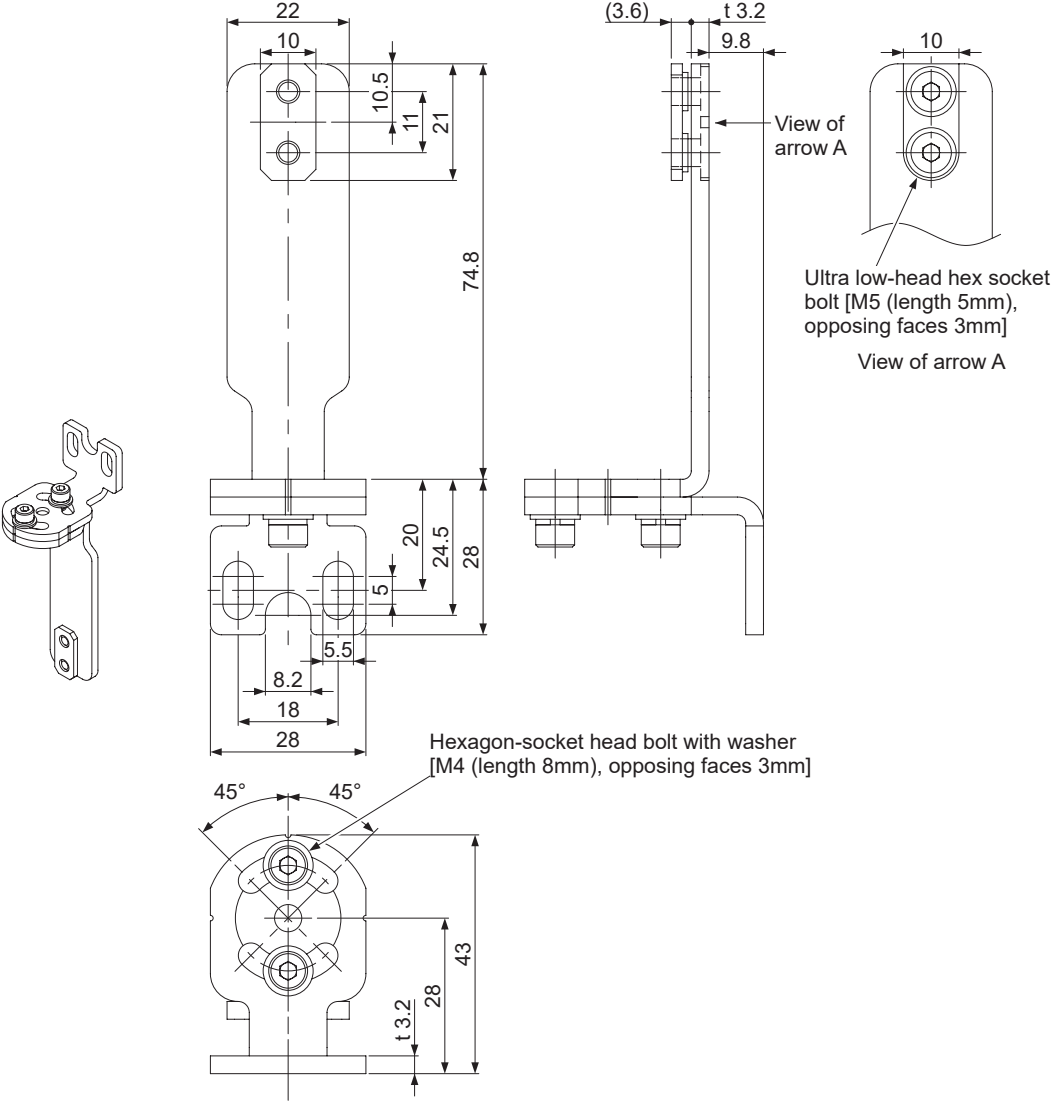


Material: SPCC

# Dimensions

## 6-3-10-2 Beam Adjustment Mounting Bracket MS-SFD-1-6

(Units: mm)

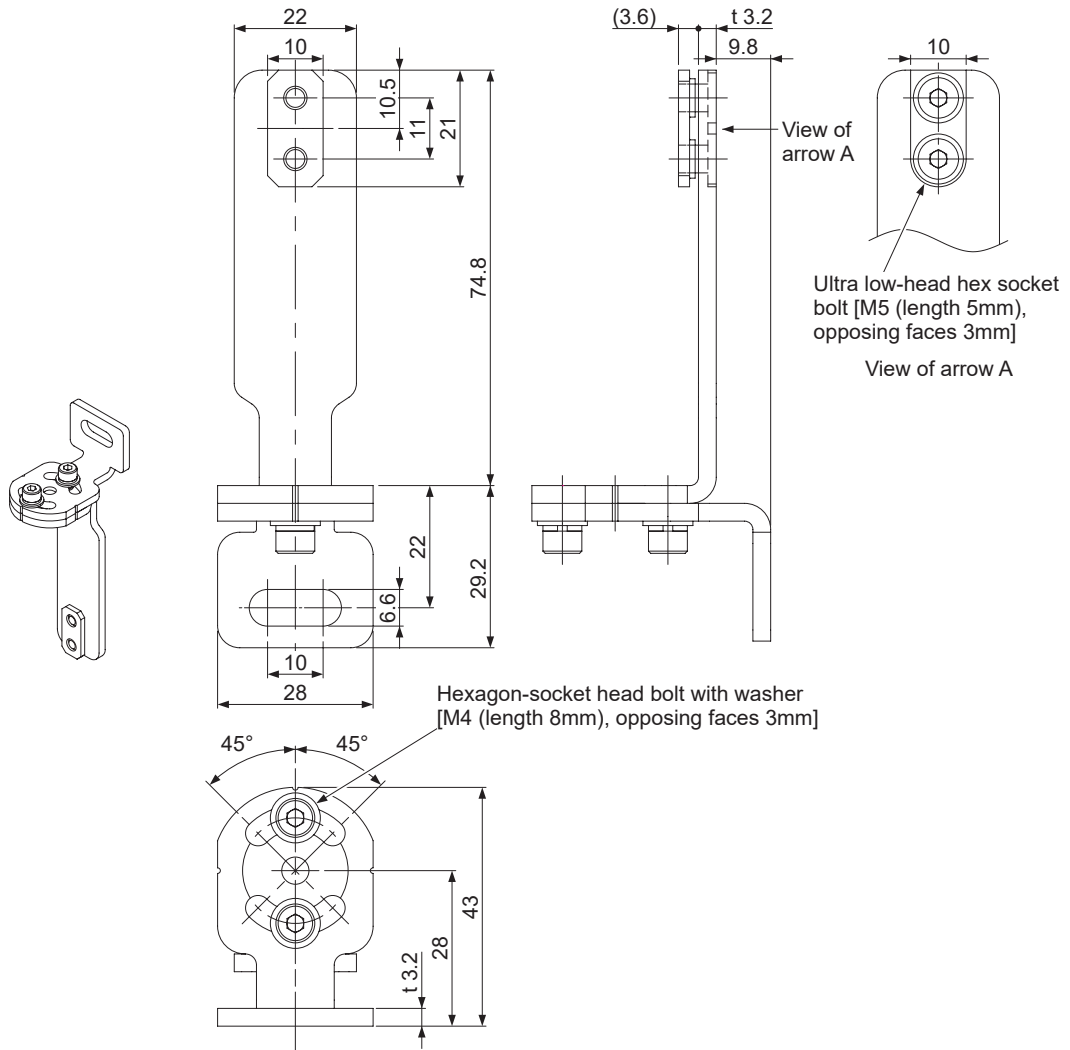


Material: SPCC



6-3-10-3 Beam Adjustment Mounting Bracket MS-SFD-1-8

(Units: mm)

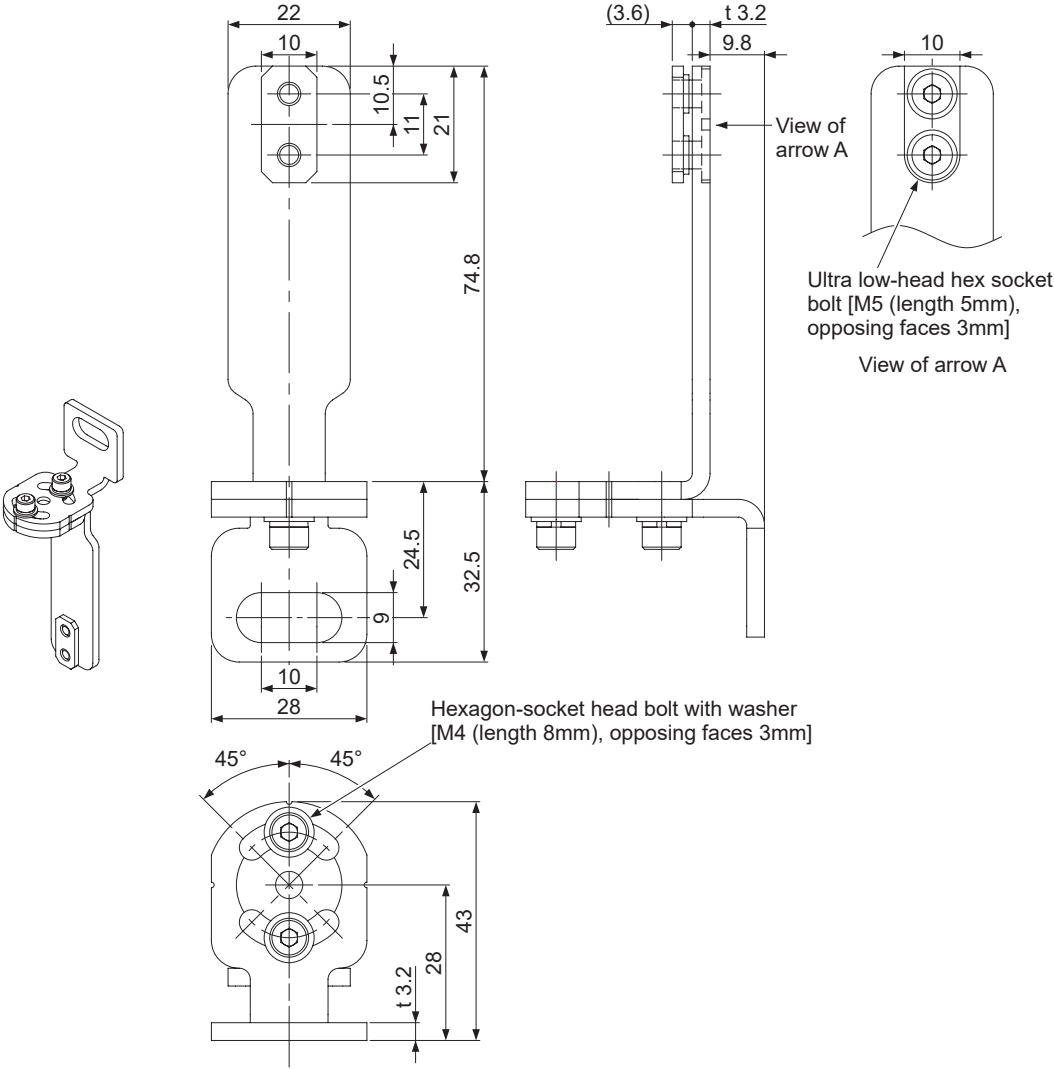


Material: SPCC

# Dimensions

## 6-3-10-4 Intermediate Support Bracket MS-SFB-2


(Units: mm)

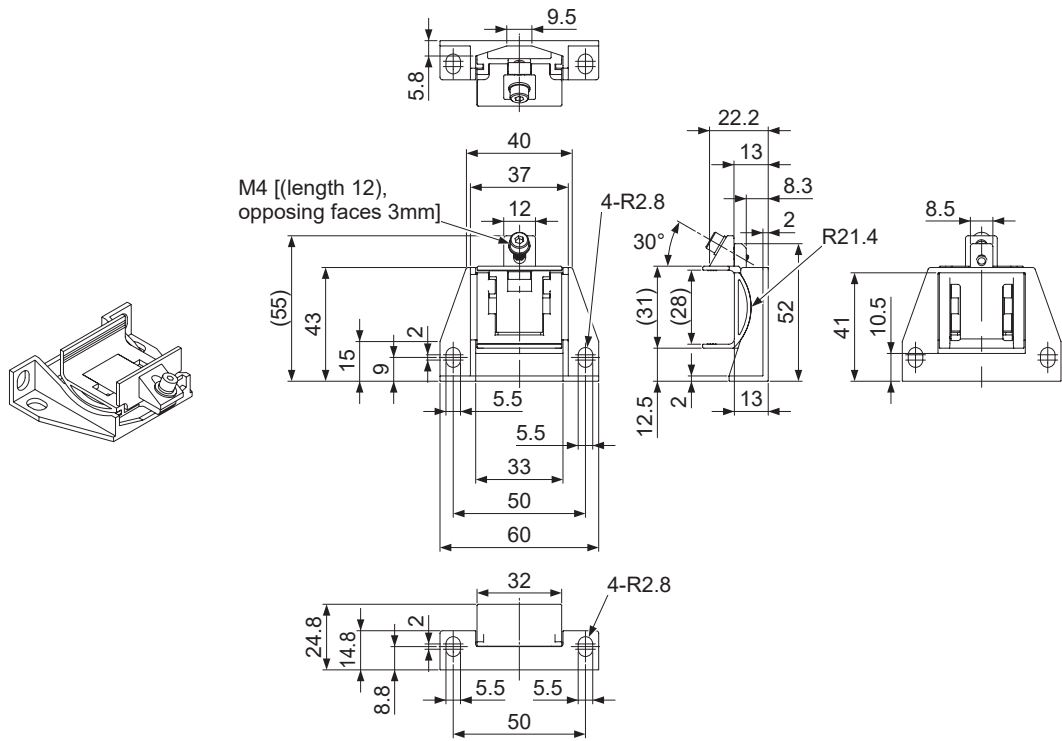

Material: Die-cast zinc alloy

## 6-3-10-5 No Dead-Space Beam Adjustment Mounting Bracket MS-SFD-3-6

(Units: mm)

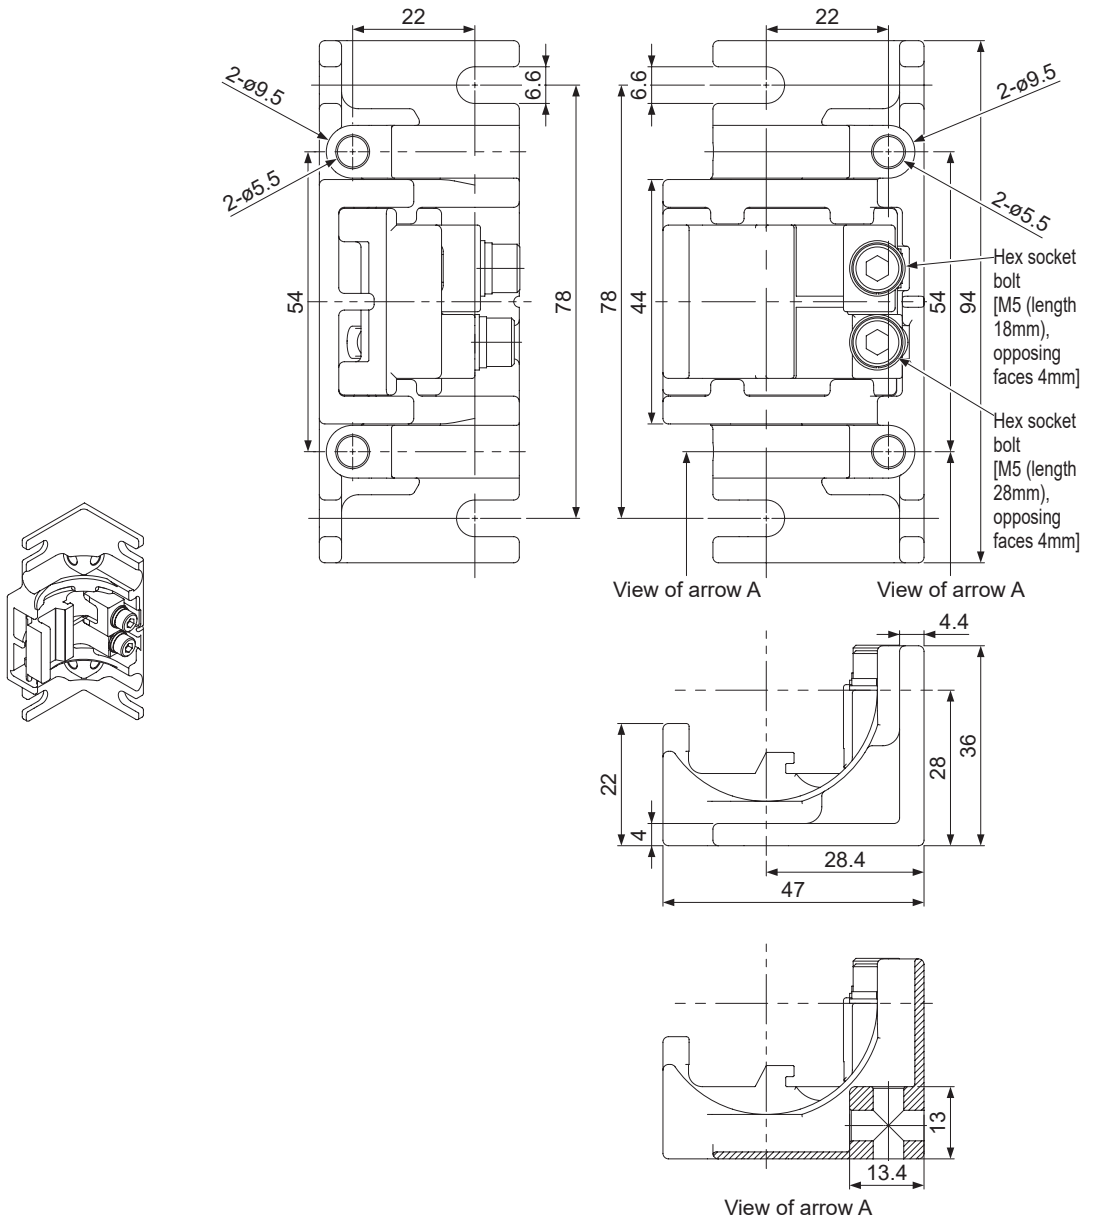


Material: Die-cast zinc alloy

# Dimensions

## 6-3-10-6 SF4B-G Compatible Mounting Bracket MS-SFD-4BG

(Units: mm)

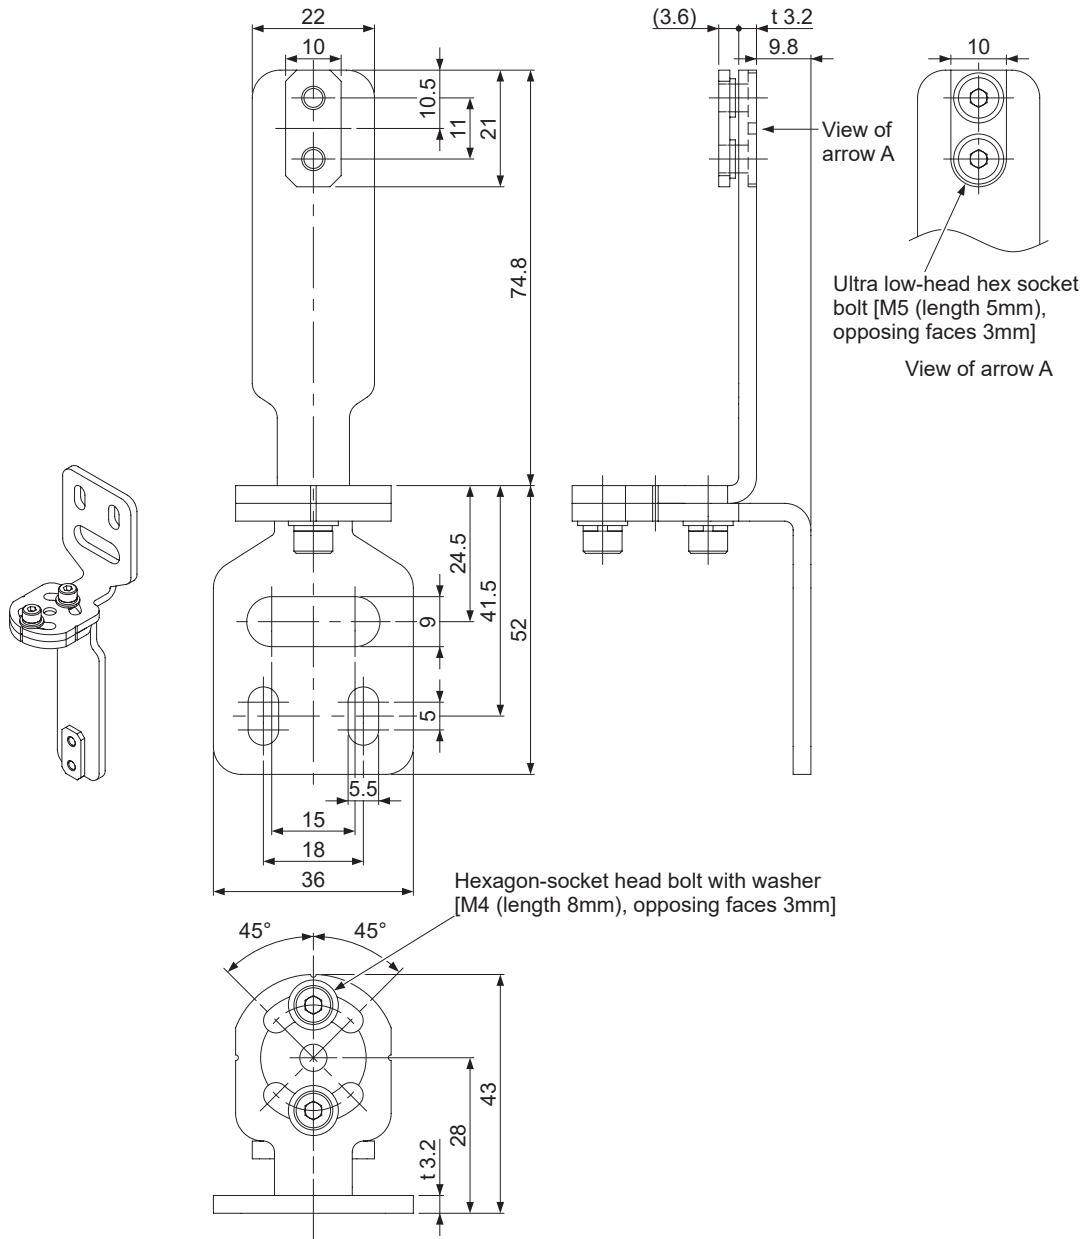

Material: SPCC

# Chapter 7 Other Information

---

7-1 Glossary.....	170
7-2 CE Marking Declaration of Conformity .....	172
7-3 UKCA Marking Declaration of Conformity .....	173

## Glossary

### 7-1 Glossary

Machinery Directive / Machinery Regulations	This directive and regulations applies to assemblies of linked parts or components powered by electricity, compressed air, oil pressure, or other means, consisting of at least one component which moves and a component which fulfills a safety function, and which is sold in the market as a single unit.
EMC Directive / EMC Regulations	This directives and regulations applies to electric or electronic devices which may create electromagnetic interference, or whose performance may be affected by electromagnetic interference.
IEC 61496-1/2 ANSI/UL 61496-1/2 JIS B 9704-1/2	Standards that pertain to machine safety, especially electrosensitive protective equipment (ESPE). IEC 61496-1, ANSI/UL 61496-1 and JIS B 9704-1 give general rules for failure mode and effect analysis, EMC requirements, and other matters. IEC 61496-2, ANSI/UL 61496-2 and JIS B 9704-2 specify effective aperture angles and protection against extraneous light sources for Active Opto-electronic Protective Devices (AOP-Ds).
IEC 61508-1 to 7 JIS C 0508-1 to 7	Standards that pertain to general functional safety for electrical, electronic, and programmable electronic devices. These standards prescribe methods, safety integrity levels (SIL), and other specifications that reduce risk to a tolerable level of probability.
EN 55011	Specifies the allowable levels and measurement methods for radio interference characteristics of industrial, scientific and medical (ISM) radio-frequency equipment.
EN ISO 13849-1:2015 EN 13849-1:2015 JIS B 9705-1	Standards for safety-related matters of machine safety / control systems. These standards specify levels (categories) of structure and fault detection reliability, and levels of safety function performance capability (PL: Performance Level).
ESPE	Abbreviation for Electro-Sensitive Protective Equipment.
Control output (OSSD)	Abbreviation for Output Signal Switching Device. A component of the light curtain that turns OFF when light of the light curtain is blocked.
FSD	Abbreviation for Final Switching Device. This is a component of the machine's control system that breaks the MPCE circuit when the OSSD outputs an OFF signal due to the light from the light curtain being blocked.
Test rod	Rod for checking the detection capability of the device. The size of the rod is equivalent to the minimum sensing object.
Lockout	One of the safety states of the device. Operation stops when the self-diagnosis function determines that an irrecoverable failure (OSSDs not operating normally, etc.) has occurred. When the emitter is in the lockout state, the OSSD and SSD of the receiver turn OFF. When the receiver is in the lockout state, the OSSD and SSD turn OFF.

Safety distance	The minimum distance that must be maintained between the light curtain and the dangerous part of the machine so that the machine can be stopped before a human body or object reaches the dangerous part.
Sensing height (protection height)	The height of the beam-axis direction wherein the minimum sensing object can be detected. Length from the center of the 1st beam axis of the device to the center of the last beam axis + 20 mm (top end + 10 mm, bottom end + 10 mm)
Sensing range (effective)	Distance between the emitter and receiver.
Sensing area	Area over which intrusion by people or objects can be detected by the device. The area is given by the sensing height multiplied by the sensing range.
Test input state	Function that checks operation by forcibly turning the control output (OSSD) of the receiver ON and OFF while light from the emitter is being received
PSDI	Abbreviation for Presence Sensing Device Initiation. This is a safety device that restarts the device automatically without operator intervention after the device has detected danger and temporarily halted.

## CE Marking Declaration of Conformity

---

### 7-2 CE Marking Declaration of Conformity

#### **Itemized Essentials of EU Declaration of Conformity**

**Manufacturer's Name:** Panasonic Industry Co., Ltd.

**Manufacturer's Address:** 1006, Oaza Kadoma, Kadoma-shi, Osaka 571-8506, Japan

**Product Name:** Active Opto-electronic Protective Device (Light Curtain)

**Model Number:** SF4D Series

**Trade Name:** Panasonic

**Application of Council Directives:**

- 2006/42/EC Machinery
- 2014/30/EU EMC
- 2011/65/EU RoHS

**Applicable Standards:**

- |                       |               |
|-----------------------|---------------|
| - EN ISO 13849-1:2015 | - IEC 61496-1 |
| - EN 55011            | - IEC 61496-2 |
| - EN 61000-6-2        | - IEC 61508-1 |
| - EN IEC 63000        | - IEC 61508-2 |
|                       | - IEC 61508-3 |

**Authorised Representative:**

Panasonic Marketing Europe GmbH, Panasonic Testing Centre  
Winsbergring 15, 22525 Hamburg, Germany



### 7-3 UKCA Marking Declaration of Conformity

#### **Itemized Essentials of UK Declaration of Conformity**

**Manufacturer's Name:** Panasonic Industry Co., Ltd.

**Manufacturer's Address:** 1006, Oaza Kadoma, Kadoma-shi, Osaka 571-8506, Japan

**Product Name:** Active Opto-electronic Protective Device (Light Curtain)

**Trade Name:** Panasonic

**Model Number:** SF4D Series

**Statutory Instruments:**

- 2008/1597 Machinery
- 2016/1091 EMC
- 2012/3032 RoHS

**Designated Standards:**

- |                       |               |
|-----------------------|---------------|
| - EN ISO 13849-1:2015 | - IEC 61496-1 |
| - EN 55011            | - IEC 61496-2 |
| - EN 61000-6-2        | - IEC 61508-1 |
| - EN IEC 63000        | - IEC 61508-2 |
|                       | - IEC 61508-3 |

Panasonic UK, a branch of Panasonic Marketing Europe GmbH  
Maxis 2, Western Road, Bracknell, Berkshire, RG12 1RT

Revision history	Revision date	Revision item
First edition	January 29, 2016	—
Second edition	November 30, 2016	—
Third edition	March 31, 2017	—
Fourth edition	June 30, 2017	—
Fifth edition	October 15, 2018	—
Sixth edition	February 28, 2019	—
Seventh edition	December 20, 2019	—
Eighth edition	March 27, 2020	—
Ninth edition	December 11, 2020	—
Tenth edition	August 31, 2021	Revision to reflect conformity with Korean KCs standard
Eleventh edition	November 15, 2021	Change of standards
Twelfth edition	June 1, 2022	Revision to reflect change of standards
Thirteenth edition	July 1, 2022	Update of GB standard notation
Fourteenth edition	September 1, 2023	Revised to comply with UKCA
Fifteenth edition	April 1, 2024	Company name change
Sixteenth edition	July 1, 2024	Corrected errors. Revision of applicable standards.

## **1. WARRANTIES:**

- (1) Subject to the exclusions stated in 2 (EXCLUSIONS) herein below, Panasonic Industry warrants the Products to be free of defects in material and workmanship for a period of one (1) year from the date of shipment under normal usage in environments commonly found in manufacturing industry.
- (2) Any Products found to be defective must be shipped to Panasonic Industry with all shipping costs paid by Purchaser or offered to Panasonic Industry for inspection and examination. Upon examination by Panasonic Industry, Panasonic Industry will, at its sole discretion, repair or replace at no charge, or refund the purchase price of, any Products found to be defective.

## **2. EXCLUSIONS:**

- (1) This warranty does not apply to defects resulting from any cause:
  - (i) which was due to abuse, misuse, mishandling, improper installation, improper interfacing, or improper repair by Purchaser;
  - (ii) which was due to unauthorized modification by Purchaser, in part or in whole, whether in structure, performance or specification;
  - (iii) which was not discoverable by a person with the state-of-the-art scientific and technical knowledge at the time of manufacture;
  - (iv) which was due to an operation or use by Purchaser outside of the limits of operation or environment specified by Panasonic Industry;
  - (v) which was due to normal wear and tear;
  - (vi) which was due to Force Majeure; and
  - (vii) which was due to any use or application expressly discouraged by Panasonic Industry in 4 (CAUTIONS FOR SAFE USE) hereunder.
- (2) This warranty extends only to the first purchaser for application, and is not transferable to any person or entity which purchased from such purchaser for application.

## **3. DISCLAIMERS**

- (1) Panasonic Industry's sole obligation and liability under this warranty is limited to the repair or replacement, or refund of the purchase price, of a defective Product, at Panasonic Industry's option.
- (2) THE REPAIR, REPLACEMENT, OR REFUND IS THE EXCLUSIVE REMEDY OF THE PURCHASER, AND ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, AND NON-INFRINGEMENT OF PROPRIETARY RIGHTS, ARE HEREBY EXPRESSLY DISCLAIMED. IN NO EVENT SHALL PANASONIC INDUSTRY AND ITS AFFILIATED ENTITIES BE LIABLE FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCTS, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, GENERAL TERMS AND CONDITIONS 4 OR ANY DAMAGES RESULTING FROM LOSS OF USE, BUSINESS INTERRUPTION, LOSS OF INFORMATION, LOSS OR INACCURACY OF DATA, LOSS OF PROFITS, LOSS OF SAVINGS, THE COST OF PROCUREMENT OF SUBSTITUTED GOODS, SERVICES OR TECHNOLOGIES, OR FOR ANY MATTER ARISING OUT OF OR IN CONNECTION WITH THE USE OR INABILITY TO USE THE PRODUCTS.

## **4. CAUTIONS FOR SAFE USE**

- (1) The applications shown in the catalogue are only suggestions, and it is Purchaser's sole responsibility to ascertain the fitness and suitability of the Products for any particular application, as well as to abide by Purchaser's applicable local laws and regulations, if any.
- (2) Never use the Products NOT rated or designated as "SAFETY SENSOR" in any application involving risk to life or property. When such a use is made by Purchaser, such Purchaser shall indemnify and hold harmless Panasonic Industry from any liability or damage whatsoever arising out of or in relation to such use.
- (3) In incorporating the Products to any equipment, facilities or systems, it is highly recommended to employ fail-safe designs, including but not limited to a redundant +++design, flame propagation prevention design, and malfunction prevention design so as not to cause any risk of bodily injury, fire accident, or social damage due to any failure of such equipment, facilities or systems.
- (4) The Products are each intended for use only in environments commonly found in manufacturing industry, and, unless expressly allowed in the catalogue, specification or otherwise, shall not be used in, or incorporated into, any equipment, facilities or systems, such as those:
  - (a) which are used for the protection of human life or body parts;
  - (b) which are used outdoors or in environments subject to any likelihood of chemical contamination or electromagnetic influence;
  - (c) which are likely to be used beyond the limits of operations or environments specified by Panasonic Industry in the catalogue or otherwise;
  - (d) which may cause risk to life or property, such as nuclear energy control equipment, transportation equipment (whether on rail or land, or in air or at sea), and medical equipment;
  - (e) which are operated continuously each day for 24 hours; and
  - (f) which otherwise require a high level of safety performance similar to that required in those equipment, facilities or systems as listed in (a) through (e) above.

## **5. EXPORT CONTROL LAWS**

In some jurisdictions, the Products may be subject to local export laws and regulations. If any diversion or re-export is to be made, Purchaser is advised to abide by such local export laws and regulations, if any, at its own responsibility.

---

## Panasonic Industry Co., Ltd.

1006, Oaza Kadoma, Kadoma-shi, Osaka 571-8506, Japan  
<https://industry.panasonic.com/>

Please visit our website for inquiries and about our sales network.

© Panasonic Industry Co., Ltd. 2016-2024

July, 2024

WUME-SF4D-16