

**Head Separated Digital Pressure Sensor Controller**  
**DPC-100 Series**


MJE-DPC100 No.0030-55V

Thank you very much for purchasing Panasonic products. Read this Instruction Manual carefully and thoroughly for the correct and optimum use of this product. Kindly keep this manual in a convenient place for quick reference.

**WARNING**

- Never use this product in a device for personnel protection.
- In case of using devices for personnel protection, use products which meet laws and standards, such as OSHA, ANSI or IEC etc., for personnel protection applicable in each region or country.
- A product intended for use in Japan conforms to the Japanese Measurement Act. Do not use a product intended for use overseas in Japan.


**1 PART DESCRIPTION**

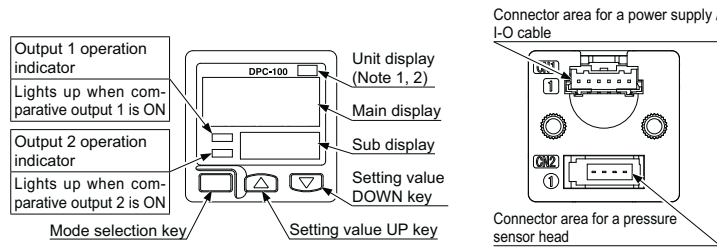

Notes: 1) Attach the unit switch plate corresponds to the set pressure unit.  
 2) The product for use inside Japan can be set only to "MPa" or "kPa."

**2 MOUNTING**

- The sensor mounting bracket **MS-DP1-6** is available as an option. When mounting the sensor onto the sensor mounting bracket, etc., the tightening torque should be 0.5N·m or less.

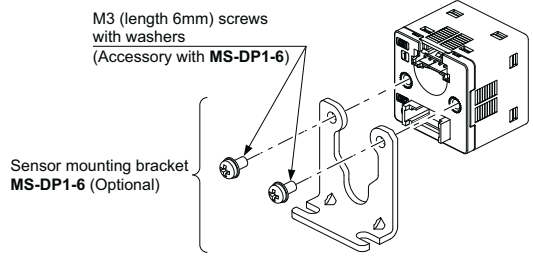


- The panel mounting bracket **MS-DP1-2** (optional), as well as the front cover **MS-DP1-3** (optional) are also available.
- For mounting of the panel mounting bracket, refer to the Instruction Manual enclosed with **MS-DP1-2**.

**3 CONNECTION OF PRESSURE SENSOR HEAD**

- This product can automatically recognize the connected pressure sensor head.
- When replacing the pressure sensor head, the threshold value may be changed. Therefore, confirm the threshold value.

**Connection method**

- Insert the pressure sensor head cable into the product's connector area for the pressure sensor head as shown in the right figure.

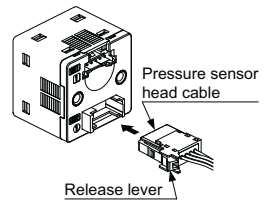


**Disconnection method**

- Pressing the release lever of the pressure sensor head cable, pull out the connector.

**Connector area of the pressure sensor head cable**  
 e-con: 1473562-4  
 [Tyco Electronics AMP G.K.]

Note: Do not pull by holding the cable without pressing the release lever, as this can cause cable break or connector break.


**<Connection connector pin arrangement>**

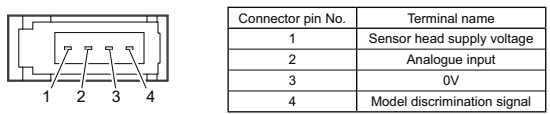

**4 WIRING**

**Connection method**

- Insert the cable with connector **CN-66A-C** into the product's connector area for a power supply / I-O cable as shown in the right figure.

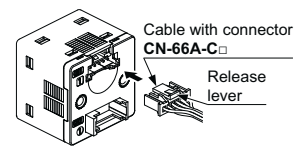


**Disconnection method**

- Pressing the release lever of the cable with connector, pull out the connector.

**<Connector area of the cable with connector>**  
 Housing: PAP-06V-S  
 [JST Mfg. Co., Ltd.]

Note: Do not pull by holding the cable without pressing the release lever, as this can cause cable break or connector break.


**<Connection connector pin arrangement>**

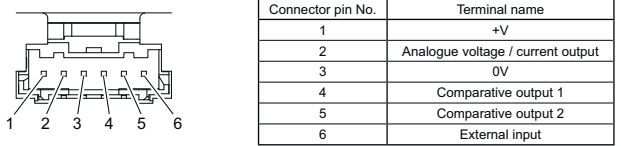



**5 I/O CIRCUIT DIAGRAMS**

When using the analogue voltage output, take care to the input impedance of the connected device. Furthermore, note that if the cable is extended, the cable resistance will cause the voltage to drop.

**NPN output type**

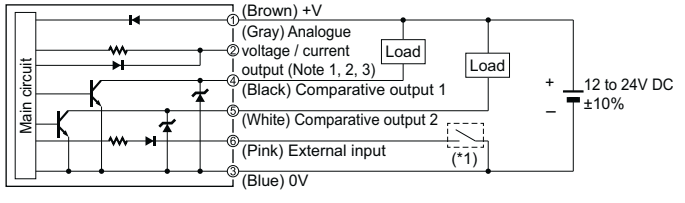

**PNP output type**

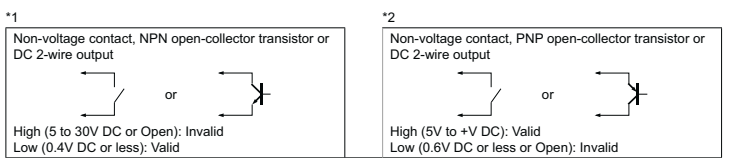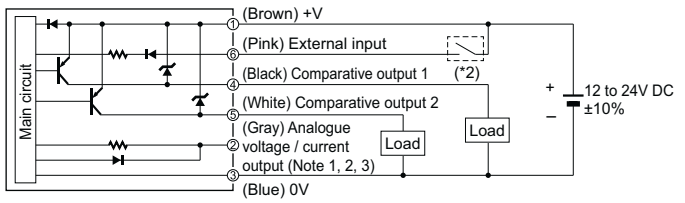


Notes: 1) When the analogue current is output, the output load resistance should be 250Ω max.  
 2) Take care that when the analogue current is output, 5V or more voltage generates.  
 3) When using the analogue voltage output, be careful to the input impedance of the connected device. Furthermore, note that if the cable is extended, the cable resistance will cause the voltage to drop.

**6 OUTPUT MODE AND OUTPUT OPERATION**

- The EASY mode, hysteresis mode or window comparator mode can be selected as the output mode for comparative output 1 and comparative output 2. Refer to **<Comparative output 1 / 2 output mode setting>** in **"8 MENU SETTING MODE"** for details.

**EASY mode**


- ON / OFF of the comparative output is controlled in this mode.

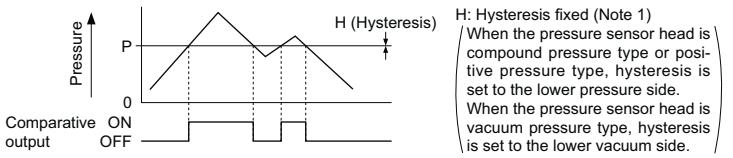

Notes: 1) Hysteresis can be fixed in 8 steps. Refer to **<Hysteresis fixed value selection>** in **"8 PRO MODE"** for setting.  
 2) "P-1" is displayed for comparative output 1 and "P-2" for comparative output 2 on the sub-display.

## Hysteresis mode


- The comparative output ON / OFF state can be controlled with randomly set hysteresis in this mode.

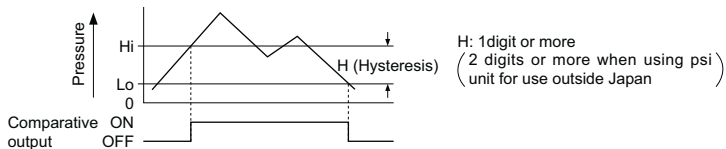

- Notes: 1) "Hi - I" or "Lo - I" is displayed for comparative output 1 and "Hi - 2" or "Lo - 2" for comparative output 2 on the sub-display.  
 2) When the pressure sensor head is compound pressure type or positive pressure type, high pressure indicates "Hi" and low pressure indicates "Lo", while in case of vacuum pressure type, high vacuum indicates "Hi" and low vacuum indicates "Lo".

## Window comparator mode

- In this mode, the ON or OFF state of the comparative output is controlled with a pressure in the set range.

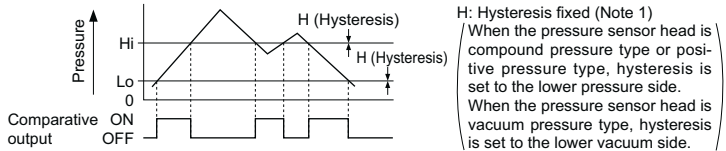

- Notes: 1) Hysteresis can be fixed in 8 steps. Refer to <Hysteresis fixed value selection> in "PRO MODE" for setting.  
 2) "Hi - I" or "Lo - I" is displayed for comparative output 1 and "Hi - 2" or "Lo - 2" for comparative output 2 on the sub-display.  
 3) When the pressure sensor head is compound pressure type or positive pressure type, high pressure indicates "Hi" and low pressure indicates "Lo", while in case of vacuum pressure type, high vacuum indicates "Hi" and low vacuum indicates "Lo".

## 7 RUN MODE

### Setting the threshold value

- Refer to <Comparative output 1 / 2 output mode setting> in "MENU SETTING MODE" for setting conditions.
- The Sub display conducts the threshold value. Main display does not changed.

Display is changed by pressing down.

EASY mode (Comparative output 2 is OFF)  
 Comparative output 1: P-1  
 Comparative output 2: P-2

Hysteresis mode / Window comparator mode - Lo side  
 Comparative output 1: Lo-1  
 Comparative output 2: Lo-2

Hysteresis mode / Window comparator mode - Hi side  
 Comparative output 1: Hi-1  
 Comparative output 2: Hi-2

Press (▲) When the pressure sensor head is compound pressure type or positive pressure type The threshold value increases to the higher pressure side. When the pressure sensor head is vacuum pressure type The threshold value decreases to the higher vacuum side.  
 Press (▼) When the pressure sensor head is compound pressure type or positive pressure type The threshold value decreases to the lower pressure side by pressing set. When the pressure sensor head is vacuum pressure type The threshold value increases to the lower vacuum side.

Blinks alternately (Note 2) (Note 3)

- Notes: 1) If the set pressure range is exceeded, "UP" (exceeds the upper limit) or "DOWN" (exceeds the lower limit) will appear on the sub display. "UP" will also appear if the Hi side threshold value exceeds the Lo side threshold value when setting the "hysteresis mode / window comparator mode" threshold value.  
 2) Auto-reference value and remote zero-adjustment value are displayed. For details, refer to "AUTO-REFERENCE FUNCTION" and "REMOTE ZERO-ADJUSTMENT FUNCTION."  
 3) In the dash line box is not displayed when not setting "RREF" or "ZERO" in external input switch. For the setting method, refer to <External input selection> in "MENU SETTING MODE."

### Zero-adjustment function

- The zero-adjustment function forcibly sets the pressure value to "zero" when the pressure port is opened.




Note: Even if the zero-adjustment is conducted, the analogue voltage / current output is not influenced.

### Key lock function

- The key lock function prevents key operations so that the conditions set in each setting mode are not inadvertently changed.

#### <Key lock set>

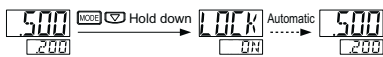

#### <Key lock released>



### Peak / bottom hold function

- The peak / bottom hold functions display the peak value and bottom value of the fluctuating pressure.
- The peak value is displayed on the main display and the bottom value is displayed on the sub-display.
- When the pressure sensor head is compound pressure type or positive pressure type, the higher pressure side indicates the peak value, while the lower pressure side indicates the bottom value. When the pressure sensor head is vacuum pressure type, the higher vacuum side indicates the peak value, while the lower vacuum side indicates the bottom value.

#### <Peak / bottom hold set>



#### <Peak / bottom hold released>



## 8 MENU SETTING MODE

- The mode will change to RUN mode when the mode selection key is held down during this setting process. In doing so, changed items before holding down the mode selection key have been set.

RUN mode  
 Press for 2 sec.

<Comparative output 1 output mode setting>  
 EASY mode (Lo side) ↔ HYS (Hysteresis mode) ↔ WCOMP (Window comparator mode)

<Comparative output 2 output mode setting>  
 OFF mode (Lo side) ↔ EASY mode (Lo side) ↔ HYS (Hysteresis mode) ↔ WCOMP (Window comparator mode)

<N.O. / N.C. selection> (When the comparative output 2 output mode setting is set to OFF)  
 N.O. ↔ N.C.

<N.O. / N.C. selection> (When the comparative output 2 output mode setting is set to other than OFF)  
 Output 1: N.O. / Output 2: N.O. ↔ Output 1: N.C. / Output 2: N.C. ↔ Output 1: N.O. / Output 2: N.C. ↔ Output 1: N.C. / Output 2: N.O.

<Analogue voltage / current output selection>  
 Analogue voltage output mode (Vout) ↔ Analogue current output mode (Iout)

<External input selection>  
 OFF ↔ Auto-reference input (RREF) ↔ Remote zero-adjustment input (ZERO)

<Response time setting>  
 1ms ↔ 2.5ms ↔ 5,000ms ↔ 0.5ms

<Display color of the main display selection>  
 Red when ON / Green when OFF (R-ON) ↔ Green when ON / Red when OFF (G-ON) ↔ Always red (RED) ↔ Always green (GREEN)

<Unit selection> (Note 1)  
 MPA (Note 2) ↔ kPa ↔ kgf/cm² ↔ bar ↔ psi ↔ inchHg (Note 3) ↔ mmHg (Note 3)


RUN mode

- Notes: 1) When positive pressure type of the pressure sensor head is connected to the controller for use inside Japan, you can only set to "MPa" or "kPa." When compound pressure type or vacuum pressure type is connected, the unit selection is not displayed.  
 2) When compound pressure type or vacuum pressure type of the pressure sensor head is connected to the controller for use outside Japan, "MPa" is not displayed.  
 3) When positive pressure type of the pressure sensor head is connected to the controller for use outside Japan, this is not displayed.

Setting item	Factory setting	Description
Comparative output 1 output mode setting	EASY	Sets the output operation of comparative output 1.
Comparative output 2 output mode setting	OFF	Sets the output operation of comparative output 2.
N.O. / N.C. selection	No	Normal open (N.O.) or normal close (N.C.) can be selected. The initial state when the comparative output 2 output mode setting is set to other than OFF shows "No".
Analogue voltage / current output selection	Vout	Selects analogue voltage output or analogue current output.
External input selection	OFF	Selects auto-reference input, or remote zero-adjustment input.
Response time setting	1	Sets the response time. The response time can be selected from 0.5ms, 1ms, 2.5ms, 5ms, 10ms, 25ms, 50ms, 100ms, 250ms, 500ms, 1,000ms or 5,000ms.
Displayed color of the main display selection	R-ON	Displayed color of the main indicator can be changed.
Unit selection	MPa	Pressure unit can be changed. When compound pressure type or vacuum type of the pressure sensor head is connected to the controller for use outside Japan, the initial state shows "kPa."

## 9 PRO MODE

- The mode will change to RUN mode when the mode selection key is held down during this setting process. However, changed items before holding down the mode selection key have been set.

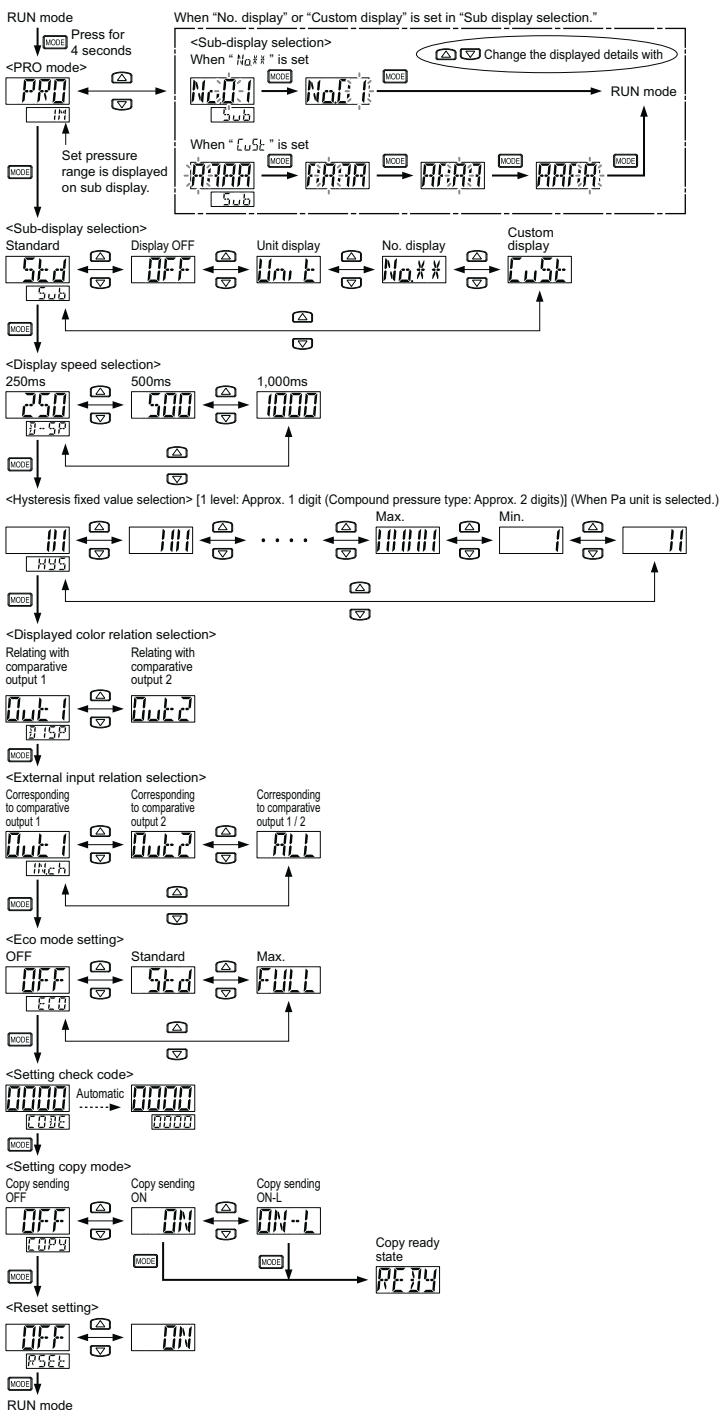

Setting item	Factory setting	Description
Sub-display selection	Std	Changes the indication of the sub-display. * OFF : Displays nothing. * Unit : Presently selected pressure unit is displayed. * No. x x x : Desired No. can be shown. * Cust : Desired numbers, alphabets (some of them cannot be displayed) and signs can be shown.
Display speed selection	250	Changes the speed of the displayed pressure value on the main display.
Hysteresis fixed value selection	01	Sets hysteresis of the EASY mode and the window comparator mode. (8 steps)
Displayed color relation selection	Out 1	The setting contents set at the displayed color setting in Menu setting mode can be related with either comparative output 1 or comparative output 2.
External input relation selection	Out 1	The setting contents set at the external input selection in Menu setting mode can be shifted to correspond to either comparative output 1, 2 or 1 / 2.
Eco mode setting	OFF	Current consumption can be lowered. * OFF : Normal operation (ECO mode is off.) * Std : If any key operation is not carried out for approx. 5 sec. in RUN mode, the display becomes dark. * Full : If any key operation is not carried out for approx. 5 sec. in RUN mode, the display is turned off. Press any key to temporarily show the normal indication.
Setting check code	0000	Current setting contents can be checked. For codes, refer to "Code table".
Setting copy mode	OFF	The setting of the master side sensor can be copied to the slave side sensors. For details, refer to "SETTING COPY FUNCTION." * ON : The setting contents are copied. * ON-L : The setting contents are copied, and the slave side sensor goes into key-lock state.
Reset setting	OFF	Returns to default settings (factory settings). By pressing down mode key when "ON" mode, becomes default settings (factory settings).

## Code table

### • Main display (1st digit from left)

Code	1st digit		2nd digit		3rd digit		4th digit	
	Comparative output 1 output mode	N.O. / N.C. selection	Comparative output 2 output mode	N.O. / N.C. selection	Analogue output	Threshold display	External input	
0	EASY	N.O.	OFF	-	Analogue voltage output	Threshold value 1	OFF	-
1		N.C.	EASY	N.O.		Threshold value 2	Auto-reference	Comparative output 1
2	N.O.	N.C.		Threshold value 3		Comparative output 2		
3	N.C.	N.O.	Threshold value 4	Comparative output 1 / 2				
4	Window comparator	N.O.	Hysteresis	N.C.	Analogue current output	Threshold value 1		Remote zero-adjustment
5		N.C.				N.O.	Threshold value 2	Comparative output 2
6	-	-	N.C.	Threshold value 3		Comparative output 1 / 2		
7	-	-	-	-		Threshold value 4	-	-

### • Sub-display (5th digit from left)

Code	5th digit		6th digit	7th digit	8th digit	
	Displayed color of the main display	Displayed color relation	Response time	Unit selection (Note)	Display speed	Eco mode
0	Red when ON	Comparative output 1	0.5ms	MPa	250ms	OFF
1		Comparative output 2	1ms	kPa		Std
2	Green when ON	Comparative output 1	2.5ms	kgf/cm <sup>2</sup>	500ms	Full
3		Comparative output 2	5ms	bar		OFF
4	Always red	Comparative output 1	10ms	psi	1,000ms	Std
5		Comparative output 2	25ms	mmHg		Full
6	Always green	Comparative output 1	50ms	inchHg	-	OFF
7		Comparative output 2	100ms	-		Std
8	-	-	250ms	-	-	Full
9	-	-	500ms	-	-	-
A	-	-	1,000ms	-	-	-
B	-	-	5,000ms	-	-	-

Note: When positive pressure type of the pressure sensor head is connected to the controller for use inside Japan, "0" (MPa) or "1" (kPa) is displayed. When compound pressure type or vacuum pressure type is connected, only "1" (kPa) is displayed.


## 10 SETTING COPY FUNCTION

- This can copy the settings of the master side sensor to the slave side sensor.

- Be sure to use the setting copy function between the identical models. This function cannot be used between different models.
- Only one sensor can be connected on slave side with a master side sensor for the setting copy function.
- Do not use the setting copy function other than the following wiring, as pulsed output generates when turning the power ON after setting the master side sensor to the copy ready state.

### Setting procedure

- Set the setting copy function of the master side sensor to "Copy sending ON" or "Copy sending ON-L" with the pressure sensor head connected, and then press the mode selection key so that the sensor is in copy ready state. For details, refer to "Setting copy mode" in "9 PRO MODE."
- Turn OFF the master side sensor.
- Remove the pressure sensor head and connect the master side sensor with the slave side sensor as shown below.

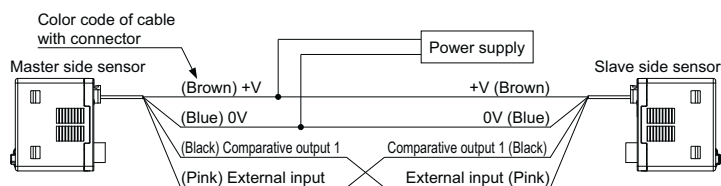

- Turn ON the master side sensor and the slave side sensor at the same time. (Note)
- Set contents (16-bit coded) are shown in orange on the main display of the master side sensor and the copying starts.
- The same code explained above is shown in green on the the main display of the slave side sensor, and "00k" is shown on the sub-display (When copying is complete.)
- Turn OFF the power of the master side sensor and the slave side sensor and disconnect the wire.

\* If copying the setting to another sensor repeatedly, follow steps 3 to 7.


Note: Take care that if the power is not turned on at the same time, the setting contents may not be copied.

### To cancel the setting copy mode of master side sensor

- Whilst the slave side sensor is disconnected, turn on the power of the master side sensor.
- Press the mode selection key for approx. 2 seconds.

## 11 AUTO-REFERENCE FUNCTION

- The auto-reference function corrects the set value using the detected pressure value during auto-reference input as the reference pressure.
- Using the detected pressure value at auto-reference input P(a) as a reference, the set value 1' is automatically corrected to "set value 1 + P(a)".

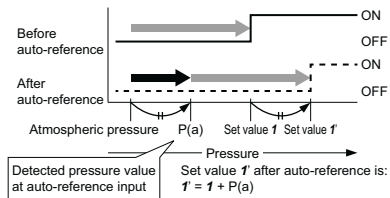


### Settable range and set pressure range after correction

- The set pressure range is wider than the rating pressure range so that the auto-reference function can be handled.


If the corrected set value exceeds the set pressure range when auto-reference input is carried out, the set value will be automatically corrected to within the set pressure range. Thus, take care not to exceed the set pressure range.

### Operation chart

During normal operation (each comparative output set to N.O.)

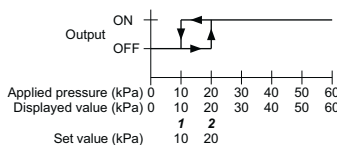

During auto-reference input (each comparative output set to N.O.)

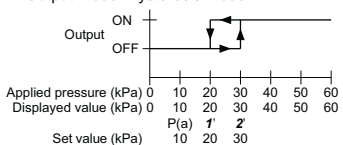

Note: The set values shift in the same manner during the EASY mode or the window comparator mode.

- The detected pressure value at auto-reference input becomes "zero" when the setting of the external input selection function is changed or the power is turned ON again.
- The auto-reference input value can be checked when setting the threshold value in RUN mode. Refer to the threshold value setting in "7 RUN MODE" for details.


## 12 REMOTE ZERO-ADJUSTMENT FUNCTION

- The remote zero-adjustment function forcibly sets the pressure value to "zero" when the external signal is inputted.


The set value is not corrected when remote zero-adjustment is input. Make sure that the pressure and set value during remote zero-adjustment do not exceed the set pressure range.

### Operation chart

During normal operation (each comparative output set to N.O.)

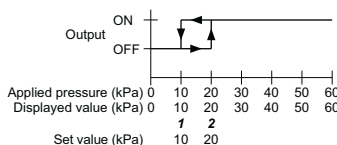

During remote zero-adjustment input (each comparative output set to N.O.)

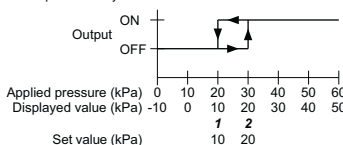

Notes: 1) The setting values shift in the same manner during the EASY mode or the window comparator mode.  
2) The remote zero-adjustment function is applicable only to the comparative output set at the external input relation selection. Unset comparative output operates based on the atmospheric pressure.

- The remote zero-adjustment value is cleared when the setting of the external input selection function is changed or the power is turned ON again, and normal operation based on the atmospheric pressure is resumed.
- The remote zero-adjustment value can be confirmed when setting the threshold value in RUN mode. Refer to the threshold value setting in "7 RUN MODE".

## 13 ERROR INDICATION

Error message	Cause	Corrective action
E-0	<ul style="list-style-type: none"> <li>The controller and the pressure sensor head are not correctly connected.</li> <li>The pressure sensor head is damaged.</li> </ul>	<ul style="list-style-type: none"> <li>Connect the controller and the pressure sensor head correctly.</li> <li>Replace the pressure sensor head.</li> </ul>
E-1	The load is short-circuited causing an overcurrent to flow.	Turn the power OFF and check the load.
E-3	Pressure is applied during zero-point adjustment.	Applied pressure at the pressure port should be brought to atmospheric pressure and zero-point adjustment should be done again.
E-4	External input is carried out outside the rated pressure range.	Applied pressure range should be brought within the rated pressure range.
E-5	Communication error (Disconnection, faulty connection, etc.)	Check the wiring when using the copy function.
E-6	Communication error (Incorrect model.)	Make sure that the system is configured of the same models when using the copy function.
✕ ✕ ✕	The applied pressure exceeds the upper limit of the display pressure range.	Applied pressure range should be brought within the rated pressure range.
.. ✕ ✕ ✕	The applied pressure exceeds the lower limit (reverse pressure) of the display pressure range.	Applied pressure range should be brought within the rated pressure range.

When other error message is displayed, contact us.

## 14 SPECIFICATIONS

Type	NPN output type		PNP output type	
	For use inside Japan	For use outside Japan	For use inside Japan	For use outside Japan
Model No. (Note 1)	DPC-101Z	DPC-101	DPC-101Z-P	DPC-101-P
Applicable pressure sensor head	Compound pressure type DPH-101, Positive pressure type DPH-102, Vacuum pressure type DPH-103			
Rated pressure range	0 to -101.0kPa / 0 to 1.000MPa / -100.0 to 100.0kPa			
Set pressure range	101.3 to -101.3kPa / -1.050 to 1.050MPa / -199.9 to 199.9kPa			
Supply voltage	12 to 24V DC $\pm 10\%$ Ripple P-P 10% or less			
Power consumption (Note 2)	Normal operation: 960mW or less (current consumption 40mA or less at 24V supply voltage) ECO mode (STD): 720mW or less (current consumption 30mA or less at 24V supply voltage) ECO mode (FULL): 600mW or less (current consumption 25mA or less at 24V supply voltage)			
Sensor head supply voltage	Same as supply voltage			
Input	Pressure sensor head input	Input voltage range: 1 to 5V DC (within the rated pressure range)		
	External input	<ul style="list-style-type: none"> <li>ON voltage: 0.4V DC or less</li> <li>OFF voltage: 5 to 30V DC or open</li> <li>Input impedance: Approx. 10k<math>\Omega</math></li> <li>Input time: 1ms or more</li> </ul>	<ul style="list-style-type: none"> <li>ON voltage: 5V to +V DC</li> <li>OFF voltage: 0.6V DC or less or open</li> <li>Input impedance: Approx. 10k<math>\Omega</math></li> <li>Input time: 1ms or more</li> </ul>	
Comparative output (Comparative output 1 / 2)	NPN open-collector transistor		PNP open-collector transistor	
	<ul style="list-style-type: none"> <li>Maximum sink current: 100mA</li> <li>Applied voltage: 30V DC or less (between comparative output and 0V)</li> <li>Residual voltage: 1V or less (at 100mA sink current)</li> </ul>		<ul style="list-style-type: none"> <li>Maximum source current: 100mA</li> <li>Applied voltage: 30V DC or less (between comparative output and +V)</li> <li>Residual voltage: 1V or less (at 100mA source current)</li> </ul>	
Output operation	Selectable either N.O. or N.C., with key operation			
Hysteresis	Min. 1 digit (however, 2 digits when using psi units for use outside Japan)			
Repeatability	With positive / vacuum pressure type connected: Within $\pm 0.2\%$ F.S. digit ( $\pm 2$ digits) With compound pressure type connected: Within $\pm 0.2\%$ F.S. digits ( $\pm 4$ digits)			
Response time	0.5ms, 1ms, 2.5ms, 5ms, 10ms, 25ms, 50ms, 100ms, 250ms, 500ms, 1,000ms or 5,000ms selectable with key operations			
Analogue output	<Analogue voltage output>		<Analogue current output>	
	<ul style="list-style-type: none"> <li>Output voltage: 1 to 5V</li> <li>Zero point: Within 1V <math>\pm 0.5\%</math> F.S. (positive / vacuum pressure) / Within 3V <math>\pm 0.5\%</math> F.S. (compound pressure)</li> <li>Span: Within 4V <math>\pm 0.5\%</math> F.S.</li> <li>Linearity: Within <math>\pm 0.1\%</math> F.S.</li> <li>Output impedance: Approx. 1k<math>\Omega</math></li> </ul>		<ul style="list-style-type: none"> <li>Output current: 4 to 20mA</li> <li>Zero point: Within 4mA <math>\pm 1\%</math> F.S. (positive / vacuum pressure) / Within 12mA <math>\pm 1.5\%</math> F.S. (compound pressure)</li> <li>Span: Within 16mA <math>\pm 1.5\%</math> F.S.</li> <li>Linearity: Within <math>\pm 0.1\%</math> F.S.</li> <li>Load resistance: 250<math>\Omega</math> (MAX.)</li> </ul>	
Overvoltage category	I			
Ambient temperature	-10 to +50°C (No dew condensation or icing allowed), Storage: -10 to +60°C			
Ambient humidity	35 to 85% RH, Storage: 35 to 85% RH			
Pollution degree	2			
Temperature characteristics	Within $\pm 0.5\%$ F.S. (at +20°C reference)			
Material	Enclosure: PBT (with glass fiber), LCD display: Acrylic Mounting screw section: Brass (nickel-plated), Key part: Silicon rubber			
Weight	Approx. 25g (Main body only)			
Accessories	CN-66A-C2 (Cable with a connector, 2m long) (optional for J type): 1 pc. Unit switching label: 1 pc.			

Notes: 1) The cable with connector is not enclosed with models that have "-J" at the end of the model names.  
2) Excluding the current consumption of analogue current output and applying pressure sensor head.  
3) The values specified above are applied only to the controller. Regarding the specifications for the applied pressure sensor head, refer to the instruction manual enclosed with the pressure sensor head.

## 15 CAUTIONS

- This product has been developed / produced for industrial use only.
- This product is suitable for indoor use only.
- The operating altitude of this product is 2000m or less.
- Make sure that the power supply is OFF while wiring.
- Take care that if a voltage exceeding the rated range is applied, or if an AC power supply is directly connected, the product may get burnt or damaged.
- Take care that wrong wiring will damage the sensor.
- If power is supplied from a commercial switching regulator, ensure that the frame ground (F.G.) terminal of the power supply is connected to an actual ground.
- In case noise generating equipment (switching regulator, inverter motor, etc.) is used in the vicinity of this sensor, connect the frame ground (F.G.) terminal of the equipment to an actual ground.
- Do not use during the initial transient time (0.5 sec.) after the power supply is switched on.
- Do not run the wires together with high-voltage lines or power lines or put them in the same raceway. This can cause malfunction due to induction.
- The specification may not be satisfied in a strong magnetic field.
- Extension up to total 100m (emitter and receiver each for thru-beam type), or less, is possible with 0.3mm<sup>2</sup>, or more of conductor cross-section area cable. However, to reduce noise, make the wiring as short as possible. If using this product as complaint model with CE mark, the power supply line must be 30m or less.
- Make sure that stress by forcible bend or pulling is not applied directly to the sensor cable joint.
- Avoid dust, dirt, and steam.
- Take care that the product does not come in contact with water, oil, grease, or organic solvents, such as, thinner, etc.
- Do not operate the keys with pointed or sharp objects.
- Do not use this sensor in places having excessive vapor, dust, etc., or where it may come in contact with corrosive gas, etc.
- Never disassemble or modify the sensor.
- This product use EEPROM. The EEPROM has lifetime and cannot set more than 1 million times of setting.

## 16 INTENDED PRODUCTS FOR CE MARKING

- The models listed under "14 SPECIFICATIONS" come with CE Marking. As for all other models, please contact our office.

### Contact information for CE

<Until June 30 ,2013>

Panasonic Industrial Devices Sales Central Europe AG

Rudolf-Diesel-Ring 2, D-83607 Holzkirchen, Germany

<From July 1 ,2013>

Panasonic Marketing Europe GmbH Panasonic Testing Center

Winsbergring 15, 22525 Hamburg, Germany

## Panasonic Industrial Devices SUNX Co., Ltd.

http://panasonic.net/id/pidsx/global

Overseas Sales Division (Head Office)

2431-1 Ushiyama-cho, Kasugai-shi, Aichi, 486-0901, Japan

Phone: +81-568-33-7861 FAX: +81-568-33-8591

About our sale network, please visit our website.

PRINTED IN JAPAN

© Panasonic Industrial Devices SUNX Co., Ltd. 2012